C612

14630

Y18
Speaker, right front
(18808)

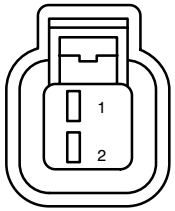

F02069

Pin	Circuit	Circuit function
1	804 (WH/LG)	Speaker, right front (18808) +
2	811 (DG/OG)	Speaker, right front (18808) –

* with remote keyless entry

C629

14630

N627
Front passenger
window/door lock
switch

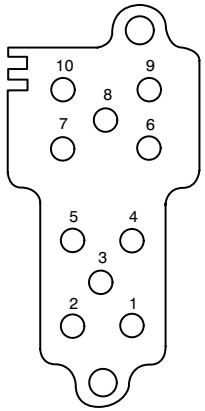

F10131

Pin	Circuit	Circuit function
1	333 (YE/RD)	Window motor, feed, Down
2	314 (TN/LB)	Window switch, feed, right front, Up
3	170 (RD/LB)	Battery voltage, hot in Run and Accessory only
4	313 (WH/YE)	Window switch, feed, right front, Down
5	334 (RD/YE)	Window motor, feed, Down
6	–	not used
	*57 (BK)	Ground
7	120 (PK/LG)	Door lock, feed
	*124 (BN)	Door unlock, feed
8	54 (LG/YE)	Voltage supplied at all times (overload protected)
	*517 (BK/WH)	Voltage supplied at all times (overload protected)
9	119 (PK/YE)	Door lock, feed
	*123 (RD)	Key pad button 9/0, output
10	–	not used
	*57 (BK)	Ground