Seat adjust switch, with side air bags

Schematic

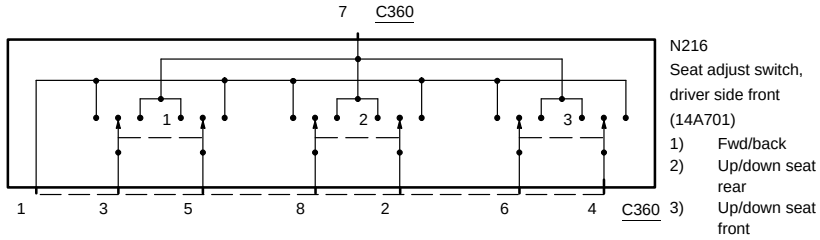

N216
Seat adjust switch, driver side front
(14A701)
1) Fwd/back
2) Up/down seat rear
3) Up/down seat front

Terminals

C360

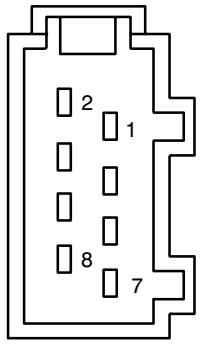

Component testing procedure

Circuit to test	Connect self–powered test light or ohm-meter to terminals	Move switch to these positions	A good switch will indicate
Forward/Rearward circuit	7 and 3 5 and 1	Forward	Closed circuit
		Rearward	Open circuit
	7 and 5 3 and 1	Forward	Open circuit
		Rearward	Closed circuit
Front up/down circuit	7 and 8 2 and 1	Up	Closed circuit
		Down	Open circuit
	7 and 2 8 and 1	Up	Closed circuit
		Down	Open circuit
Rear up/down circuit	7 and 6 4 and 1	Up	Closed circuit
		Down	Open circuit
	7 and 4 6 and 1	Up	Closed circuit
		Down	Open circuit