C360

57608

N216
Seat adjust switch, driver side front

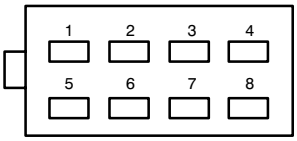

F08086

Pin	Circuit	Circuit Function
1	E (BK)	Ground
2	F (BK)	Front seat forward/rearward motor
3	G (BK)	Front seat forward/rearward motor
4	H (BK)	Voltage supplied at all times (overload protected)
5	D (BK)	Front seat backrest motor
6	C (BK)	Front seat backrest motor
7	B (BK)	Front seat front height motor
8	A (BK)	Front seat rear height motor

C367

14405

A155
Side air bag module, left

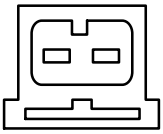

F02299

Pin	Circuit	Circuit Function
1	1258 (BN/LB)	Air bag - driver side impact - to module - return
2	1257 (WH/LB)	Air bag - driver side impact - to module - feed

C377

14405

Y202
EVAP canister vent control solenoid

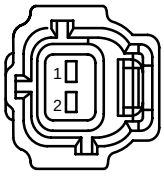

F02103

Pin	Circuit	Circuit Function
1	101 (GY/YE)	Voltage supplied in Start and Run (overload protected)
2	91 (VT/WH)	Canister vent

C378

14B110

Y236
Differential lock solenoid

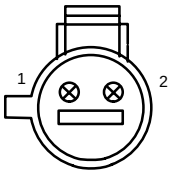

F02113

Pin	Circuit	Circuit Function
1	57 (BK)	Ground
2	780 (DB)	Four–wheel drive control module, to, Four–wheel drive switch

C389

14405

A116
Seat belt tensioner, passenger seat

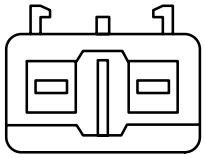

F02297

Pin	Circuit	Circuit Function
1	1082 (YE/BK)	Passenger safety belt retractor pretensioner, return
2	1081 (YE/RD)	Passenger safety belt retractor pretensioner, feed

C392

14405

N316
Inertia Fuel Shutoff (IFS) switch



F03072

Pin	Circuit	Circuit Function
1	238 (DG/YE)	Fuel pump relay, switched power, output
2	787 (PK/BK)	Fuel pump, Power
3	-	not used

C402a

18C673

R19
Rear window defrost grid



F01029

Pin	Circuit	Circuit Function
1	186 (BN/LB)	Rear window defrost relay, switched power