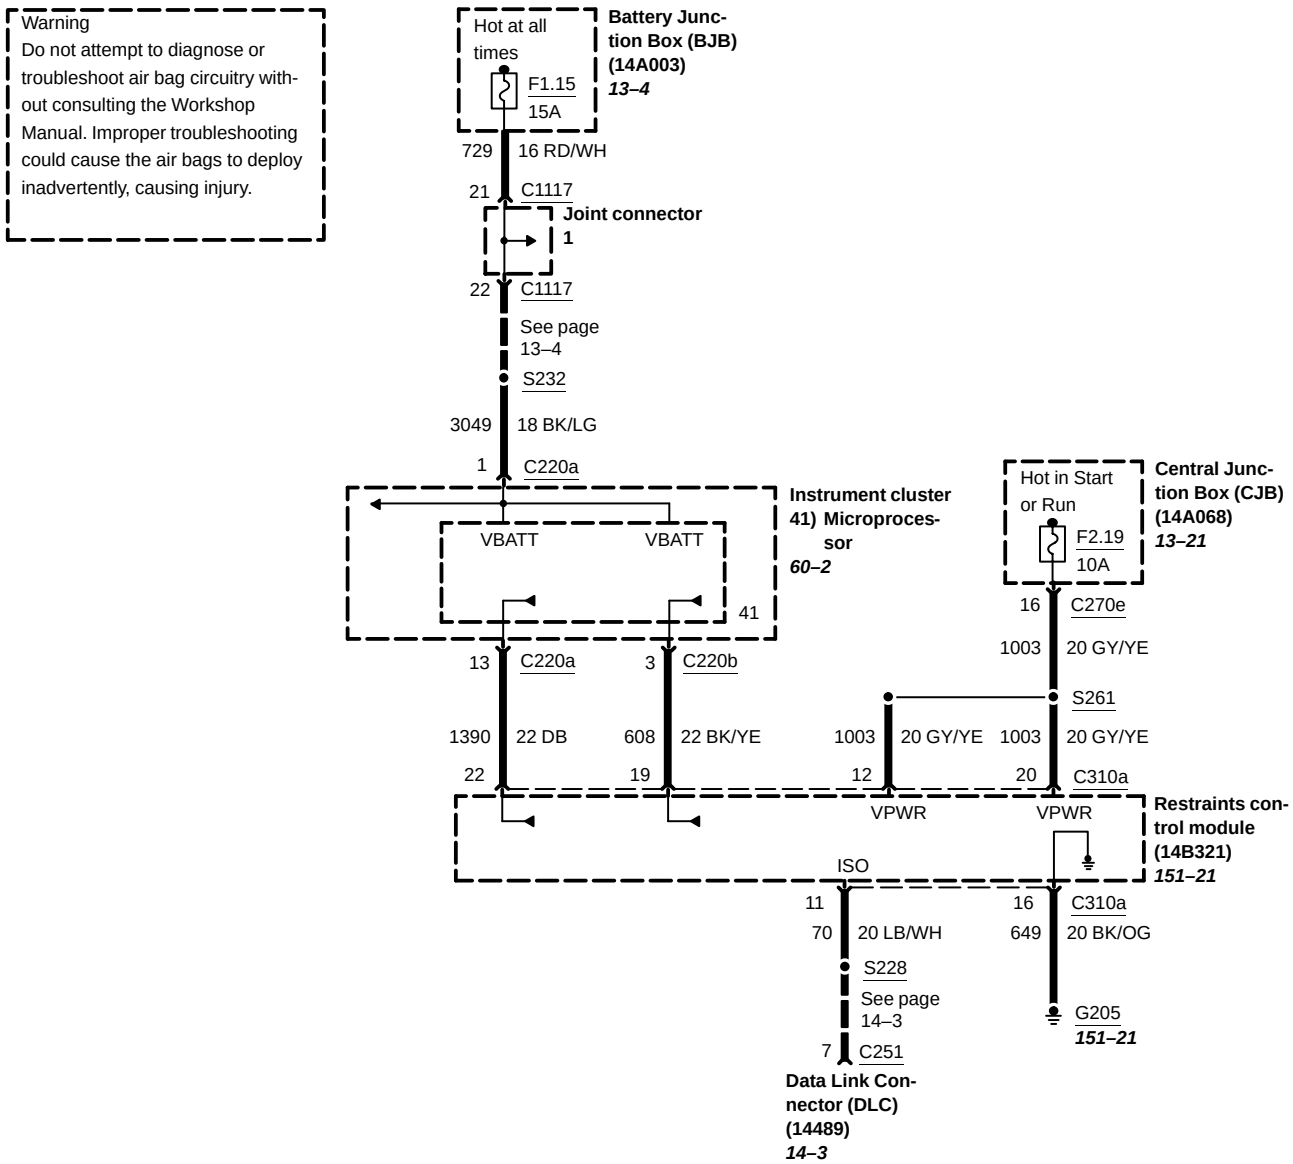
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
Hot at all times
F1.15
15A
Battery Junction Box (BJB) (14A003)
13–4
729
16 RD/WH
21
C1117
Joint connector 1
22
C1117
See page 13–4
S232
3049
18 BK/LG
1
C220a
Instrument cluster 41) Microprocessor
60–2
VBATT
VBATT
41
13
C220a
3
C220b
1390
22 DB
608
22 BK/YE
22
19
Hot in Start or Run
F2.19
10A
Central Junction Box (CJB) (14A068)
13–21
16
C270e
1003
20 GY/YE
S261
1003
20 GY/YE
1003
20 GY/YE
12
20
C310a
VPWR
VPWR
Restraints control module (14B321)
151–21
ISO
11
70
20 LB/WH
S228
See page 14–3
7
C251
Data Link Connector (DLC) (14489)
14–3
16
C310a
649
20 BK/OG
G205
151–21