C106

12B637/9D930

B225
Fuel rail pressure transducer sensor

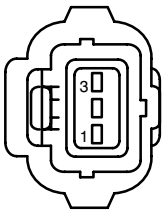

F03098

Pin	Circuit	Circuit Function
1	7-RJ11 (YE/GN)	Voltage D.C. supplied at all times (sensor)
2	9-RJ11 (BN/GN)	Sensor signal return (reference/ground)
3	8-RJ11 (WH/GN)	Sensor signal

C107

12B637/14B102

B135
Cylinder–head temperature sensor

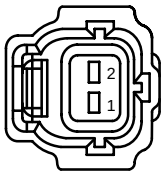

F02093

Pin	Circuit	Circuit Function
1	8-RJ33 (WH/VT)	Sensor signal
2	9-RJ33 (BN/WH)	Sensor signal return (reference/ground)

C108

12B637

B106
Knock sensor 2

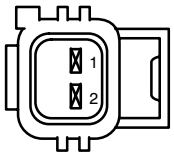

F02107

Pin	Circuit	Circuit Function
1	8-RJ19 (WH/RD)	Sensor signal
2	10-RJ19 (GY/RD)	Signal 2 (Y–direction, reverse, downward)

C109

12B637

B105
Knock sensor 1

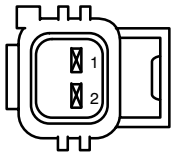

F02107

Pin	Circuit	Circuit Function
1	8-RJ18 (WH/BK)	Sensor signal
2	10-RJ18 (GY/BK)	Signal 2 (Y–direction, reverse, downward)

C110

13076

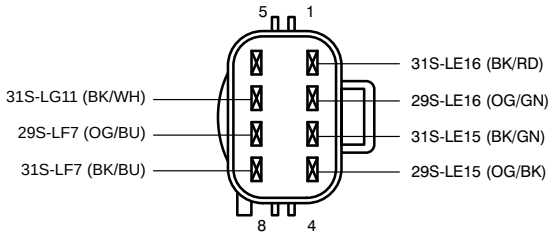

F08153

14290

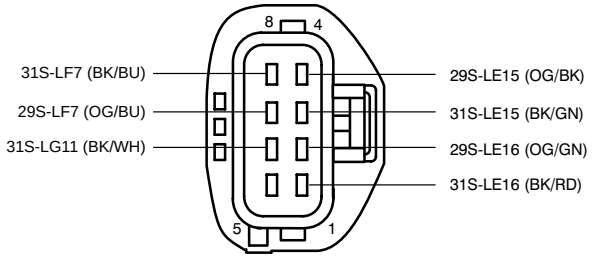

F08141

C111

12B637

P66
Coil On Plug (COP) 1

F02109

Pin	Circuit	Circuit Function
1	91S-RR5 (BN)	Ground, Switched
2	15-RR5 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)