C931 (GY)

12A522

N93
Gearshift lever unit

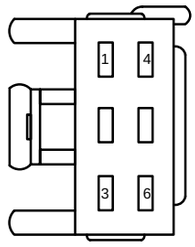

F06109

Pin	Circuit	Circuit Function
1	31-TA34 (BK)	Ground
2	31S-TA34 (BK/YE)	Ground, switched
3	15S-TA33 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), switched
4	29S-LK21 (OG/BK)	Voltage supplied at all times (overload protected), switched
5	15-TA21 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
6	15S-TA21 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched

C934 (GN)

12A690, 12A522

B48
Heated Oxygen
Sensor (HO2S) #11

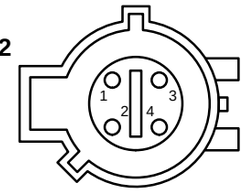

F04124

Pin	Circuit	Circuit Function
1	15-RJ14 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
	15-RJ14A (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
2	91S-RJ14 (BK/YE)	Ground, switched
3	9-RJ14 (BN)	Sensor signal return (reference/ground)
	9-RJ14A (BN)	Sensor signal return (reference/ground)
4	8-RJ14 (WH)	Sensor signal

C933 (GY)

12A522

N61
Inertia Fuel Shutoff
(IFS) switch



F03032

Pin	Circuit	Circuit Function
1	15S-RP3 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched
	15S-RG2 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	15-RP3A (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected)
3	15S-RE31 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched

C935 (BU)

12A522, 9H589, 12A690

B88
Heated Oxygen
Sensor (HO2S) #12

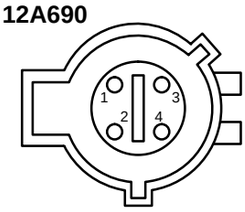

F04082

Pin	Circuit	Circuit Function
1	15-RJ15 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
2	91S-RJ15 (BK/BU)	Ground, switched
3	9-RJ15 (BN/RD)	Sensor signal return (reference/ground)
4	8-RJ15 (WH/RD)	Sensor signal