## C717 (GY)

### 14401

N83
Traction Control System (TCS) disable switch

F08088

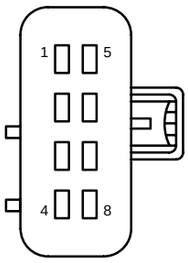


| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 91-CF54 (BK/WH) | Ground |
| | 91-CF54 (BK/WH) | Ground |
| | 91-LH45 (BK/WH) | Ground |
| 2 | 91S-CF54 (BK/WH) | Ground, switched |
| 3 | – | not used |
| 4 | – | not used |
| 5 | – | not used |
| 6 | – | not used |
| 7 | 91-LH45 (BK/WH) | Ground |
| 8 | 29S-LH45 (OG/WH) | Voltage supplied at all times (overload protected), switched |

## C731

### 12A522

A195
Fuel pump driver module

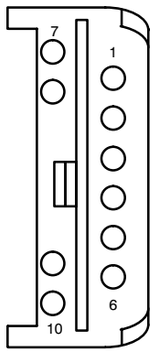


F10009

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 31S-RE32 (BK/WH) | Ground, switched |
| 2 | 31-RE31 (BK) | Ground |
| 3 | 31-RG2 (BK) | Ground |
| 4 | – | not used |
| 5 | – | not used |
| 6 | – | not used |
| 7 | 15-RE16 (GN/BK) | Voltage, ignition switch in Start or Run (not overload protected) |
| 8 | – | not used |
| 9 | 15S-RE31 (GN/OG) | Voltage, ignition switch in Start or Run (not overload protected), switched |
| 10 | 15S-RG2 (GN/OG) | Voltage, ignition switch in Start or Run (not overload protected), switched |