C601

14A005

M221
Exterior rear view mirror, passenger side

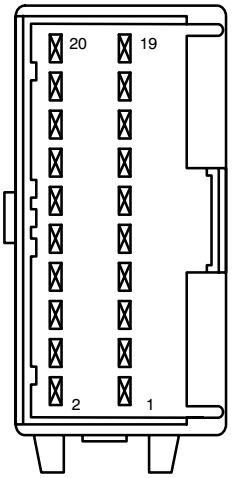

F20015

Pin	Circuit	Circuit Function
1	8-AD19 (WH/RD)	Sensor signal
2	32-AD10 (WH/BK)	Switched between: Battery voltage, Ground or Open
3	9-AD19 (BN/RD)	Sensor signal return (reference/ground)
4	33-AD10 (YE/BK)	Switched between: Battery voltage, Ground or Open
5	10-AD19 (GY/RD)	Signal 2 (Y–direction, reverse, downward)
6	35-AD11 (VT/WH)	Switched between: Battery voltage, Ground or Open
7	7-AD19 (YE/RD)	Voltage D.C. supplied at all times (sensor)
8	34-AD11 (BU/OG)	Switched between: Battery voltage, Ground or Open
9	29-HB36 (OG/GN)	Voltage supplied at all times (overload protected)
10	31-HB36 (BK/RD)	Ground
11	–	not used
12	–	not used
13	–	not used
14	–	not used
15	33-AD28 (YE/GN)	Switched between: Battery voltage, Ground or Open
16	32-AD28 (WH/GN)	Switched between: Battery voltage, Ground or Open
17	–	not used
18	–	not used
19	–	not used
20	–	not used

C604

14A205

N105
Window adjust switch, passenger side

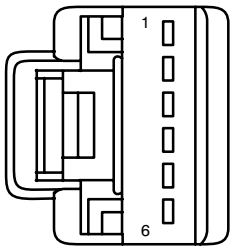

F006179

Pin	Circuit	Circuit Function
1	8-AJ18 (WH/VT)	Sensor signal
2	10-AJ18 (GY/WH)	Signal 2 (Y–direction, reverse, downward)
3	7-AJ18 (YE/VT)	Voltage D.C. supplied at all times (sensor)
4	31-LH31 (BK)	Ground
5	–	not used
6	29S-LH31 (OG/BU)	Voltage supplied at all times (overload protected), Switched