C1233b

9D930

A413
Cummins engine
control module

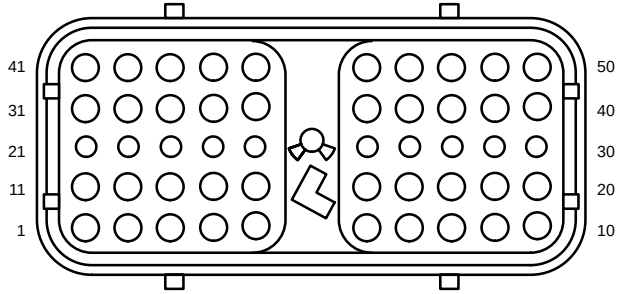

F50001

Pin	Circuit	Circuit function
1	617 (PK/OG)	Air bag crash sensor #1, feed
2	643 (RD)	indicator, Water–in–fuel sensor
3	658 (PK/LG)	Malfunction Indicator Lamp (MIL), control
4	618 (VT/LG)	Air bag crash sensor #1, monitor
5	–	not used
6	–	not used
7	848 (DG/OG)	Speed control switch, Ground
8	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
9	–	not used
10	–	not used
11	464 (BK/PK)	Headlamp relay, output
12	648 (WH/PK)	Tachometer, signal
13	154 (VT/LG)	Speed control switch, feed
14	151 (LB/BK)	Speed control switch, input
15	–	not used
16	–	not used
17	–	not used
18	676 (PK/OG)	Vehicle Speed Sensor (VSS) –
19	359 (GY/RD)	signal, return
20	359 (GY/RD)	signal, return
21	237 (OG/YE)	Shift solenoid A
22	–	not used
23	–	not used
24	–	not used
25	214 (PK/LB)	Navigation display unit (10E899), Ground
26	213 (DB/YE)	Audio/navigation control unit, feed

Pin	Circuit	Circuit function
27	–	not used
28	–	not used
29	21 (DK/LG)	Powertrain Control Module (PCM) (12A650) – Flexible fuel sensor
30	216 (TN/RD)	Navigation display unit (10E899), Ground
31	415 (LG/OG)	output, to, Manifold intake air heater relay
32	31 (WH/RD)	Engine oil pressure indicator, control
33	569 (DG)	Brake pedal position switch (13480), to stoplamps
34	–	not used
35	921 (GY/OG)	Inertia Fuel Shutoff (IFS) switch (9D362), Ground, input
36	922 (WH/RD	Fuel pump driver module, to fuel pump motor
37	900 (BK)	Fuel sender, logic ground
38	348 (VT)	A/C demand signal
39	–	not used
40	647 (GY/LB)	Wiper high/low relay, control
41	414 (OG/RD)	output, to, Manifold intake air heater relay
42	–	not used
43	–	not used
44	–	not used
45	–	not used
46	–	not used
47	441 (RD/YE)	A/C pressure switch, to A/C cycling switch
48	–	not used
49	712 (OG)	C–Data
50	716 (YE)	R–Data