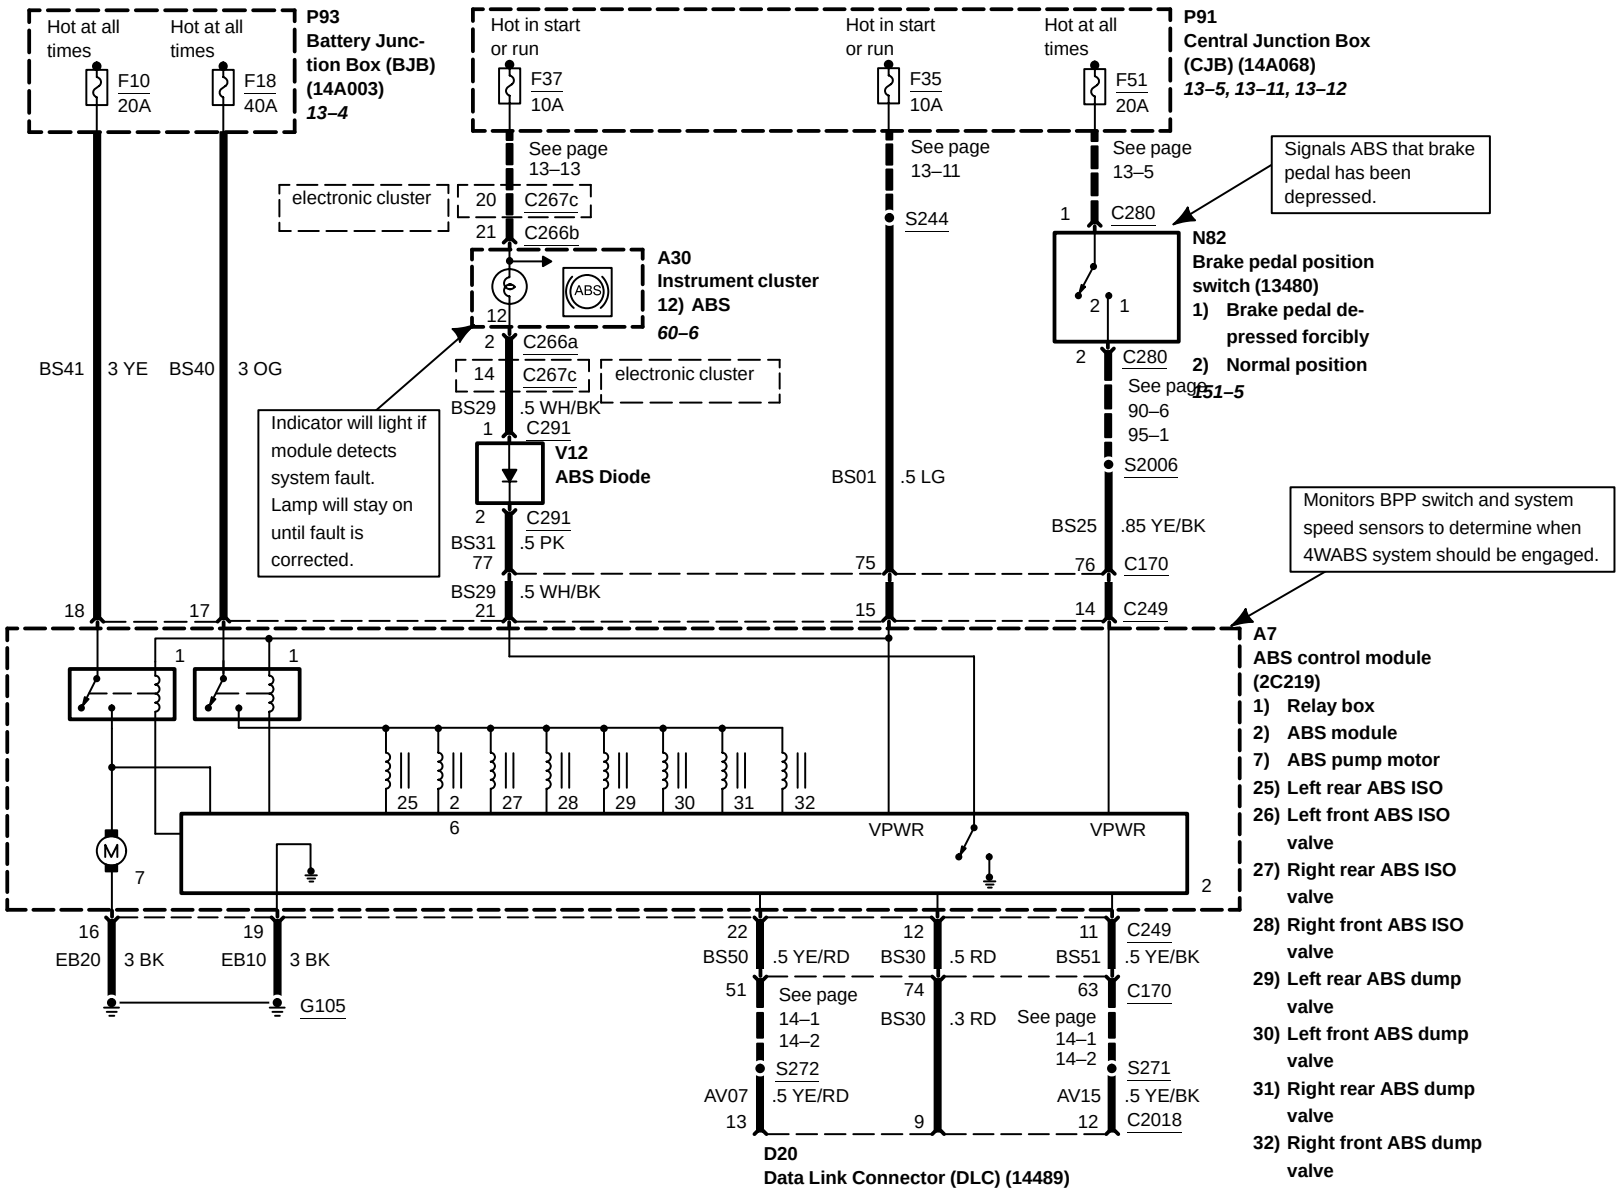
P93
Battery Junction Box (BJB) (14A003)
13–4
Hot at all times
F10 20A
F18 40A
P91
Central Junction Box (CJB) (14A068)
13–5, 13–11, 13–12
Hot in start or run
F37 10A
F35 10A
Hot at all times
F51 20A
See page 13–13
See page 13–11
See page 13–5
electronic cluster
20 C267c
21 C266b
S244
1 C280
Signals ABS that brake pedal has been depressed.
N82
Brake pedal position switch (13480)
1) Brake pedal depressed forcibly
2) Normal position
2 1
2 C280
See page 151–5
A30
Instrument cluster
12) ABS
60–6
12
2 C266a
14 C267c
electronic cluster
BS41 3 YE
BS40 3 OG
BS29 .5 WH/BK
1 C291
V12
ABS Diode
2 C291
BS31 .5 PK
Indicator will light if module detects system fault. Lamp will stay on until fault is corrected.
See page 90–6 95–1
S2006
BS01 .5 LG
BS25 .85 YE/BK
Monitors BPP switch and system speed sensors to determine when 4WABS system should be engaged.
77
75
76 C170
BS29 .5 WH/BK
18
17
21
15
14 C249
A7
ABS control module (2C219)
1) Relay box
2) ABS module
7) ABS pump motor
25) Left rear ABS ISO
26) Left front ABS ISO valve
27) Right rear ABS ISO valve
28) Right front ABS ISO valve
29) Left rear ABS dump valve
30) Left front ABS dump valve
31) Right rear ABS dump valve
32) Right front ABS dump valve
25 2 27 28 29 30 31 32
6
VPWR
VPWR
2
M
7
16 EB20 3 BK
19 EB10 3 BK
G105
22 BS50 .5 YE/RD
12 BS30 .5 RD
11 BS51 .5 YE/BK
C249
51
See page 14–1 14–2
74 BS30 .3 RD
63
See page 14–1 14–2
C170
S272
AV07 .5 YE/RD
13
9
S271
AV15 .5 YE/BK
12 C2018
D20
Data Link Connector (DLC) (14489)