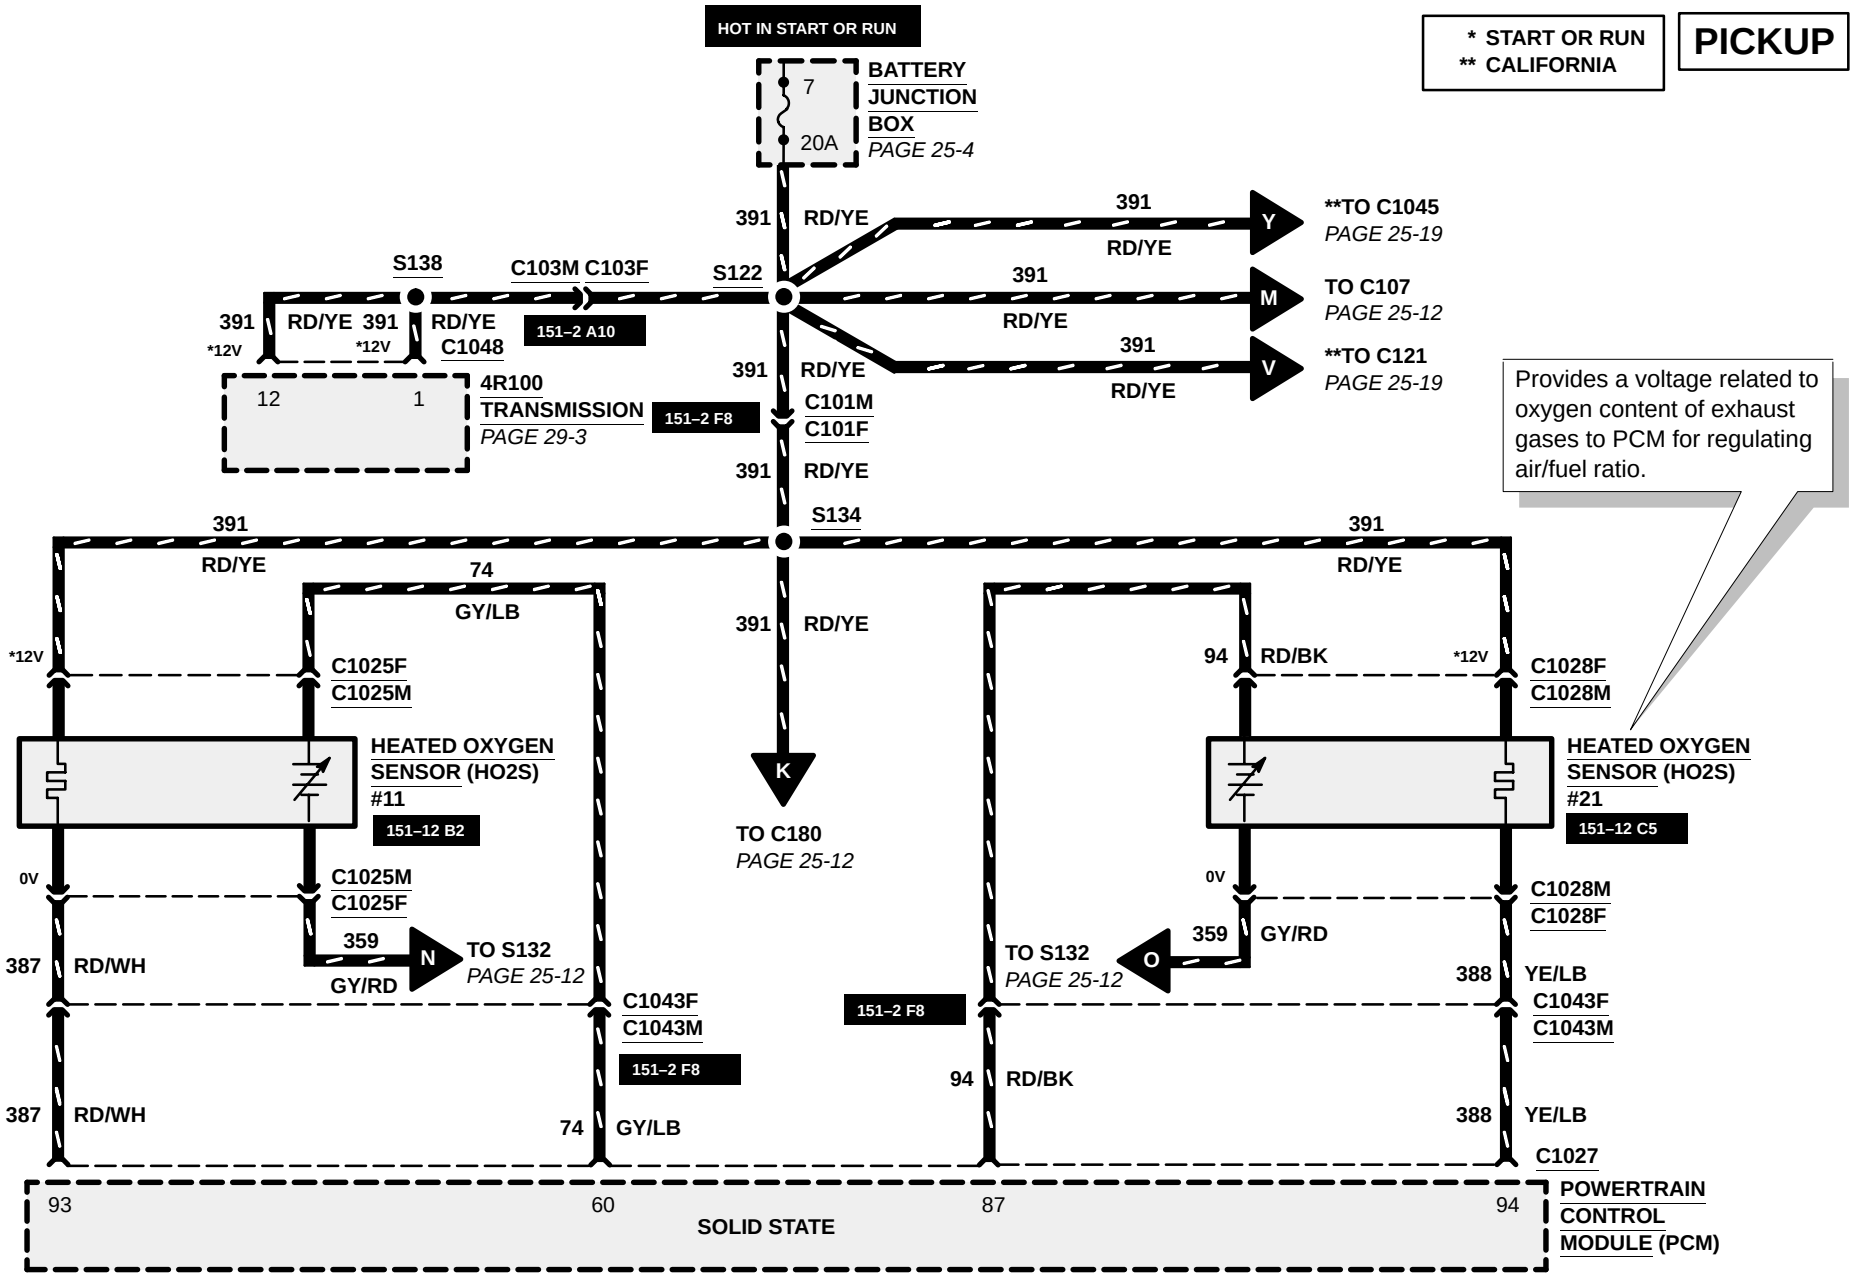
* START OR RUN
** CALIFORNIA
PICKUP
HOT IN START OR RUN
7
20A
BATTERY JUNCTION BOX
PAGE 25-4
391 RD/YE
391 RD/YE
Y
**TO C1045
PAGE 25-19
S138
C103M C103F
S122
391 RD/YE
M
TO C107
PAGE 25-12
391 RD/YE
391 RD/YE
391 RD/YE
*12V
391 RD/YE
*12V
C1048
151–2 A10
391 RD/YE
V
**TO C121
PAGE 25-19
12
1
4R100 TRANSMISSION
PAGE 29-3
151–2 F8
C101M
C101F
391 RD/YE
Provides a voltage related to oxygen content of exhaust gases to PCM for regulating air/fuel ratio.
391 RD/YE
S134
391 RD/YE
74
GY/LB
391 RD/YE
*12V
C1025F
C1025M
94 RD/BK
*12V
C1028F
C1028M
HEATED OXYGEN SENSOR (HO2S) #11
151–12 B2
K
TO C180
PAGE 25-12
HEATED OXYGEN SENSOR (HO2S) #21
151–12 C5
0V
C1025M
C1025F
0V
C1028M
C1028F
359 GY/RD
N
TO S132
PAGE 25-12
387 RD/WH
TO S132
PAGE 25-12
O
359 GY/RD
388 YE/LB
C1043F
C1043M
151–2 F8
C1043F
C1043M
151–2 F8
94 RD/BK
387 RD/WH
74 GY/LB
388 YE/LB
C1027
93
60
87
94
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)