C442

14K024

N312
Trip computer
switch

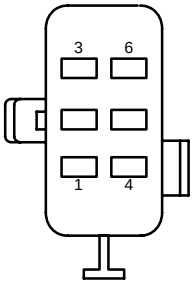

F06065

Pin	Circuit	Circuit Function
1	8-GG7 (WH/BU)	Sensor signal
2	8-GG8 (WH/GN)	Sensor signal
3	8-GG10 (WH/VT)	Sensor signal
4	64S-LK40 (BU/RD)	Variable D.C. voltage (not overload protected), switched
5	8-GG9 (WH/BK)	Sensor signal
6	91-GH9 (BK/OG)	Ground

C443a (WH)

14K024

A11
Radio

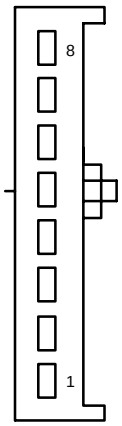

F08043

Pin	Circuit	Circuit Function
1	8-MD10 (WH/BK)	Sensor signal
2	10-MD10 (GY/BK)	Signal 2 (Y–direction, reverse, downward)
3	8-MD11 (WH/VT)	Sensor signal
4	10-MD11 (GY/WH)	Signal 2 (Y–direction, reverse, downward)
5	8-MD17 (WH/RD)	Sensor signal
6	10-MD17 (GY/RD)	Signal 2 (Y–direction, reverse, downward)
7	8-MD18 (WH)	Sensor signal
8	10-MD18 (GY)	Signal 2 (Y–direction, reverse, downward)