C483

14A005

N450
Anti–theft luggage
compartment switch



F02207

Pin	Circuit	Circuit function
1	23 (TN/LG)	Anti–theft, switch sense
2	57 (BK)	Ground

C484

14A005/18C620

Y17
Speaker, left rear
(18808)

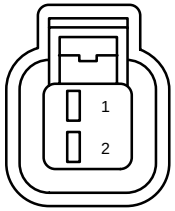

F02069

Pin	Circuit	Circuit function
1	800 (GY/LB)	Speaker, left rear (18808) +
2	801 (TN/YE)	Speaker, left rear (18808) -

C485

14A005/18C620

Y19
Speaker, right rear
(18808)

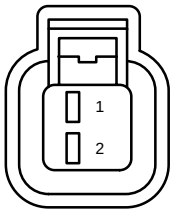

F02069

Pin	Circuit	Circuit function
1	802 (OG/RD)	Speaker, right rear (18808) +
2	803 (BN/PK)	Speaker, right rear (18808) -

C487

18C620

E105
Reversing lamp, left
(13411)



F03033

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	140 (BK/PK)	Voltage supplied in reverse

C488

18C620

E109
Reversing lamp,
right (13411)

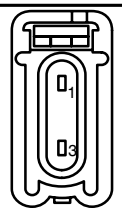

F03033

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	140 (BK/PK)	Voltage supplied in reverse

C489 (NA)

13B783

E87
Cargo space lamp

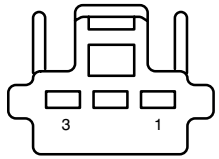

F03173

Pin	Circuit	Circuit function
1	53 (BK/LB)	Interior lamp relay, switched power, output
2	57 (BK)	Ground
3	705 (LG/OG)	Battery saver relay, switched power