C100

12B637

Y52
A/C clutch field coil
(19D798)

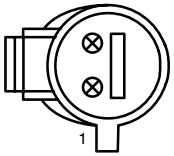

F02113

Pin	Circuit	Circuit Function
1	15S-FA6 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
2	31-FA6 (BK)	Ground

C101

12B637

B43
Crankshaft position sensor (6C315)

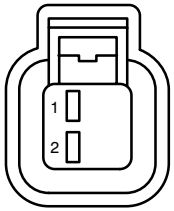

F02069

Pin	Circuit	Circuit Function
1	8-RJ4 (WH/RD)	Sensor signal
2	10-RJ4 (GY/RD)	Signal 2 (Y–direction, reverse, downward)

C102a

12B637

O5a
Generator (10346)

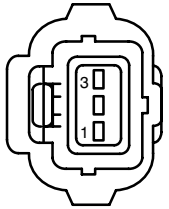

F03098

Pin	Circuit	Circuit Function
1	8-BA25 (WH/RD)	Sensor signal
2	10–BA25 (GY/RD)	Signal 2 (Y–direction, reverse, downward)
3	30-BA25 (RD)	Voltage supplied at all times (not overload protected)

C102b

14305

O5a
Generator (10346)



F01053

Pin	Circuit	Circuit Function
1	30-BA6 (RD)	Voltage supplied at all times (not overload protected)