Seat adjust switch

Schematic

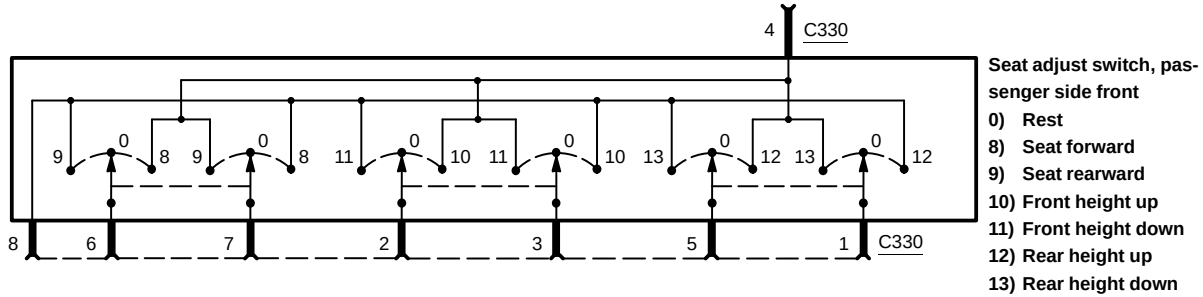

Seat adjust switch, passenger side front

0) Rest
8) Seat forward
9) Seat rearward
10) Front height up
11) Front height down
12) Rear height up
13) Rear height down

Terminals

C330

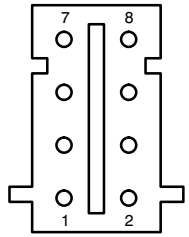

F08245

Component testing procedure

Circuit to test	Connect self–powered test light or ohmmeter to terminals	Move switch to these positions	A good switch will indicate
Forward/Rearward circuit	4 and 6 8 and 7	Forward	Closed circuit
		Rearward	Open circuit
	4 and 7 6 and 8	Forward	Open circuit
		Rearward	Closed circuit
Front up/down circuit	4 and 2 3 and 8	Up	Closed circuit
		Down	Open circuit
	4 and 3 2 and 8	Up	Open circuit
		Down	Closed circuit
Rear up/down circuit	4 and 5 8 and 1	Up	Closed circuit
		Down	Open circuit
	1 and 4 5 and 8	Up	Open circuit
		Down	Closed circuit