C4157b

19B113

A441
Subwoofer amplifier, luggage compartment left outboard

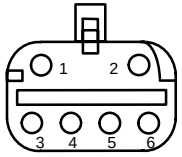

F06052

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	176 (PK/LG)	Subwoofer amplifier, luggage compartment left outboard, to, Subwoofer, luggage compartment left, +
4	179 (OG/RD)	Subwoofer amplifier, luggage compartment left outboard, to, Subwoofer, luggage compartment left, –
5	–	not used
6	–	not used

C4158a

19B113

A442
Subwoofer amplifier, luggage compartment left inboard

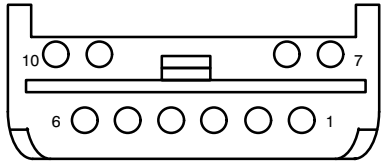

F10009

Pin	Circuit	Circuit function
1	174 (GY/BK)	Radio (18806) – Subwoofer, Low, mute
	174 (GY/BK)	Radio (18806) – Subwoofer, Low, mute
2	694 (BK/LG)	Ground
3	–	not used
4	–	not used
5	828 (VT/LB)	Voltage supplied at all times (overload protected)
6	–	not used
7	169 (LG/BK)	Radio (18806) – Subwoofer, Low, +
	169 (LG/BK)	Radio (18806) – Subwoofer, Low, +
8	172 (LB/RD)	Radio (18806) – Subwoofer, Low, –
	172 (LB/RD)	Radio (18806) – Subwoofer, Low, –
9	–	not used
10	–	not used