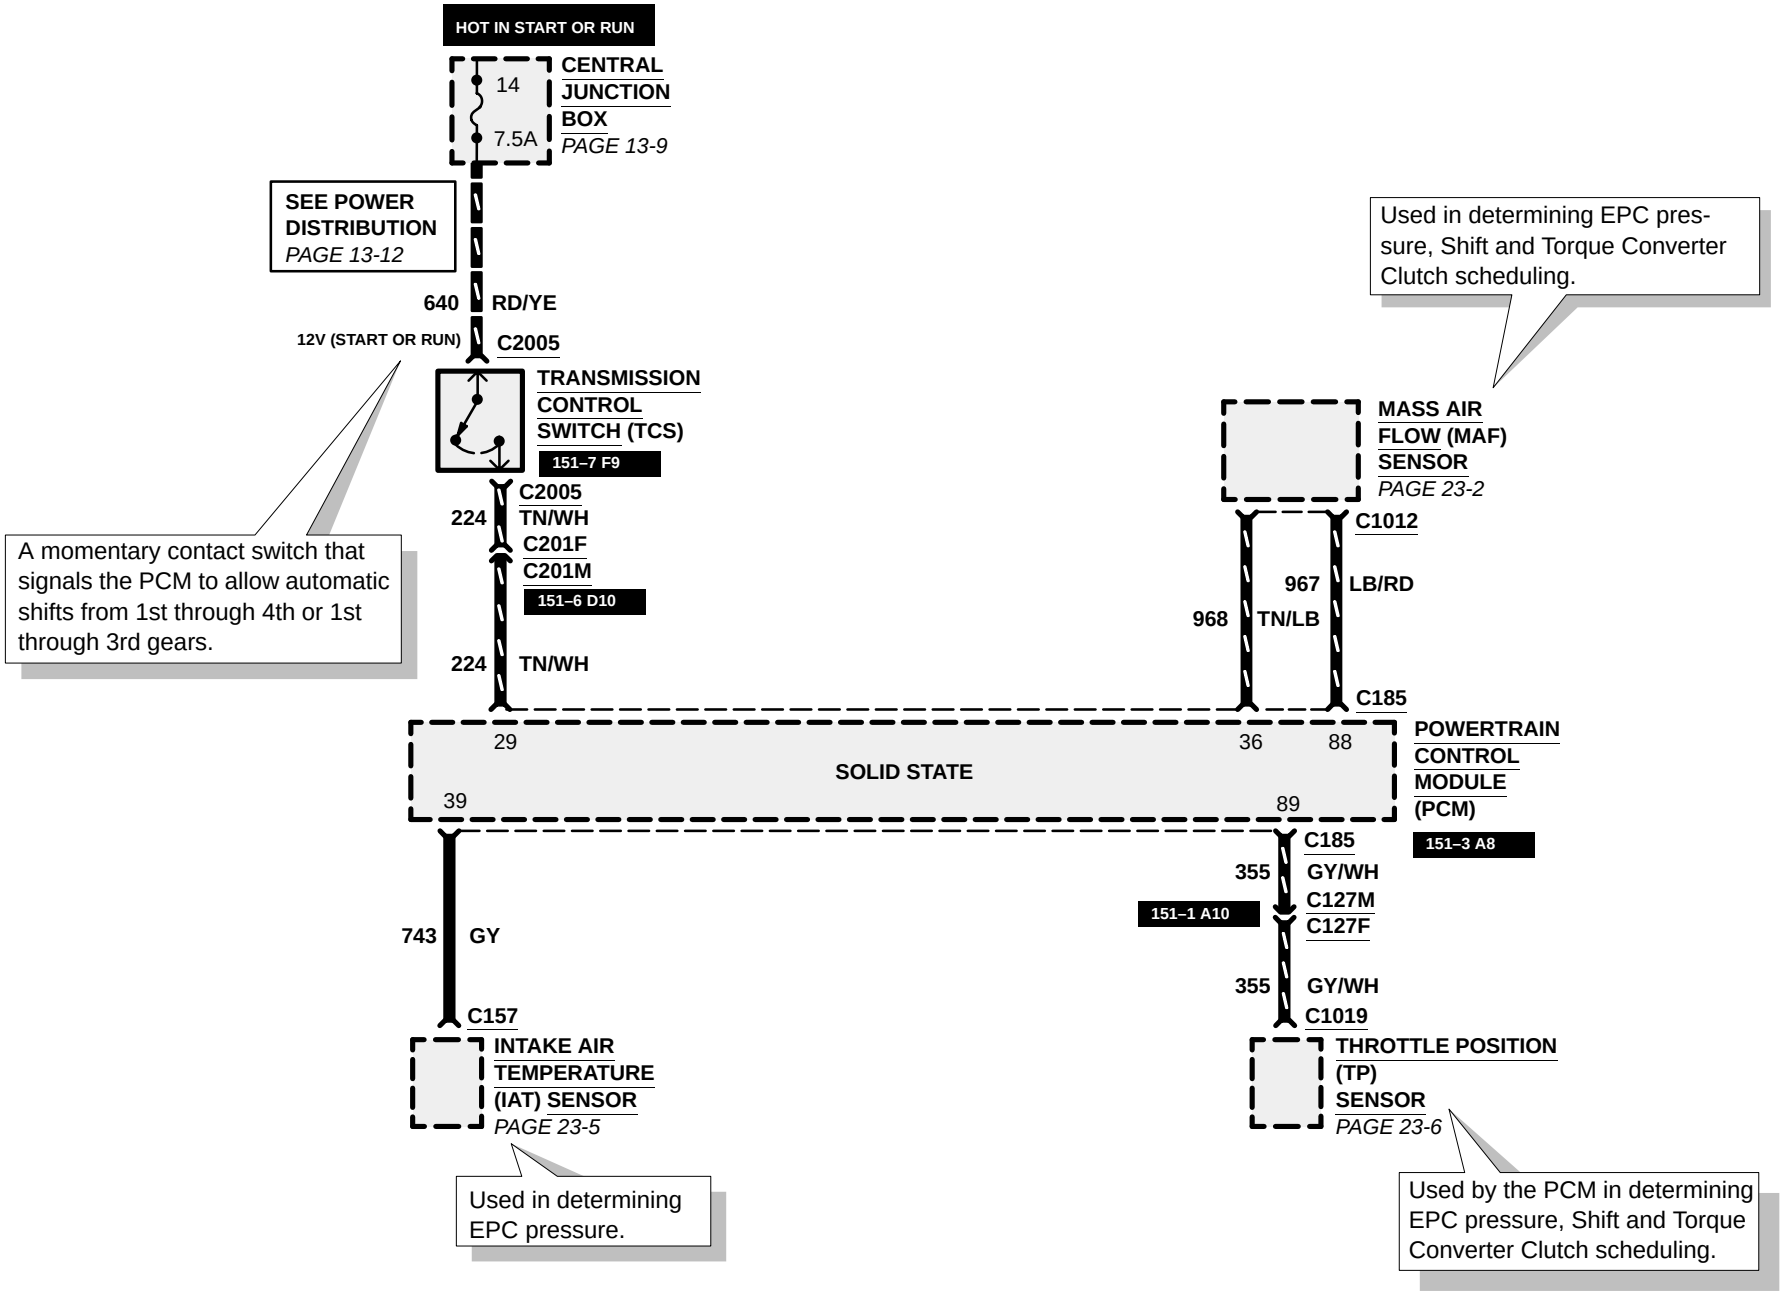
HOT IN START OR RUN
14
7.5A
CENTRAL JUNCTION BOX
PAGE 13-9
SEE POWER DISTRIBUTION
PAGE 13-12
640 RD/YE
12V (START OR RUN)
C2005
TRANSMISSION CONTROL SWITCH (TCS)
151–7 F9
C2005
224 TN/WH
C201F
C201M
151–6 D10
224 TN/WH
A momentary contact switch that signals the PCM to allow automatic shifts from 1st through 4th or 1st through 3rd gears.
Used in determining EPC pressure, Shift and Torque Converter Clutch scheduling.
MASS AIR FLOW (MAF) SENSOR
PAGE 23-2
C1012
967 LB/RD
968 TN/LB
C185
29
36
88
SOLID STATE
39
89
POWERTRAIN CONTROL MODULE (PCM)
151–3 A8
C185
355 GY/WH
C127M
C127F
151–1 A10
355 GY/WH
C1019
743 GY
C157
INTAKE AIR TEMPERATURE (IAT) SENSOR
PAGE 23-5
THROTTLE POSITION (TP) SENSOR
PAGE 23-6
Used in determining EPC pressure.
Used by the PCM in determining EPC pressure, Shift and Torque Converter Clutch scheduling.