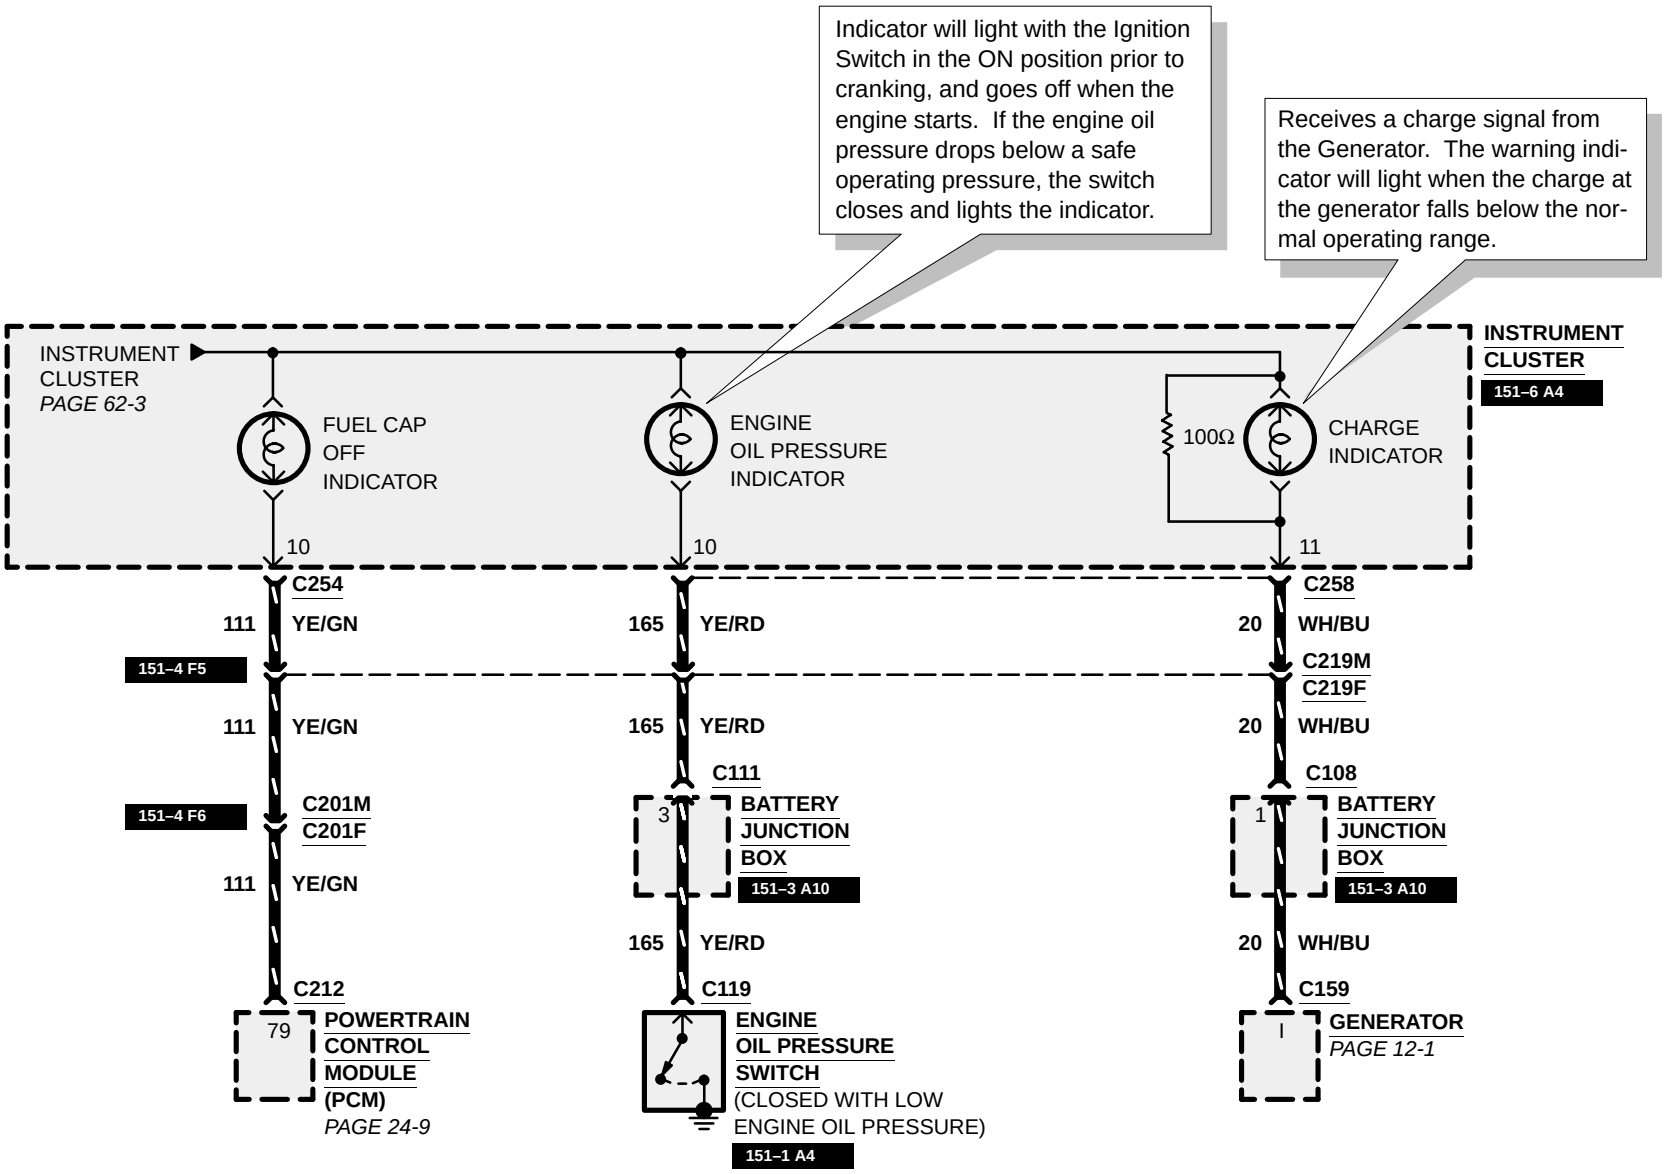
Indicator will light with the Ignition Switch in the ON position prior to cranking, and goes off when the engine starts. If the engine oil pressure drops below a safe operating pressure, the switch closes and lights the indicator.
Receives a charge signal from the Generator. The warning indicator will light when the charge at the generator falls below the normal operating range.
INSTRUMENT CLUSTER
PAGE 62-3
FUEL CAP OFF INDICATOR
ENGINE OIL PRESSURE INDICATOR
100Ω
CHARGE INDICATOR
INSTRUMENT CLUSTER
151–6 A4
10
10
11
C254
111 YE/GN
165 YE/RD
20 WH/BU
C258
151–4 F5
C219M
C219F
111 YE/GN
165 YE/RD
20 WH/BU
C111
C108
151–4 F6
C201M
C201F
3
BATTERY JUNCTION BOX
151–3 A10
1
BATTERY JUNCTION BOX
151–3 A10
111 YE/GN
165 YE/RD
20 WH/BU
C212
C119
C159
79
POWERTRAIN CONTROL MODULE (PCM)
PAGE 24-9
ENGINE OIL PRESSURE SWITCH
(CLOSED WITH LOW ENGINE OIL PRESSURE)
151–1 A4
I
GENERATOR
PAGE 12-1