C627

14A005

N217
Seat adjust switch, passenger side front

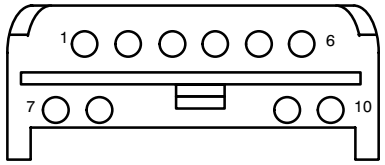

F10009

Pin	Circuit	Circuit Function
1	566 (DG)	Voltage supplied at all times (overload protected)
2	918 (GY)	Seat adjust switch, to, rear, Tilt, Seat motor
3	985 (RD/LB)	Seat adjust switch, to, front, Tilt, Seat motor
4	989 (RD/LG)	Seat adjust switch, to, rear, Tilt, Seat motor
5	987 (RD/WH)	Seat adjust switch, to, Passenger seat horizontal motor
6	57 (BK)	Ground
7	919 (GY/BK)	Door lock switch, to, rear, Tilt, Seat motor
8	984 (YE/LB)	Seat adjust switch, to, front, Tilt, Seat motor
9	988 (YE/LG)	Seat adjust switch, to, rear, Tilt, Seat motor
10	986 (YE/WH)	Seat adjust switch, to, Passenger seat horizontal motor

C701a

14A005

N111
Window adjust switch, left rear (14A412)

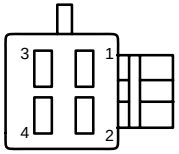

F04193

Pin	Circuit	Circuit Function
1	193 (YE/LG)	Voltage supplied at all times (overload protected)
2	885 (YE/LB)	Window switch, to, Window motor, left rear
3	884 (YE/BK)	Window switch, to, Window motor, left rear
4	57 (BK)	Ground

C701b

14A005

N111
Window adjust switch, left rear (14A412)

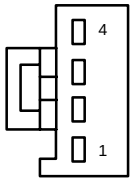

F04153

Pin	Circuit	Circuit Function
1	316 (YE/LB)	Window switch, feed, left rear, Up
2	1002 (BK/PK)	Voltage in Run or Accessory (overload protected)
3	170 (RD/LB)	Window lockout, switched power, output
4	317 (GY/OG)	Window switch, feed, left rear, Down

C702

14A005

Y17
Speaker, left rear (18808)

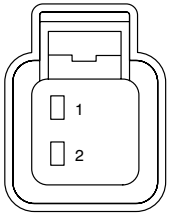

F02337

Pin	Circuit	Circuit Function
1	800 (GY/LB)	Speaker, left rear (18808) +
2	801 (TN/YE)	Speaker, left rear (18808) –

C703

14A005

M116
Power window motor, left rear (23394)



F02088

Pin	Circuit	Circuit Function
1	884 (YE/BK)	Window switch, to, Window motor, left rear
2	885 (YE/LB)	Window switch, to, Window motor, left rear