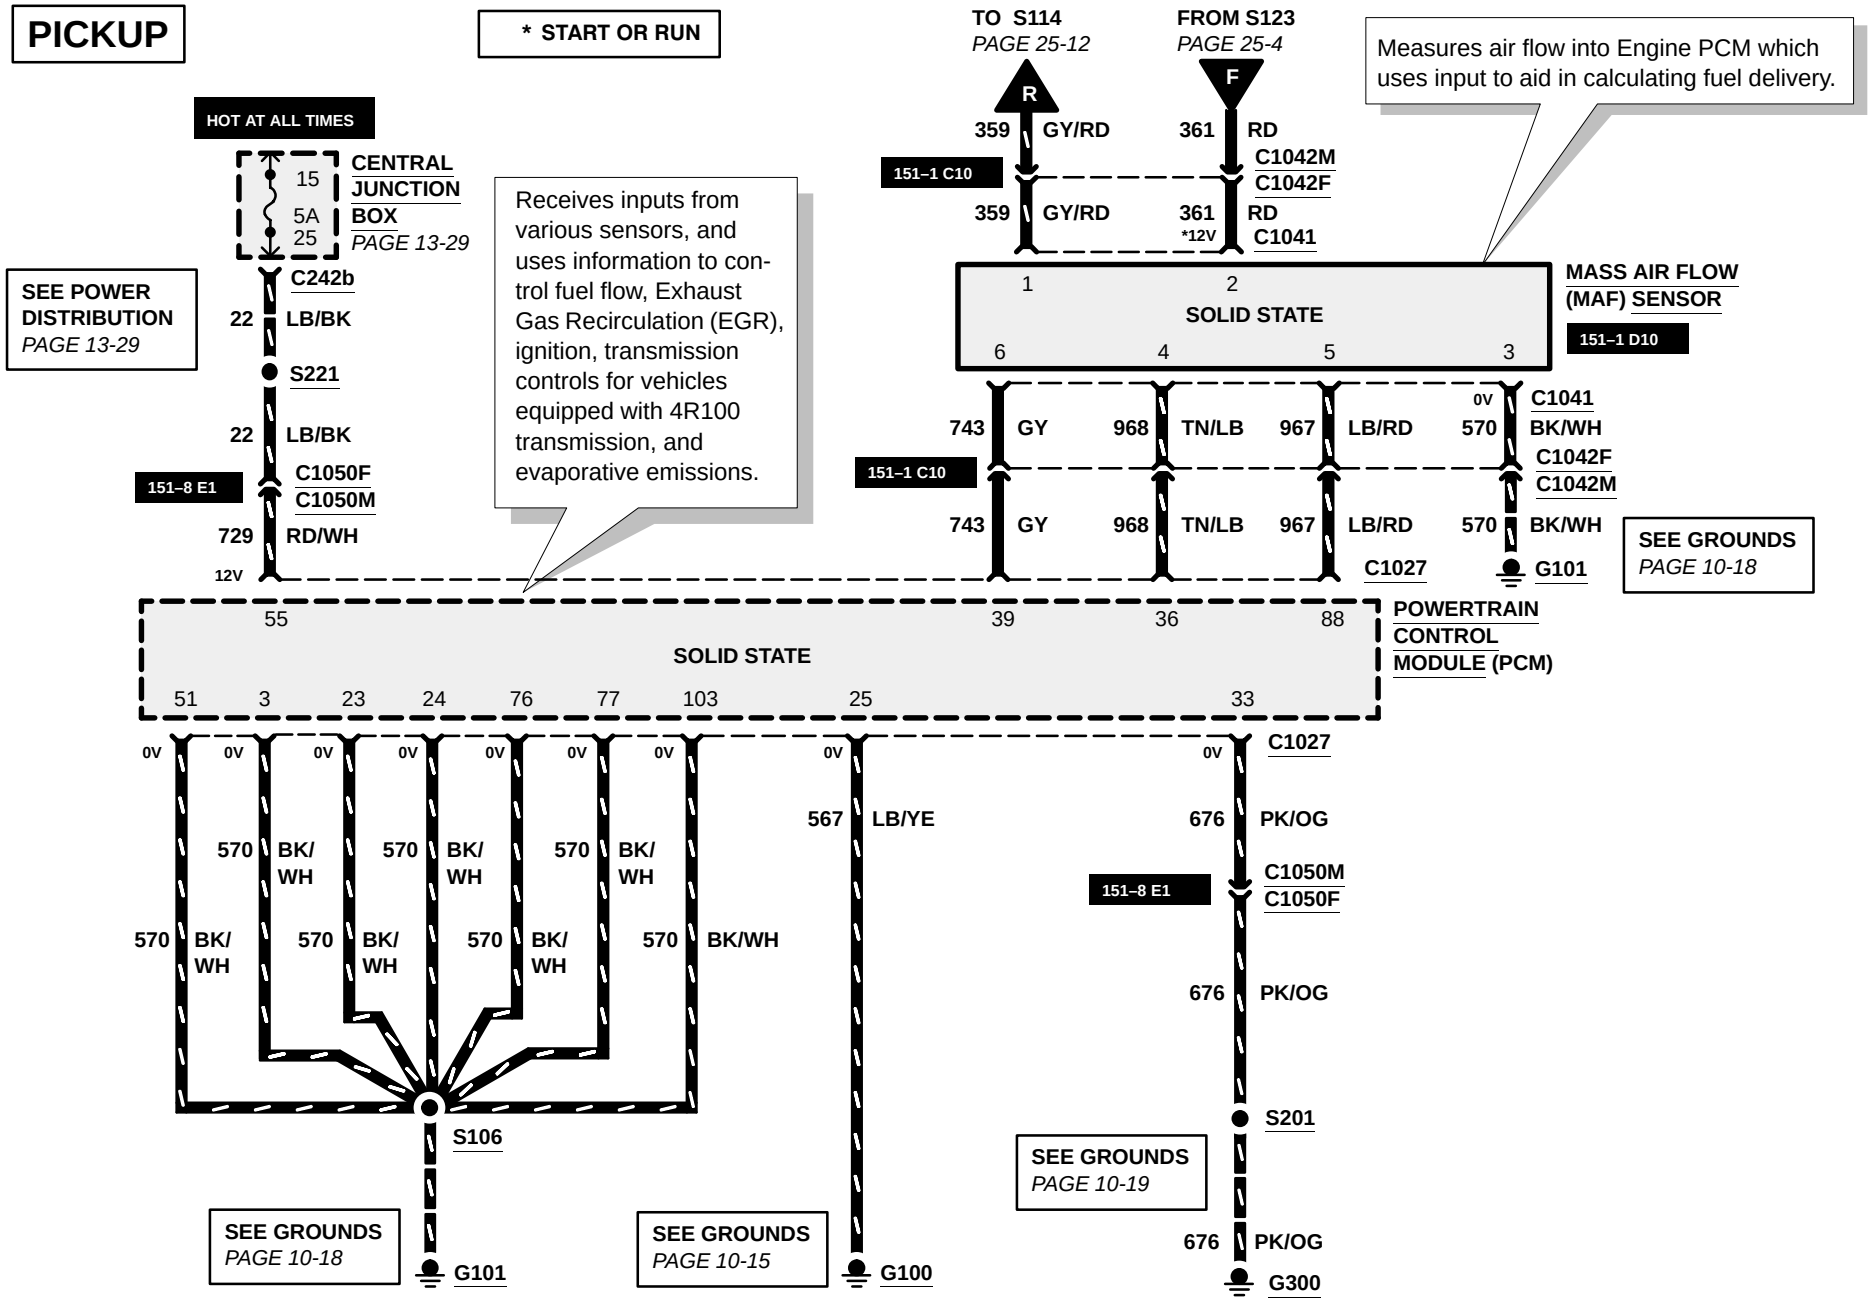
PICKUP
* START OR RUN
TO S114
PAGE 25-12
FROM S123
PAGE 25-4
Measures air flow into Engine PCM which uses input to aid in calculating fuel delivery.
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGE 13-29
15
5A
25
SEE POWER DISTRIBUTION
PAGE 13-29
C242b
22 LB/BK
S221
22 LB/BK
151–8 E1
C1050F
C1050M
729 RD/WH
12V
Receives inputs from various sensors, and uses information to control fuel flow, Exhaust Gas Recirculation (EGR), ignition, transmission controls for vehicles equipped with 4R100 transmission, and evaporative emissions.
R
F
359 GY/RD
361 RD
C1042M
C1042F
151–1 C10
359 GY/RD
361 RD
*12V
C1041
MASS AIR FLOW (MAF) SENSOR
151–1 D10
1
2
SOLID STATE
6
4
5
3
0V C1041
743 GY
968 TN/LB
967 LB/RD
570 BK/WH
C1042F
C1042M
151–1 C10
743 GY
968 TN/LB
967 LB/RD
C1027
570 BK/WH
G101
SEE GROUNDS
PAGE 10-18
55
39
36
88
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
51
3
23
24
76
77
103
25
33
0V C1027
0V 567 LB/YE
0V 676 PK/OG
151–8 E1
C1050M
C1050F
676 PK/OG
570 BK/WH
S201
S106
SEE GROUNDS
PAGE 10-19
676 PK/OG
G300
SEE GROUNDS
PAGE 10-18
G101
SEE GROUNDS
PAGE 10-15
G100