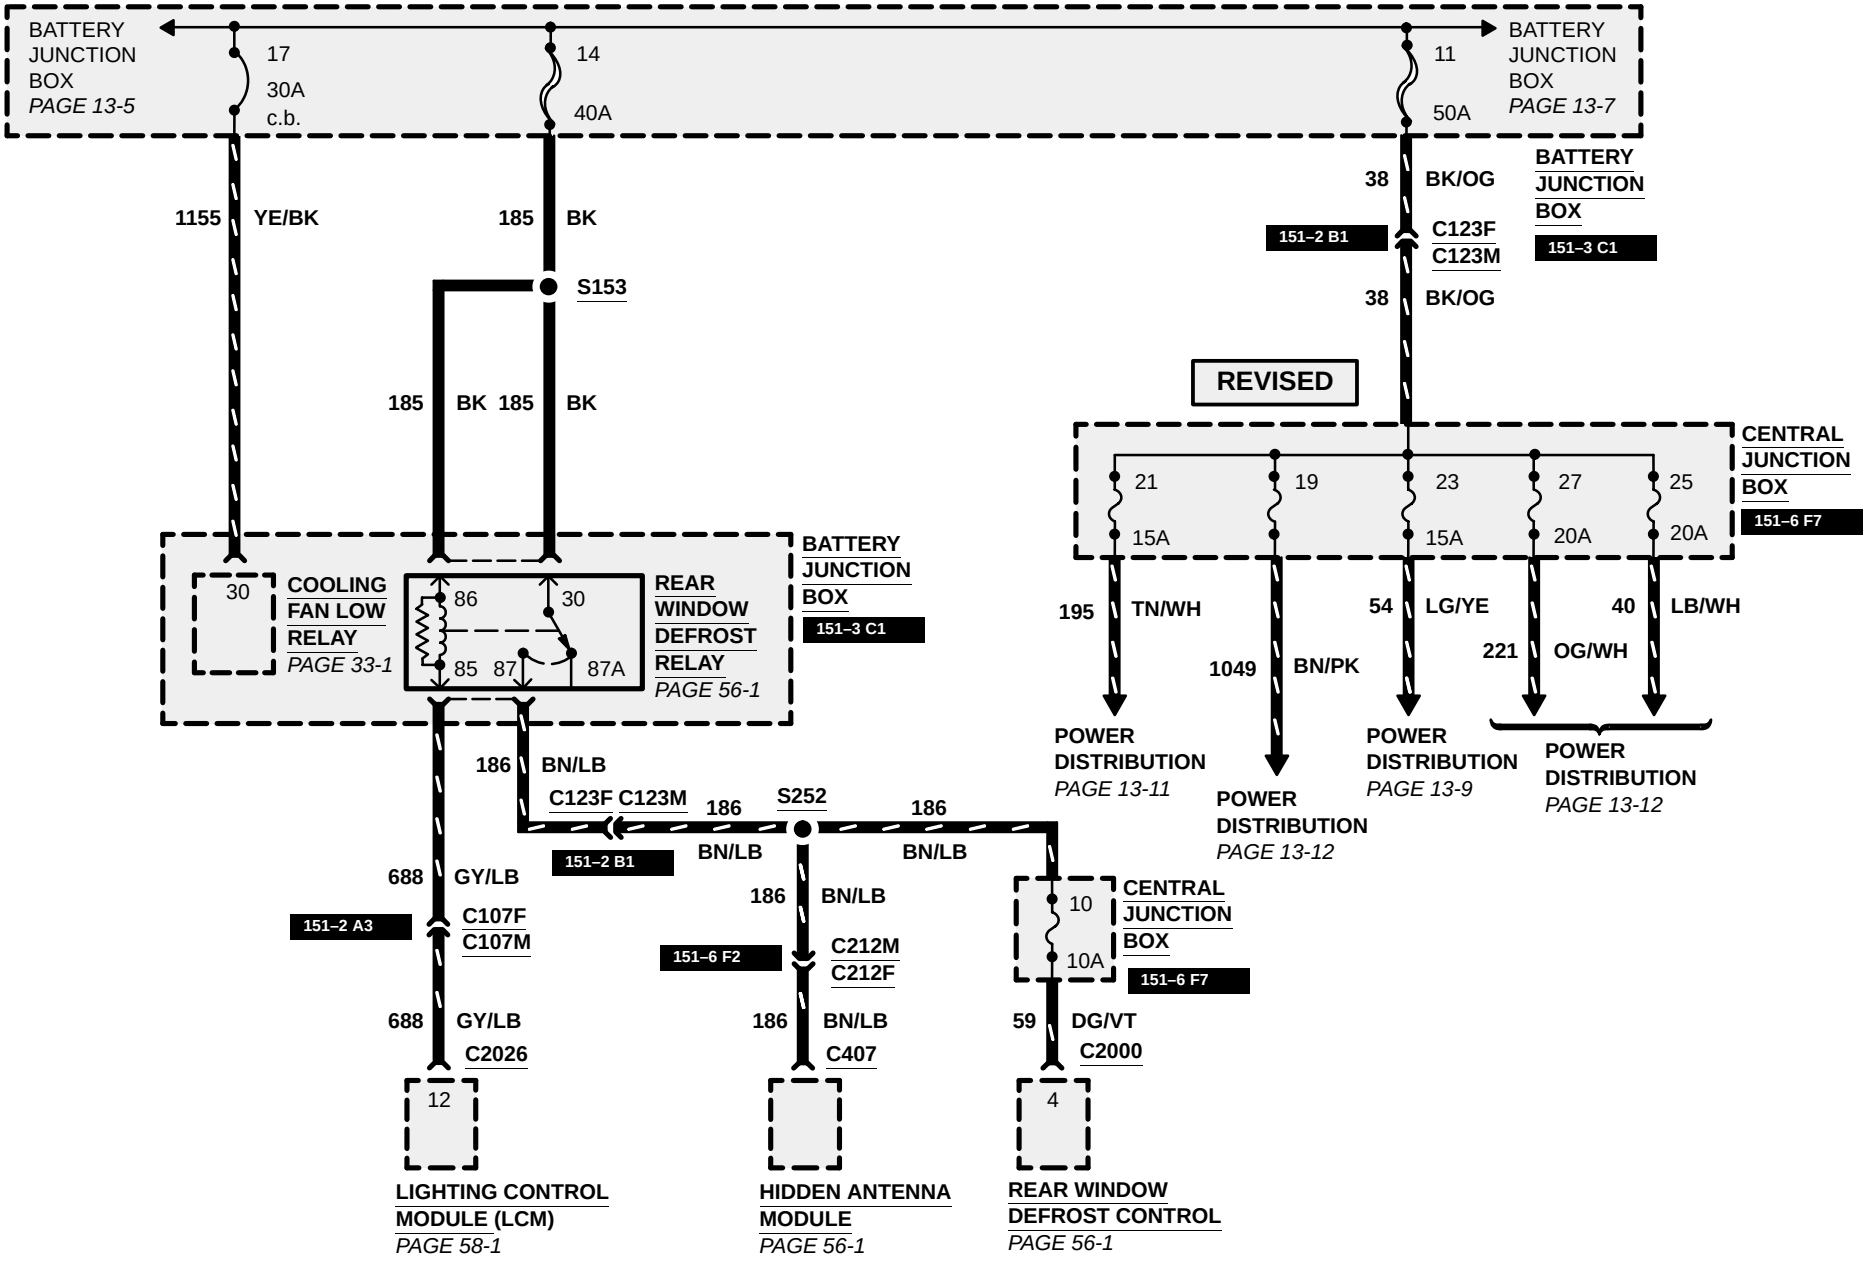
BATTERY JUNCTION BOX
PAGE 13-5
17
30A
c.b.
14
40A
11
50A
BATTERY JUNCTION BOX
PAGE 13-7
1155 YE/BK
185 BK
S153
38 BK/OG
151–2 B1
C123F
C123M
38 BK/OG
BATTERY JUNCTION BOX
151–3 C1
REVISED
185 BK
185 BK
CENTRAL JUNCTION BOX
151–6 F7
21
15A
19
15A
23
20A
27
20A
25
30
COOLING FAN LOW RELAY
PAGE 33-1
86
30
85
87
87A
REAR WINDOW DEFROST RELAY
PAGE 56-1
BATTERY JUNCTION BOX
151–3 C1
195 TN/WH
1049 BN/PK
54 LG/YE
221 OG/WH
40 LB/WH
POWER DISTRIBUTION
PAGE 13-11
POWER DISTRIBUTION
PAGE 13-12
POWER DISTRIBUTION
PAGE 13-9
POWER DISTRIBUTION
PAGE 13-12
186 BN/LB
C123F C123M
151–2 B1
186 BN/LB
S252
186 BN/LB
688 GY/LB
151–2 A3
C107F
C107M
186 BN/LB
151–6 F2
C212M
C212F
10
10A
151–6 F7
CENTRAL JUNCTION BOX
688 GY/LB
C2026
186 BN/LB
C407
59 DG/VT
C2000
12
4
LIGHTING CONTROL MODULE (LCM)
PAGE 58-1
HIDDEN ANTENNA MODULE
PAGE 56-1
REAR WINDOW DEFROST CONTROL
PAGE 56-1