Pickup

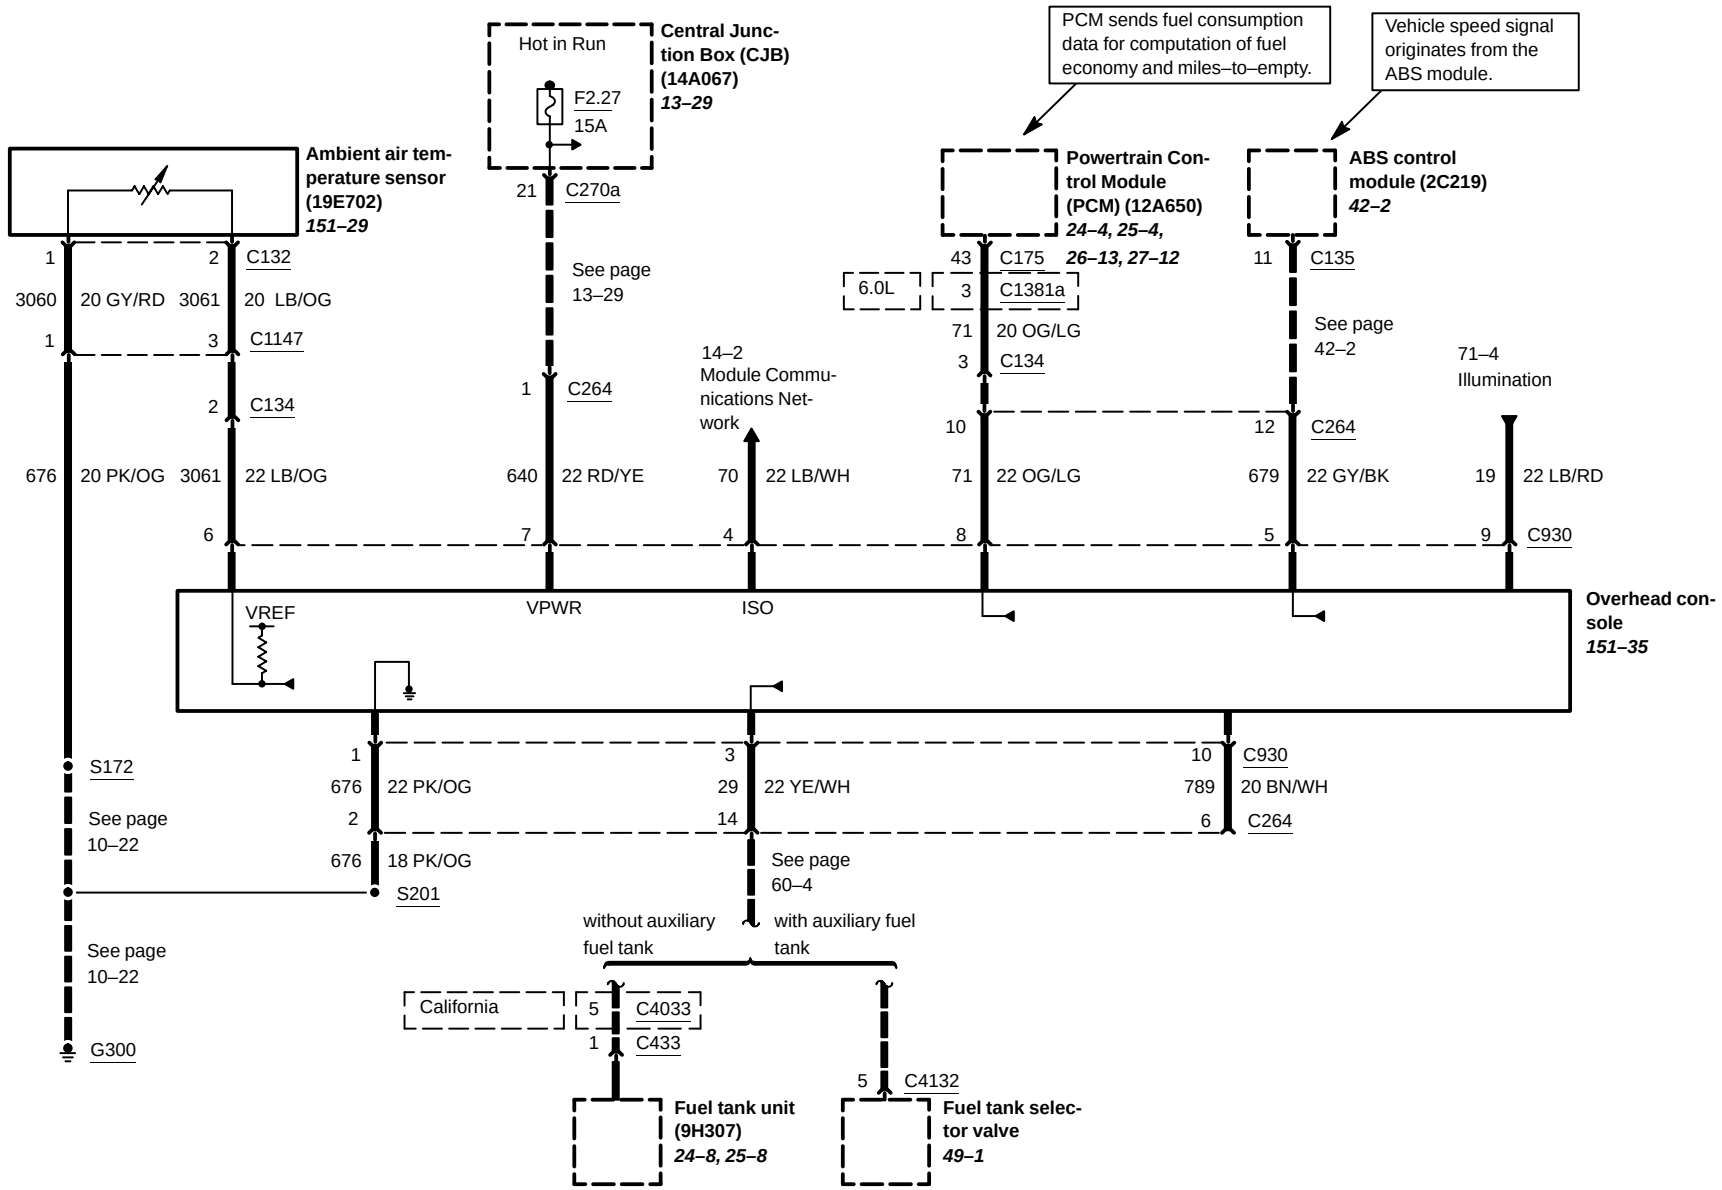
Hot in Run
Central Junction Box (CJB) (14A067) 13–29
F2.27
15A
21 C270a
See page 13–29
PCM sends fuel consumption data for computation of fuel economy and miles–to–empty.
Vehicle speed signal originates from the ABS module.
Powertrain Control Module (PCM) (12A650) 24–4, 25–4, 26–13, 27–12
ABS control module (2C219) 42–2
Ambient air temperature sensor (19E702) 151–29
1 2 C132
3060 20 GY/RD 3061 20 LB/OG
1 3 C1147
2 C134
676 20 PK/OG 3061 22 LB/OG
6
640 22 RD/YE
7
1 C264
14–2 Module Communications Network
70 22 LB/WH
4
6.0L
43 C175 26–13, 27–12
3 C1381a
71 20 OG/LG
3 C134
10 71 22 OG/LG
8
11 C135
See page 42–2
12 C264
679 22 GY/BK
5
71–4 Illumination
19 22 LB/RD
9 C930
VREF
VPWR
ISO
Overhead console 151–35
S172
See page 10–22
1 676 22 PK/OG
2 676 18 PK/OG
S201
3 29 22 YE/WH
14
See page 60–4
10 C930
789 20 BN/WH
6 C264
without auxiliary fuel tank
with auxiliary fuel tank
California
5 C4033
1 C433
5 C4132
Fuel tank unit (9H307) 24–8, 25–8
Fuel tank selector valve 49–1
See page 10–22
G300