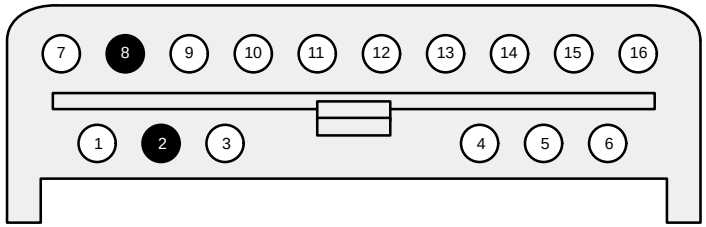

C374
DRIVER SEAT MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	1469 (RD/LB)	Seat Front Motor Up Feed
2	–	NOT USED
3	1474 (RD/LG)	Seat Rear Motor Up Feed
4	1471 (RD/WH)	Seat Horizontal Motor Forward Feed
5	1491 (LB/YE)	Pedal Position Sensor Signal
6	1489 (LB/BK)	Pedal Motor Forward Feed
7	447 (OG/RD)	Seat and Pedal Position Sensor Return
8	–	NOT USED
9	446 (OG/WH)	Seat and Pedal Position Sensor Feed
10	1472 (YE/WH)	Seat Horizontal Motor Rearward Feed
11	1473 (YE/LG)	Seat Rear Motor Down Feed
12	1470 (YE/LB)	Seat Front Motor Down Feed
13	1490 (LB/OG)	Pedal Motor Rearward Feed
14	444 (LG/BK)	Seat Rear Position Sensor Signal
15	443 (LG/RD)	Seat Front Position Sensor Signal
16	442 (LG/OG)	Seat Horizontal Position Sensor Signal

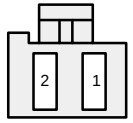

C375
DRIVER SEAT MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	1205 (BK)	Ground
2	566 (DG)	Power

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C216	14-1
C341	59-12