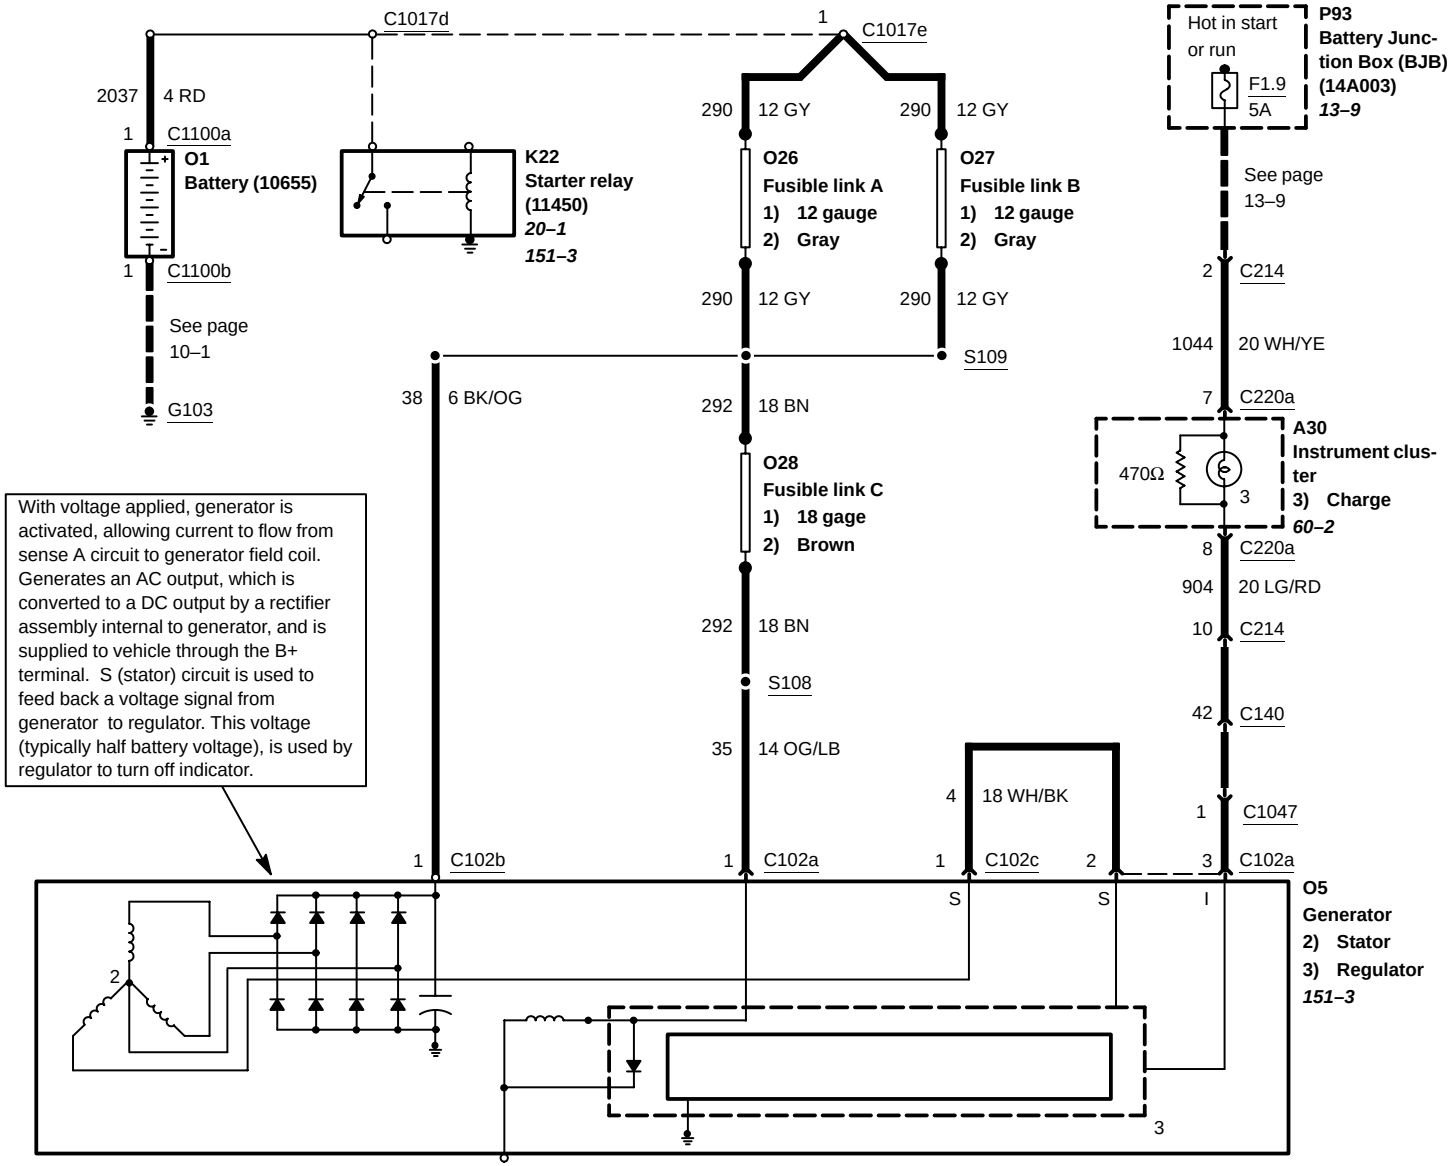
C1017d
1
C1017e
Hot in start or run
P93 Battery Junction Box (BJB) (14A003) 13–9
F1.9 5A
2037 4 RD
1 C1100a
O1 Battery (10655)
K22 Starter relay (11450) 20–1 151–3
290 12 GY
O26 Fusible link A 1) 12 gauge 2) Gray
O27 Fusible link B 1) 12 gauge 2) Gray
See page 13–9
2 C214
1044 20 WH/YE
7 C220a
A30 Instrument cluster 3) Charge 60–2
470Ω
3
8 C220a
904 20 LG/RD
10 C214
1 C1100b
See page 10–1
G103
S109
38 6 BK/OG
292 18 BN
O28 Fusible link C 1) 18 gage 2) Brown
S108
35 14 OG/LB
42 C140
4 18 WH/BK
1 C1047
With voltage applied, generator is activated, allowing current to flow from sense A circuit to generator field coil. Generates an AC output, which is converted to a DC output by a rectifier assembly internal to generator, and is supplied to vehicle through the B+ terminal. S (stator) circuit is used to feed back a voltage signal from generator to regulator. This voltage (typically half battery voltage), is used by regulator to turn off indicator.
1 C102b
1 C102a
1 C102c
2
3 C102a
S
S
I
O5 Generator 2) Stator 3) Regulator 151–3
2
3