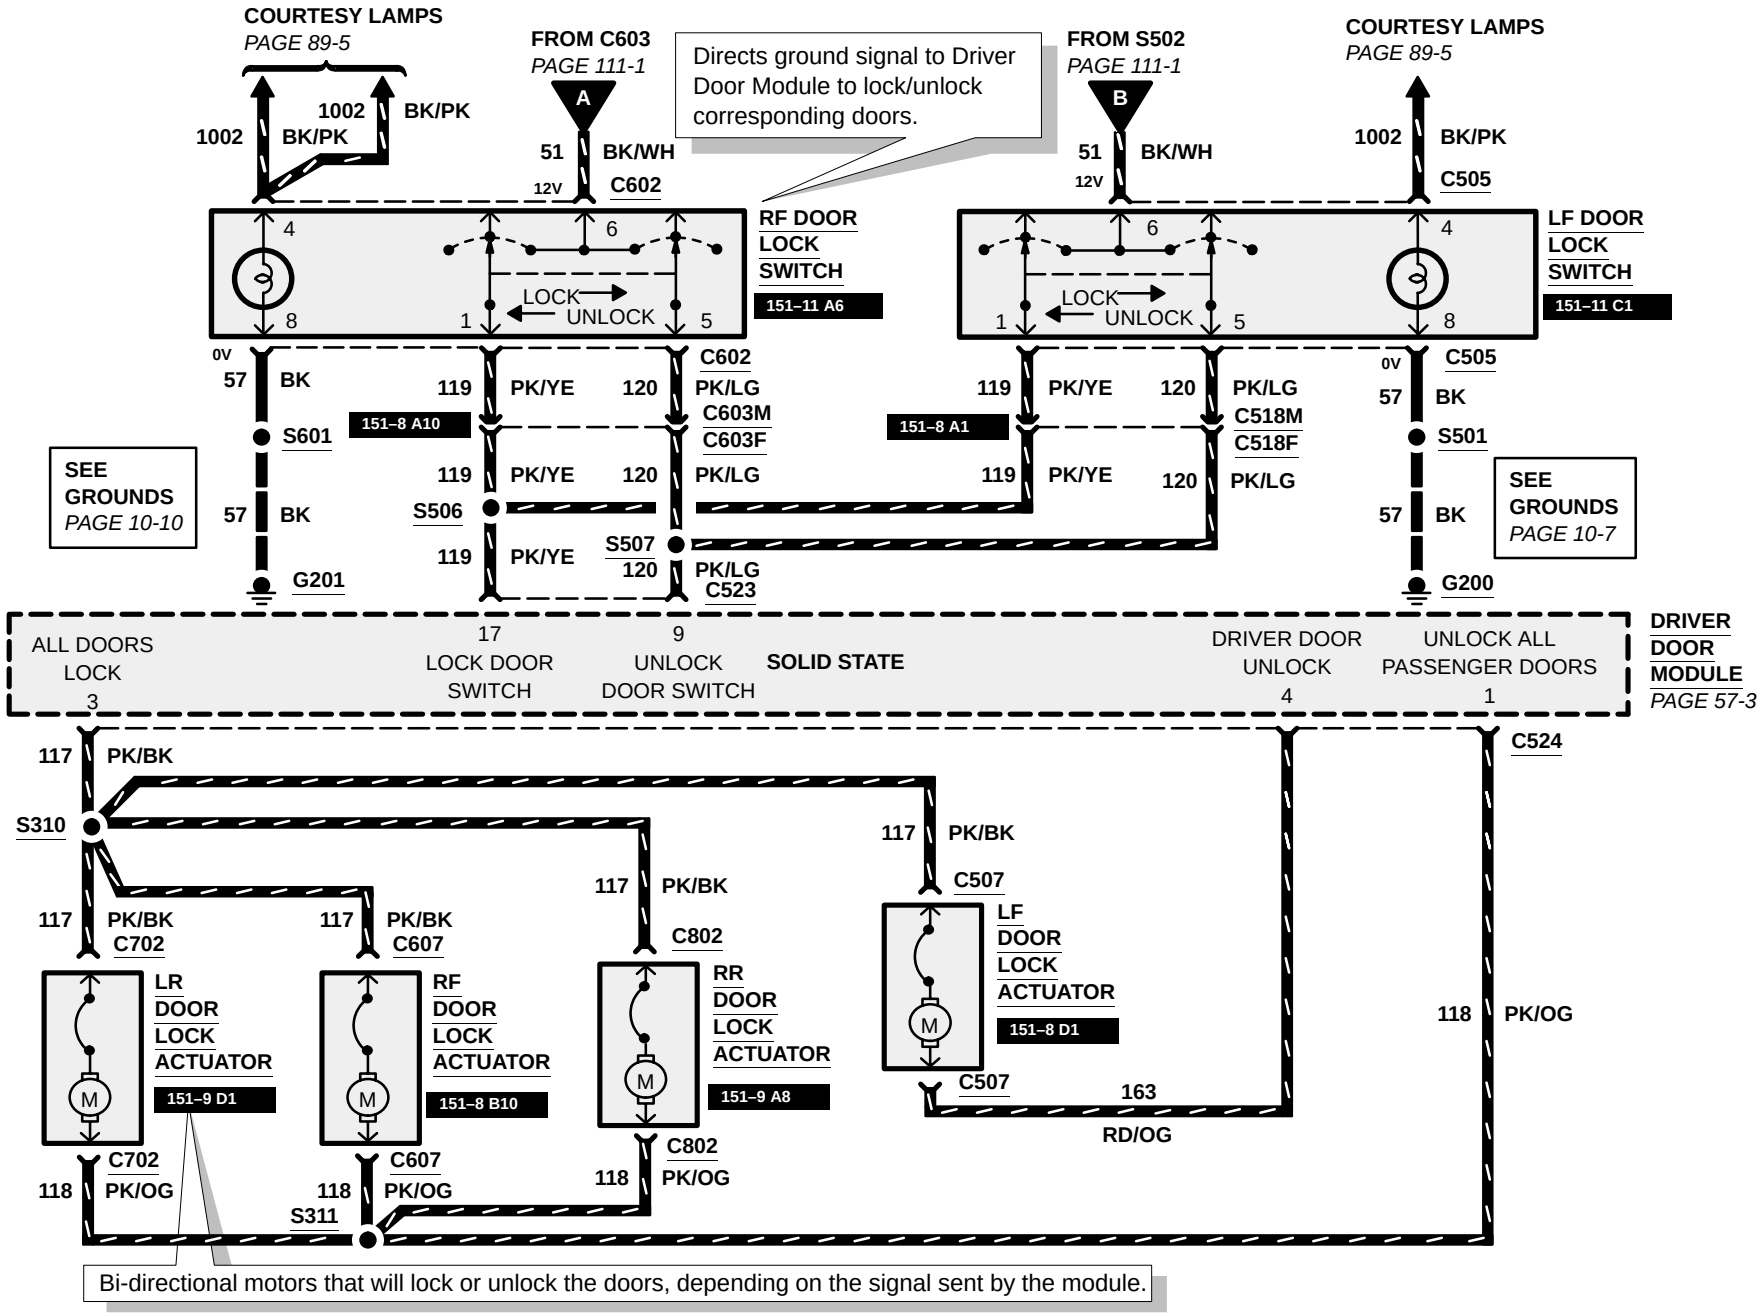
COURTESY LAMPS
PAGE 89-5
1002 BK/PK
1002 BK/PK
FROM C603
PAGE 111-1
A
51 BK/WH
12V
C602
Directs ground signal to Driver Door Module to lock/unlock corresponding doors.
FROM S502
PAGE 111-1
B
51 BK/WH
12V
COURTESY LAMPS
PAGE 89-5
1002 BK/PK
C505
RF DOOR LOCK SWITCH
151–11 A6
LF DOOR LOCK SWITCH
151–11 C1
LOCK
UNLOCK
0V
57 BK
S601
G201
SEE GROUNDS PAGE 10-10
119 PK/YE
120 PK/LG
C602
C603M
C603F
151–8 A10
S506
S507
C523
151–8 A1
C518M
C518F
C505
S501
G200
SEE GROUNDS PAGE 10-7
ALL DOORS LOCK
3
17 LOCK DOOR SWITCH
9 UNLOCK DOOR SWITCH
SOLID STATE
DRIVER DOOR UNLOCK
4
UNLOCK ALL PASSENGER DOORS
1
DRIVER DOOR MODULE
PAGE 57-3
117 PK/BK
S310
C524
C702
C607
C802
C507
LR DOOR LOCK ACTUATOR
151–9 D1
RF DOOR LOCK ACTUATOR
151–8 B10
RR DOOR LOCK ACTUATOR
151–9 A8
LF DOOR LOCK ACTUATOR
151–8 D1
118 PK/OG
163 RD/OG
S311
Bi-directional motors that will lock or unlock the doors, depending on the signal sent by the module.