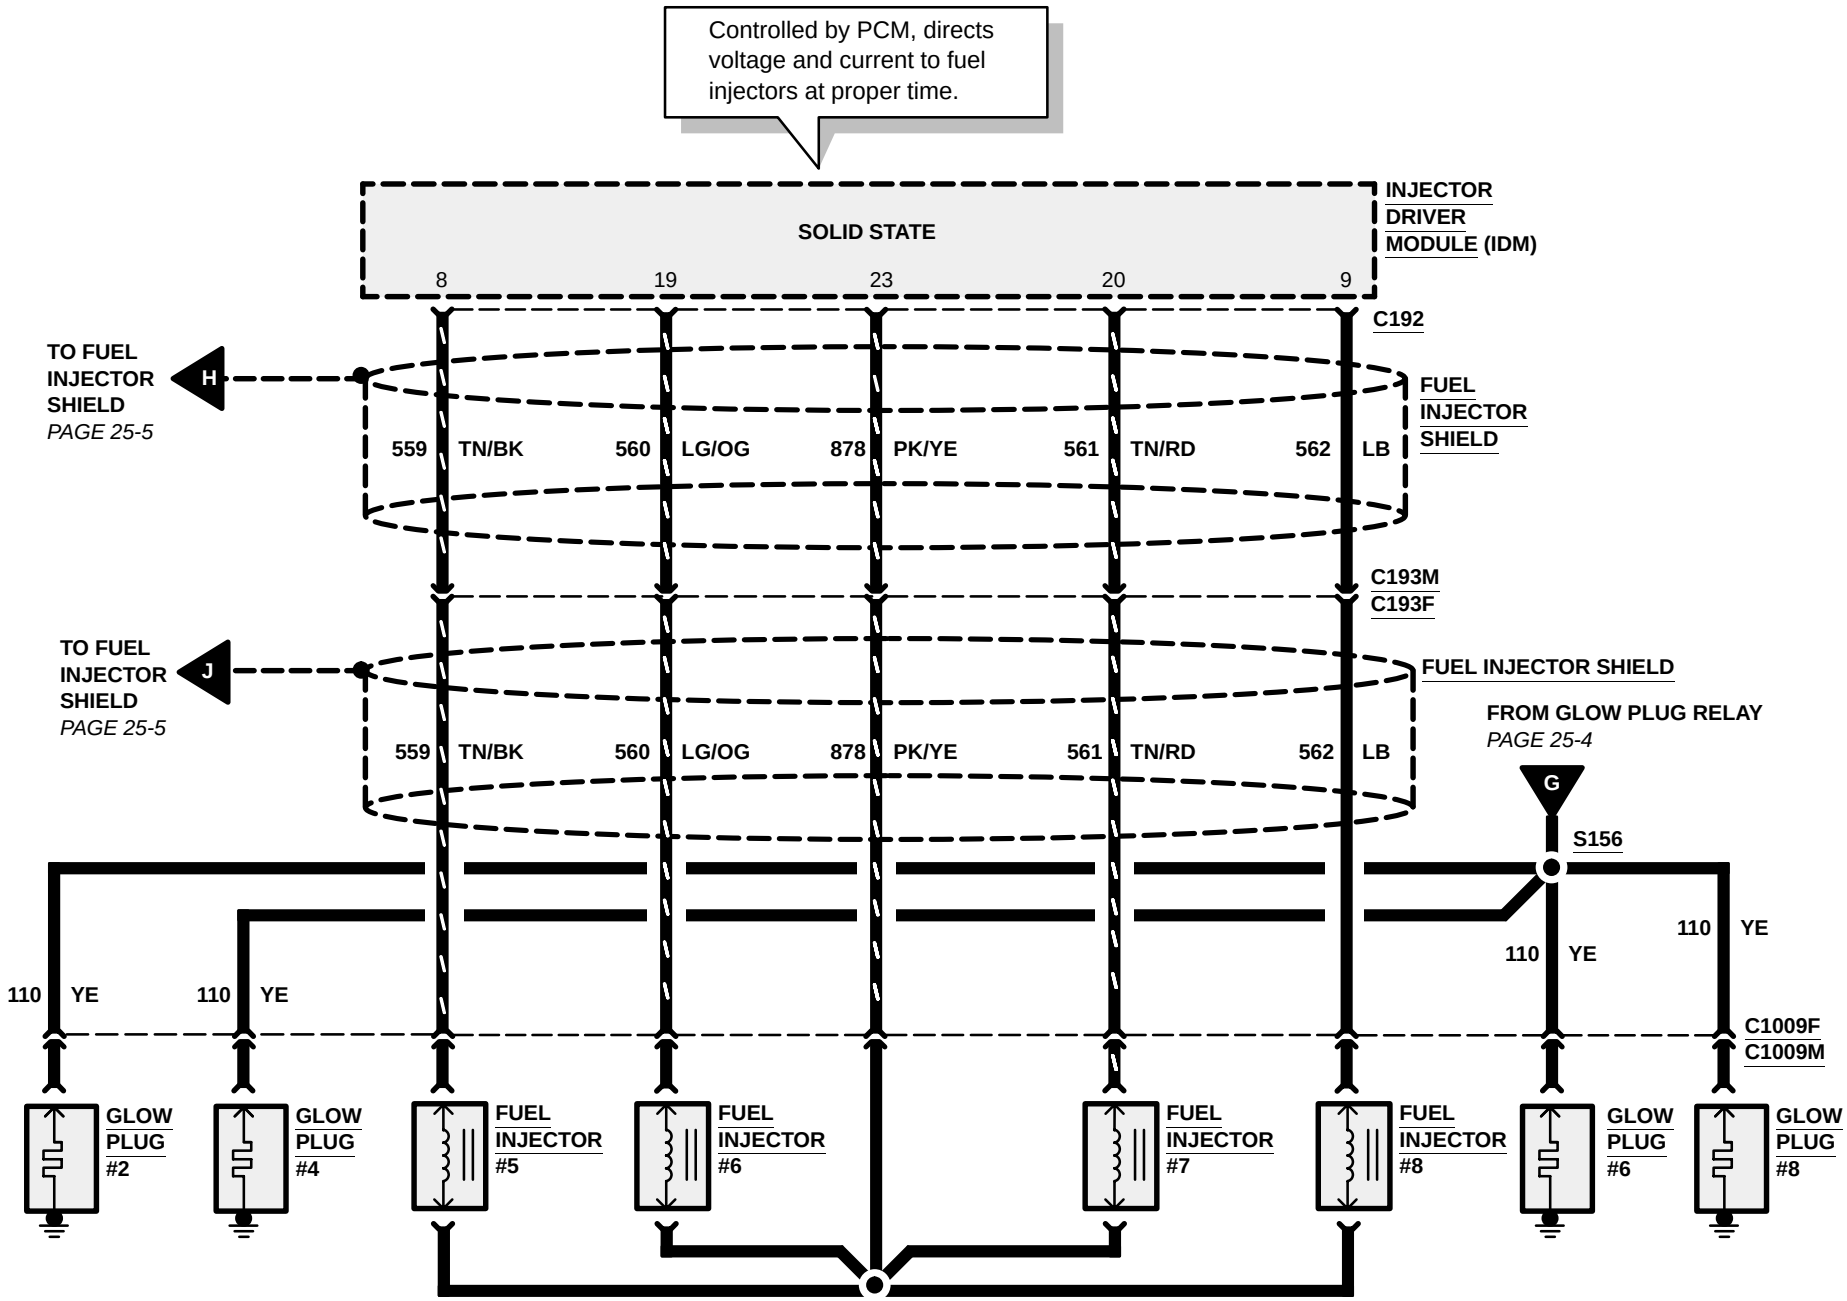
Controlled by PCM, directs voltage and current to fuel injectors at proper time.
SOLID STATE
INJECTOR DRIVER MODULE (IDM)
8
19
23
20
9
C192
TO FUEL INJECTOR SHIELD
H
PAGE 25-5
FUEL INJECTOR SHIELD
559 TN/BK
560 LG/OG
878 PK/YE
561 TN/RD
562 LB
C193M
C193F
TO FUEL INJECTOR SHIELD
J
PAGE 25-5
FUEL INJECTOR SHIELD
559 TN/BK
560 LG/OG
878 PK/YE
561 TN/RD
562 LB
FROM GLOW PLUG RELAY
PAGE 25-4
G
S156
110 YE
110 YE
110 YE
110 YE
C1009F
C1009M
GLOW PLUG #2
GLOW PLUG #4
FUEL INJECTOR #5
FUEL INJECTOR #6
FUEL INJECTOR #7
FUEL INJECTOR #8
GLOW PLUG #6
GLOW PLUG #8