C479 (BK)

18C620

Liftgate ajar switch

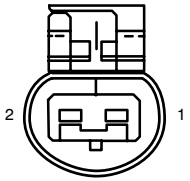

F02523

Pin	Circuit	Circuit function
1	700 (WH/VT)	Liftgate ajar switch
2	57 (BK)	Ground

C480 (WH)

17A413

Liftgate lock actuator

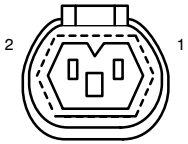

F02211

Pin	Circuit	Circuit function
1	117 (PK/BK)	Door lock, output
2	1016 (DB/YE)	Liftgate unlock relay, switched power

C481

13412

Side lamp, left rear (13411)

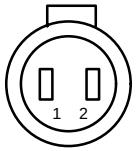

F02237

Pin	Circuit	Circuit function
1	14 (BN)	Power, Exterior lamps
2	57 (BK)	Ground

C482

13412

Side lamp, right rear (13411)

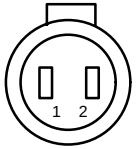

F02237

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	14 (BN)	Power, Exterior lamps

C483 (BK)

14A005

Anti–theft luggage compartment switch



F02207

Pin	Circuit	Circuit function
1	23 (TN/LG)	Anti–theft, switch sense
2	57 (BK)	Ground

C484 (BK)

14A005/18C620

Speaker, left rear (18808)

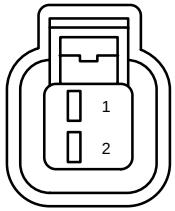

F02069

Pin	Circuit	Circuit function
1	800 (GY/LB)	Speaker, left rear (18808) +
2	801 (TN/YE)	Speaker, left rear (18808) -