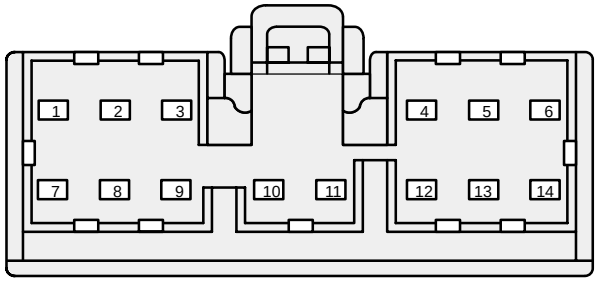


**C352**

**LF HEATED SEAT MODULE**

| PIN | CIRCUIT | CIRCUIT FUNCTION |
|---|---|---|
| 1 | 1020 (DG/VT) | Switch to Module - Cushion Enable |
| 2 | 462 (VT) | Module to Switch |
| 3 | 1018 (LG/OG) | Switch to Temperature Adjust (+) |
| 4 | 1019 (TN/LB) | Switch to Temperature Adjust (–) |
| 5 | 1060 (BK/LB) | Module to Seat Heating Sensor |
| 6 | 1061 (BN/LB) | Module to Seat Heating Sensor |
| 7 | 490 (RD) | Power (Hot at All Times) |
| 8 | 1064 (YE/LB) | Module to Seat Heating Element |
| 9 | 1066 (GY/LB) | Module to Seatback Heating Element |
| 10 | 1062 (RD/LB) | Module to Seatback Heating Sensor |
| 11 | 1063 (OG/LB) | Module to Seatback Heating Sensor |
| 12 | 1067 (VT/LB) | Module to Seatback Heating Element |
| 13 | 1065 (WH/LB) | Module to Seat Heating Element |
| 14 | 57 (BK) | Ground |

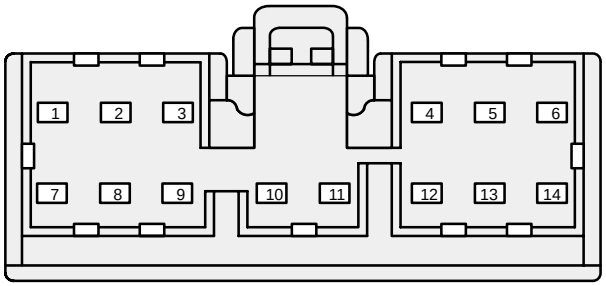


**C356**

**RF HEATED SEAT MODULE**

| PIN | CIRCUIT | CIRCUIT FUNCTION |
|---|---|---|
| 1 | 581 (RD) | Switch to Module - Cushion Enable |
| 2 | 461 (OG) | Module to Switch |
| 3 | 579 (BK/OG) | Switch Temperature and Adjust (+) |
| 4 | 580 (BN) | Switch Temperature and Adjust (–) |
| 5 | 1060 (BK/LB) | Module to Seat Heating Sensor |
| 6 | 1061 (BN/LB) | Module to Seat Heating Sensor |
| 7 | 566 (DG) | Power (Hot at All Times) |
| 8 | 1064 (YE/LB) | Module to Seat Heating Element |
| 9 | 1066 (GY/LB) | Module to Seatback Heating Element |
| 10 | 1062 (RD/LB) | Module to Seatback Heating Sensor |
| 11 | 1063 (OG/LB) | Module to Seatback Heating Sensor |
| 12 | 1067 (VT/LB) | Module to Seatback Heating Sensor |
| 13 | 1065 (WH/LB) | Module to Seat Heating Element |
| 14 | 57 (BK) | Ground |