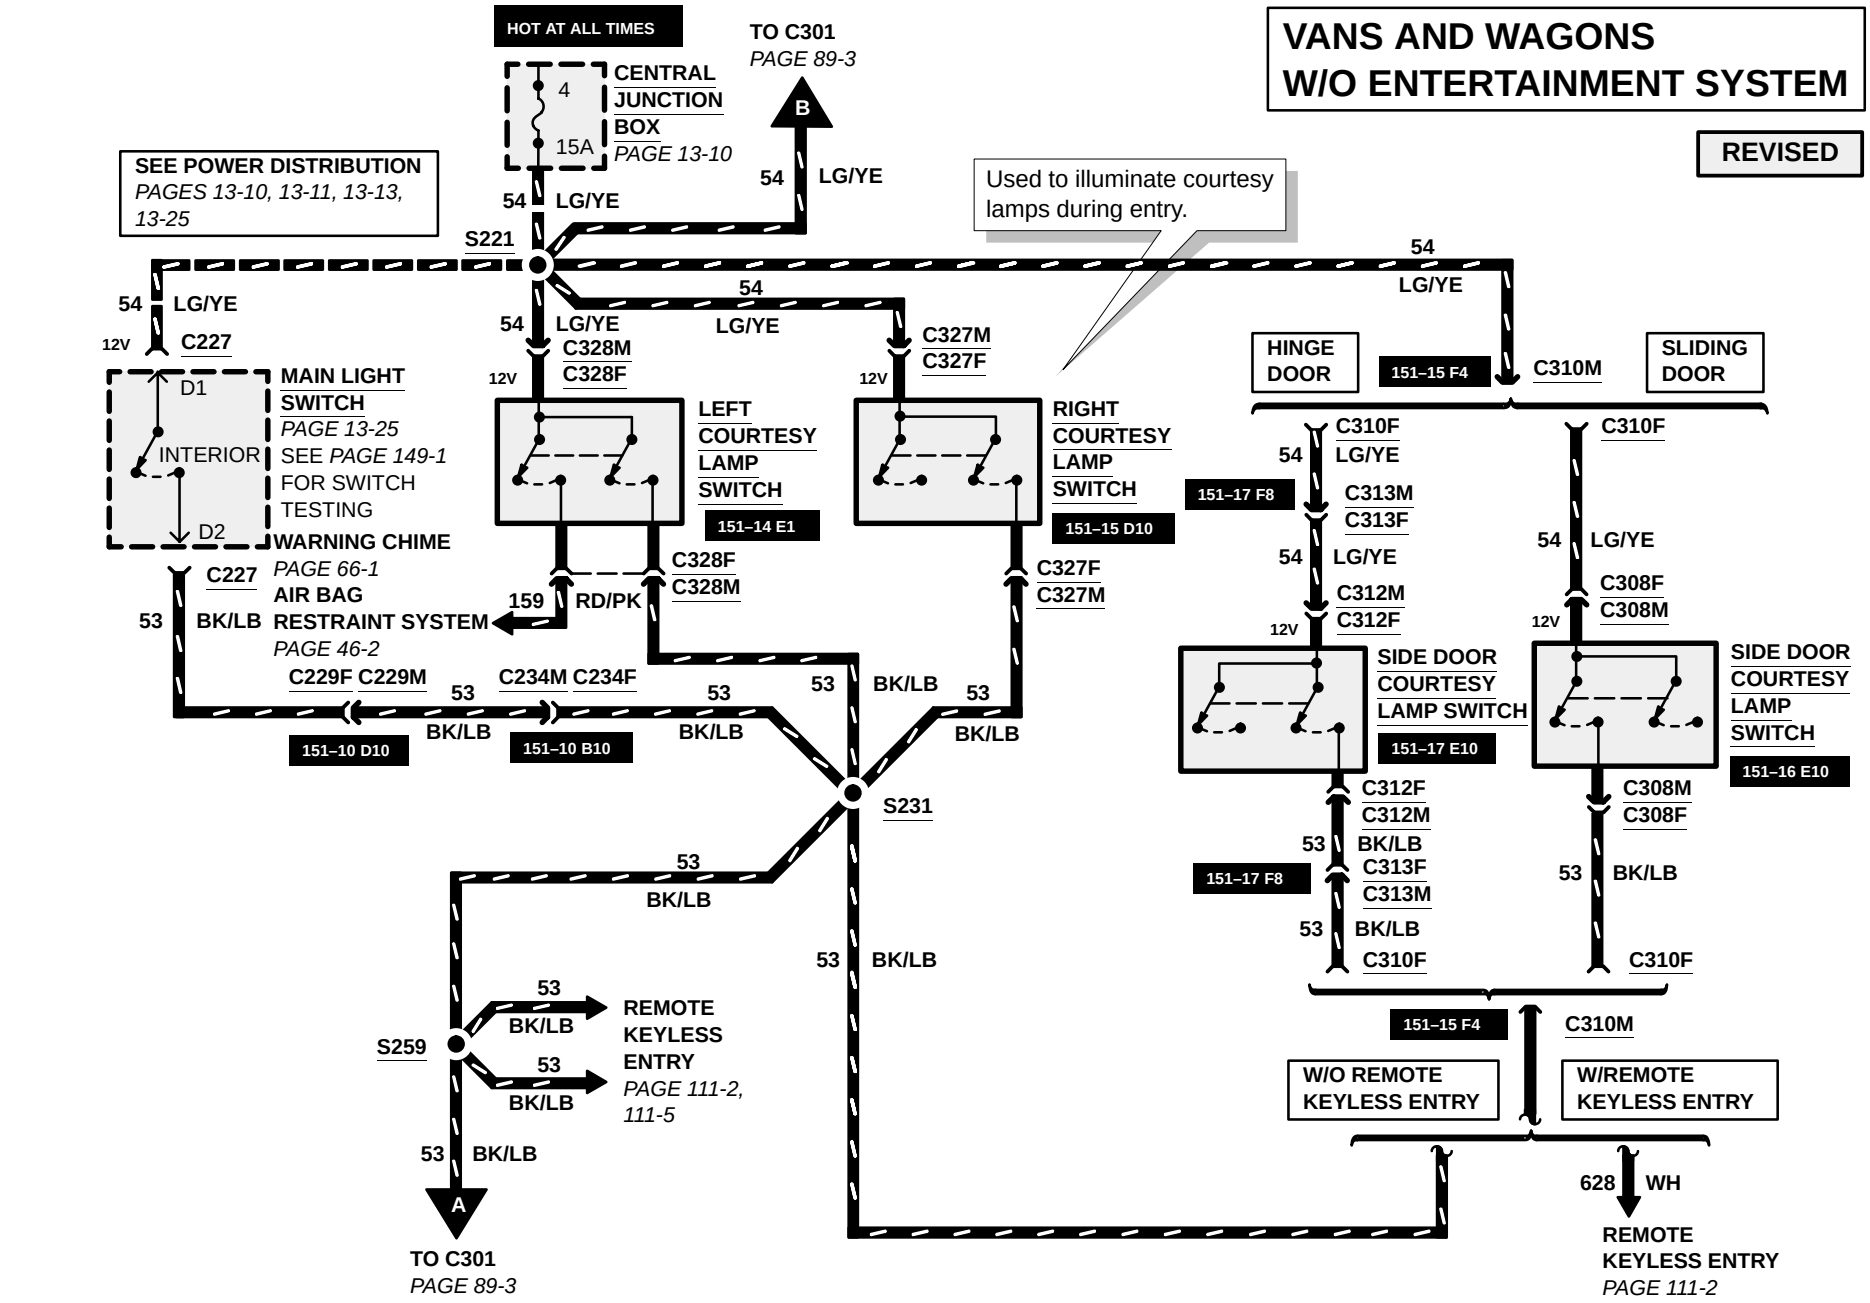
VANS AND WAGONS
W/O ENTERTAINMENT SYSTEM
REVISED
HOT AT ALL TIMES
TO C301
PAGE 89-3
CENTRAL JUNCTION BOX
PAGE 13-10
4
15A
B
54 LG/YE
SEE POWER DISTRIBUTION
PAGES 13-10, 13-11, 13-13, 13-25
Used to illuminate courtesy lamps during entry.
S221
54 LG/YE
12V
C227
MAIN LIGHT SWITCH
PAGE 13-25
SEE PAGE 149-1 FOR SWITCH TESTING
D1
INTERIOR
D2
WARNING CHIME
PAGE 66-1
AIR BAG RESTRAINT SYSTEM
PAGE 46-2
53 BK/LB
159 RD/PK
C328M C328F
C327M C327F
LEFT COURTESY LAMP SWITCH
151–14 E1
RIGHT COURTESY LAMP SWITCH
151–15 D10
HINGE DOOR
SLIDING DOOR
151–15 F4
C310M
C310F
C313M C313F
C312M C312F
C308M C308F
151–17 F8
SIDE DOOR COURTESY LAMP SWITCH
151–17 E10
SIDE DOOR COURTESY LAMP SWITCH
151–16 E10
C229F C229M
C234M C234F
151–10 D10
151–10 B10
S231
S259
REMOTE KEYLESS ENTRY
PAGE 111-2, 111-5
W/O REMOTE KEYLESS ENTRY
W/REMOTE KEYLESS ENTRY
628 WH
REMOTE KEYLESS ENTRY
PAGE 111-2
TO C301
PAGE 89-3