## 3.0L

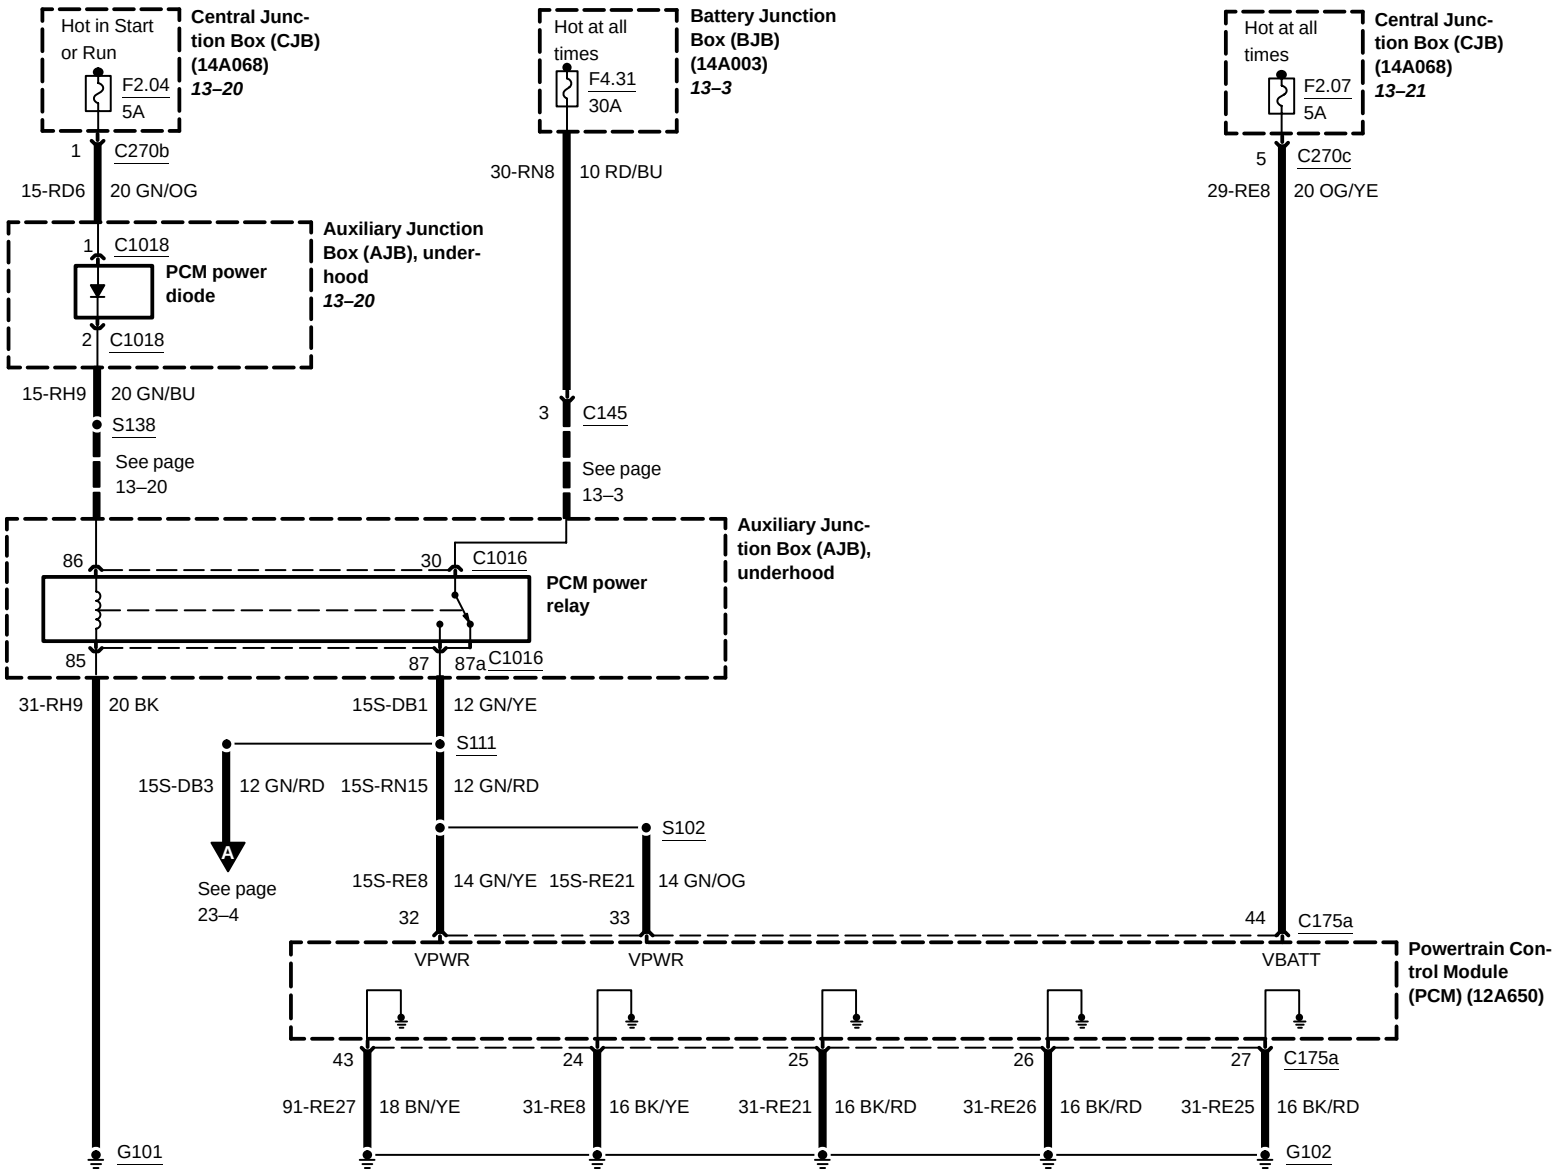
Hot in Start or Run
F2.04
5A
Central Junction Box (CJB) (14A068) 13–20
1
C270b
15-RD6
20 GN/OG
Hot at all times
F4.31
30A
Battery Junction Box (BJB) (14A003) 13–3
30-RN8
10 RD/BU
Hot at all times
F2.07
5A
Central Junction Box (CJB) (14A068) 13–21
5
C270c
29-RE8
20 OG/YE
Auxiliary Junction Box (AJB), underhood 13–20
1
C1018
PCM power diode
2
C1018
15-RH9
20 GN/BU
S138
See page 13–20
3
C145
See page 13–3
Auxiliary Junction Box (AJB), underhood
86
30
C1016
PCM power relay
85
87
87a
C1016
31-RH9
20 BK
15S-DB1
12 GN/YE
S111
15S-DB3
12 GN/RD
15S-RN15
12 GN/RD
A
See page 23–4
S102
15S-RE8
14 GN/YE
15S-RE21
14 GN/OG
32
33
44
C175a
VPWR
VPWR
VBATT
Powertrain Control Module (PCM) (12A650)
43
24
25
26
27
C175a
91-RE27
18 BN/YE
31-RE8
16 BK/YE
31-RE21
16 BK/RD
31-RE26
16 BK/RD
31-RE25
16 BK/RD
G101
G102