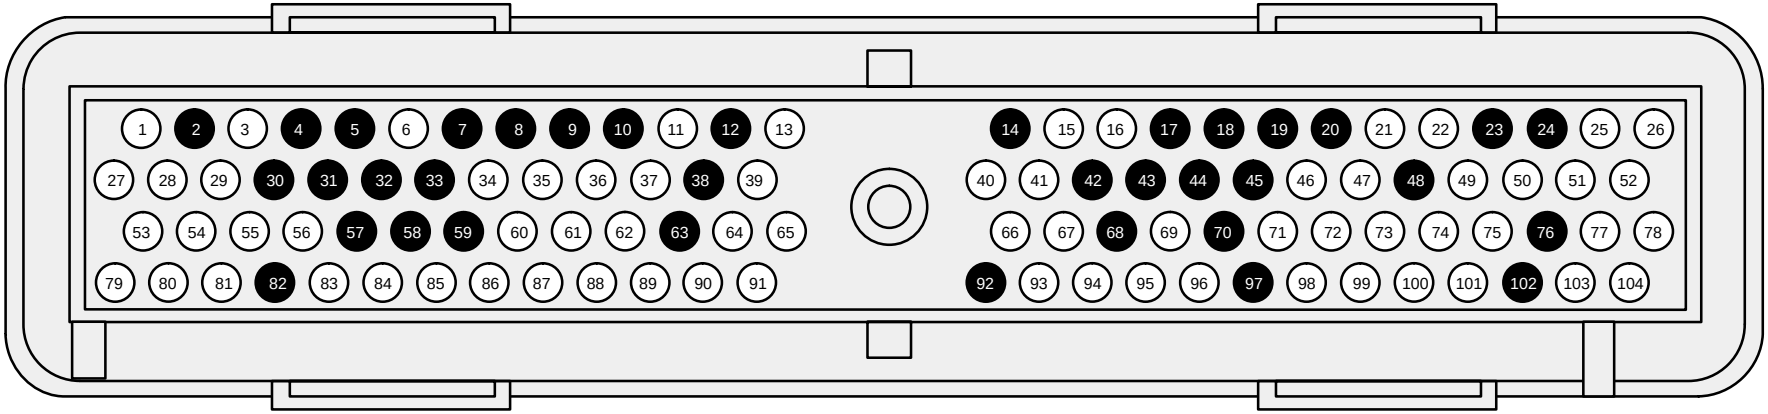

C185 (GRAY)
POWERTRAIN CONTROL MODULE (PCM)

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	1025 (OG/YE)	Coil on Plug #6	39	743 (GY)	Intake Air Temperature (IAT) Input
2	–	NOT USED	40	238 (DG/YE)	Fuel Pump Monitor
3	570 (BK/WH)	Power Ground	41	347 (BK/YE)	A/C Clutch Signal
4	–	NOT USED	42	–	NOT USED
5	–	NOT USED	43	–	NOT USED
6	237 (OG/YE)	Shift Solenoid A	44	–	NOT USED
7	–	NOT USED	45	–	NOT USED
8	–	NOT USED	46	639 (LG/VT)	Cooling Fan High
9	–	NOT USED	47	360 (BN/PK)	EGR Vacuum Regulator (EVR) Solenoid
10	–	NOT USED	48	–	NOT USED
11	315 (VT/OG)	Shift Solenoid B	49	1145 (LB/BK)	DTR Sensor TR2
12	–	NOT USED	50	1143 (WH/BK)	DTR Sensor TR4
13	107 (VT)	Flash EPROM Power Supply	51	570 (BK/WH)	Power Ground
14	–	NOT USED	52	1028 (WH/PK)	Coil on Plug #3
15	915 (PK/LB)	Data Link to DLC Test Connector (–)	53	1030 (DG/VT)	Coil on Plug #4
16	914 (TN/OG)	Data Link to DLC Test Connector (+)	54	126 (VT/YE)	Torque Converter Clutch (TCC) Solenoid
17	–	NOT USED	55	729 (RD/WH)	Power (Hot at all Times)
18	–	NOT USED	56	191 (LG/BK)	EVAP Canister Purge (EVR) Solenoid
19	–	NOT USED	57	–	NOT USED
20	–	NOT USED	58	–	NOT USED
21	138 (BK/PK)	Crankshaft Position (CKP) Sensor (+)	59	–	NOT USED
22	139 (GY/YE)	Crankshaft Position (CKP) Sensor (–)	60	74 (GY/LB)	RF Heated Oxygen Sensor (HO2S)
23	–	NOT USED	61	393 (VT/LG)	LR Heated Oxygen Sensor (HO2S)
24	–	NOT USED **REVISED**	62	791 (RD/PK)	Fuel Tank Pressure Transducer to PCM
25	–	NOT USED	63	–	NOT USED
26	1024 (LG/WH)	Coil on Plug #1	64	199 (LB/YE)	Transmission Range (TR) Sensor Input
27	1021 (LG/YE)	Coil on Plug #5	65	352 (BN/LG)	Differential Pressure Feedback EGR (DPFE) Input
28	229 (RD/OG)	Cooling Fan Low			
29	224 (TN/WH)	Transmission Control Switch (TCS)	66	1102 (YE/LG)	Cylinder Head Temperature (CHT) Sensor
30	–	NOT USED	67	91 (VT/WH)	PCM to Canister Vent
31	–	NOT USED	68	–	NOT USED
32	–	NOT USED	69	73 (OG/LB)	A/C Clutch Relay
33	–	NOT USED	70	–	NOT USED
34	1144 (YE/BK)	DTR Sensor TR1	71	361 (RD)	Power (Hot in Start or Run)
35	392 (RD/LG)	RR Heated Oxygen Sensor (HO2S)	72	561 (TN/RD)	Fuel Injector #7
36	968 (TN/LB)	Mass Air Flow (MAF) Return	73	559 (TN/BK)	Fuel Injector #5
37	923 (OG/BK)	Transmission Fluid Temperature (TFT)	74	557 (BN/YE)	Fuel Injector #3
38	–	NOT USED	75	555 (TN)	Fuel Injector #1

PIN	CIRCUIT	CIRCUIT FUNCTION
76	–	NOT USED
77	570 (BK/WH)	Power Ground
78	1027 (PK/LB)	Coil on Plug #7
79	1029 (WH/RD)	Coil on Plug #8
80	926 (LB/OG)	Fuel Pump Control
81	925 (WH/YE)	Electronic Pressure Control (EPC)
82	–	NOT USED
83	264 (WH/LB)	Idle Air Control (IAC) Valve Output
84	136 (DB/YE)	Output Shaft Speed (OSS) Sensor (+)
85	282 (DB/OG)	Camshaft Position (CMP) Sensor Output
86	1154 (WH/BK)	A/C High Pressure Cutout Switch
87	94 (RD/BK)	LF Heated Oxygen Sensor (HO2S)
88	967 (LB/RD)	Mass Air Flow (MAF) Sensor
89	355 (GY/WH)	Throttle Position (TP) Sensor
90	351 (BN/WH)	Vehicle Reference Voltage
91	359 (GY/RD)	Signal Return
92	–	NOT USED
93	387 (RD/WH)	RF Heated Oxygen Sensor (HO2S)
94	388 (YE/LB)	LF Heated Oxygen Sensor (HO2S)
95	389 (WH/BK)	RR Heated Oxygen Sensor (HO2S)
96	390 (TN/YE)	LR Heated Oxygen Sensor (HO2S)
97	–	NOT USED
98	562 (LB)	Fuel Injector #8
99	560 (LG/OG)	Fuel Injector #6
100	558 (BN/LB)	Fuel Injector #4
101	556 (WH)	Fuel Injector #2
102	–	NOT USED
103	570 (BK/WH)	Power Ground
104	1026 (PK/WH)	Coil on Plug #2

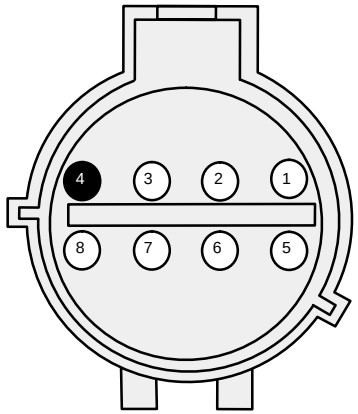

C464
FUEL TANK ASSEMBLY

PIN	CIRCUIT	CIRCUIT FUNCTION
1	351 (BN/WH)	Power to Engine Sensors
2	791 (RD/PK)	Fuel Tank Pressure Transducer to PCM
3	359 (GY/RD)	Sensor Signal Return
4	–	NOT USED
5	676 (PK/OG)	Ground
6	787 (PK/BK)	Fuel Pump Power
7	57 (BK)	Ground
8	29 (YE/WH)	Fuel Gauge to Fuel Gauge Sender