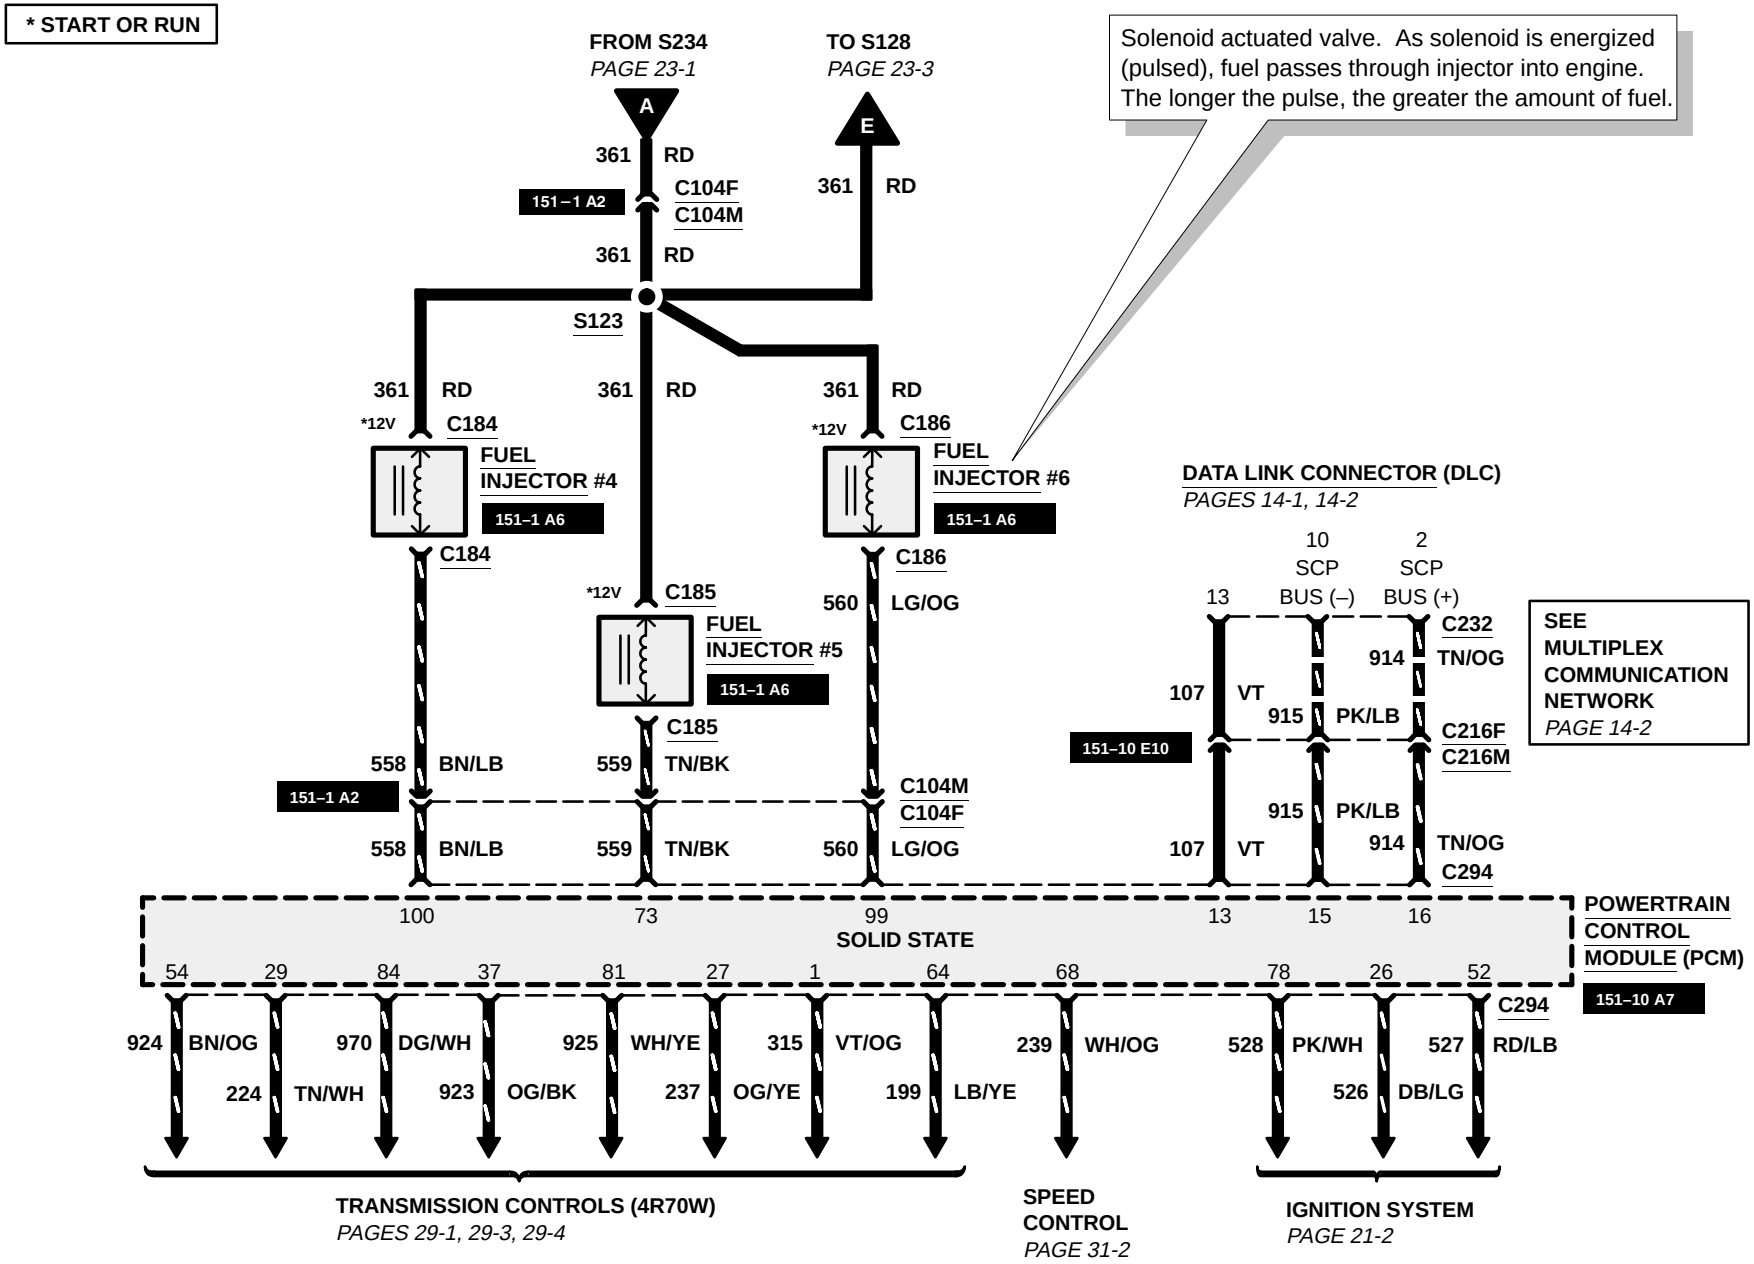
* START OR RUN
FROM S234
PAGE 23-1
TO S128
PAGE 23-3
A
E
Solenoid actuated valve. As solenoid is energized (pulsed), fuel passes through injector into engine. The longer the pulse, the greater the amount of fuel.
361 RD
151–1 A2
C104F
C104M
361 RD
361 RD
S123
361 RD
361 RD
361 RD
*12V
C184
FUEL INJECTOR #4
151–1 A6
*12V
C186
FUEL INJECTOR #6
151–1 A6
C184
*12V
C185
FUEL INJECTOR #5
151–1 A6
C186
560 LG/OG
C185
558 BN/LB
559 TN/BK
151–1 A2
C104M
C104F
558 BN/LB
559 TN/BK
560 LG/OG
DATA LINK CONNECTOR (DLC)
PAGES 14-1, 14-2
10 SCP BUS (–)
2 SCP BUS (+)
13
C232
914 TN/OG
107 VT
915 PK/LB
C216F
C216M
151–10 E10
915 PK/LB
107 VT
914 TN/OG
C294
SEE MULTIPLEX COMMUNICATION NETWORK
PAGE 14-2
100
73
99
13
15
16
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–10 A7
54 29 84 37 81 27 1 64 68 78 26 52
C294
924 BN/OG
224 TN/WH
970 DG/WH
923 OG/BK
925 WH/YE
237 OG/YE
315 VT/OG
199 LB/YE
239 WH/OG
528 PK/WH
526 DB/LG
527 RD/LB
TRANSMISSION CONTROLS (4R70W)
PAGES 29-1, 29-3, 29-4
SPEED CONTROL
PAGE 31-2
IGNITION SYSTEM
PAGE 21-2