EXCURSION

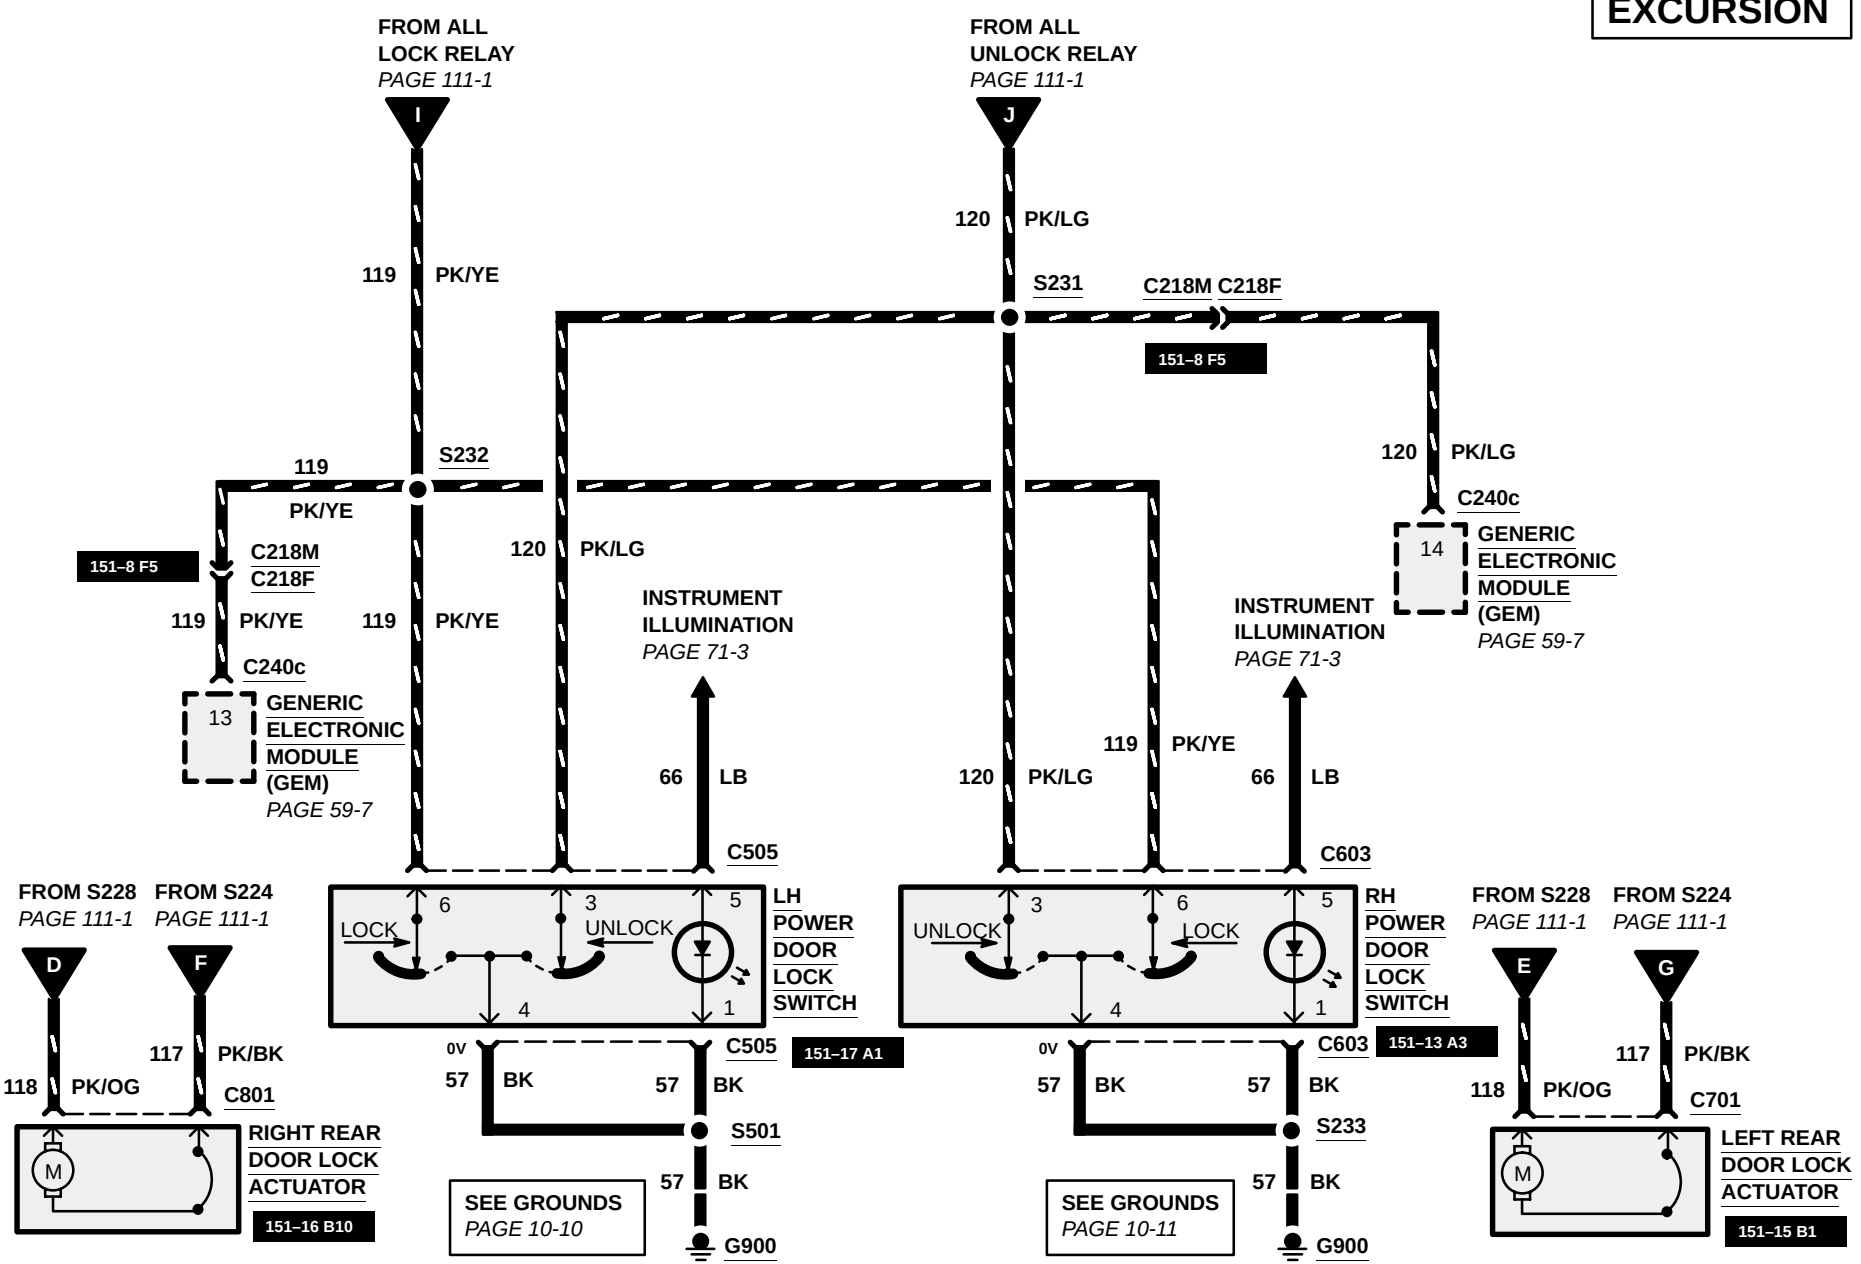
FROM ALL LOCK RELAY
PAGE 111-1
FROM ALL UNLOCK RELAY
PAGE 111-1
I
J
119 PK/YE
120 PK/LG
S231
C218M C218F
151–8 F5
119 PK/YE
S232
120 PK/LG
C240c
14
GENERIC ELECTRONIC MODULE (GEM)
PAGE 59-7
151–8 F5
C218M
C218F
119 PK/YE
119 PK/YE
120 PK/LG
INSTRUMENT ILLUMINATION
PAGE 71-3
INSTRUMENT ILLUMINATION
PAGE 71-3
C240c
13
GENERIC ELECTRONIC MODULE (GEM)
PAGE 59-7
66 LB
119 PK/YE
120 PK/LG
66 LB
C505
C603
FROM S228
PAGE 111-1
FROM S224
PAGE 111-1
LOCK
UNLOCK
LH POWER DOOR LOCK SWITCH
RH POWER DOOR LOCK SWITCH
FROM S228
PAGE 111-1
FROM S224
PAGE 111-1
D
F
E
G
117 PK/BK
118 PK/OG
C801
0V
57 BK
C505
151–17 A1
C603
151–13 A3
117 PK/BK
118 PK/OG
C701
S501
S233
57 BK
SEE GROUNDS
PAGE 10-10
SEE GROUNDS
PAGE 10-11
G900
RIGHT REAR DOOR LOCK ACTUATOR
151–16 B10
LEFT REAR DOOR LOCK ACTUATOR
151–15 B1