* SUPERCREWZER

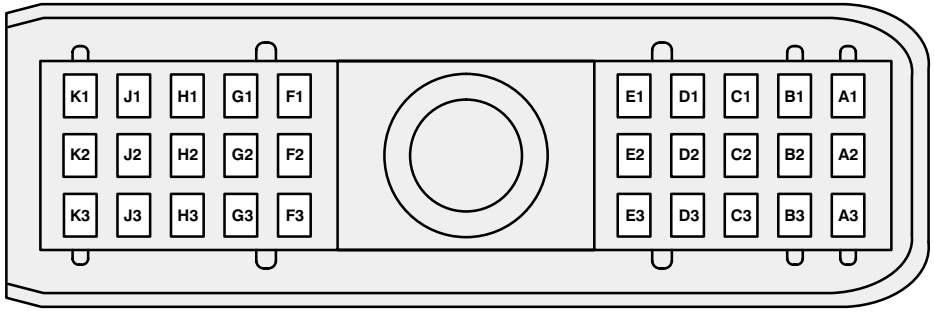


**C365**

**VEHICLE INTERFACE MODULE (VIM)**

| PIN | CIRCUIT | CIRCUIT FUNCTION | PIN | CIRCUIT | CIRCUIT FUNCTION |
|---|---|---|---|---|---|
| A1 | 167 (BN/OG) | To Reversing Lamps | F1 | 325 (DB/OG) | Starter Relay |
| A2 | * 50 (RD) | Trailer Controller Feed | F2 | * 50 (RD) | Trailer Controller Feed |
| A3 | * 50 (RD) | Trailer Controller Feed | F3 | * 50 (RD) | Trailer Controller Feed |
| B1 | 167 (BN/OG) | Reversing Lamps Power (Hot in Run) | G1 | 325 (DB/OG) | Power (Hot in Start) |
| B2 | * 50 (RD) | Trailer Controller Feed | G2 | * 50 (RD) | Trailer Controller Feed |
| B3 | * 50 (RD) | Trailer Controller Feed | G3 | * 50 (RD) | Trailer Controller Feed |
| C1 | 1290 (WH/OG) | Power (Hot in Start or Run) | H1 | * 50 (RD) | Trailer Controller Feed |
| C2 | * 50 (RD) | Trailer Controller Feed | H2 | * 50 (RD) | Trailer Controller Feed |
| C3 | * 50 (RD) | Trailer Controller Feed | H3 | * 50 (RD) | Trailer Controller Feed |
| D1 | * 1065 (WH/LB) | Heated Seat Heater Element Return | J1 | 391 (RD/YE) | Power (Hot at All Times) |
| D2 | * 50 (RD) | Trailer Controller Feed | J2 | 391 (RD/YE) | Power (Hot at All Times) |
| D3 | * 50 (RD) | Trailer Controller Feed | J3 | * 50 (RD) | Trailer Controller Feed |
| E1 | 1066 (GY/LB) | Heated Seat Heater Element Feed | K1 | 570 (BK/WH) | Ground |
| E2 | 154 (PK/LG) | To Electronic Control Module | K2 | 570 (BK/WH) | Ground |
| E3 | 161 (DG/OG) | To Electronic Control Unit/Body Builder Connector | K3 | * 50 (RD) | Trailer Controller Feed |