3.9L

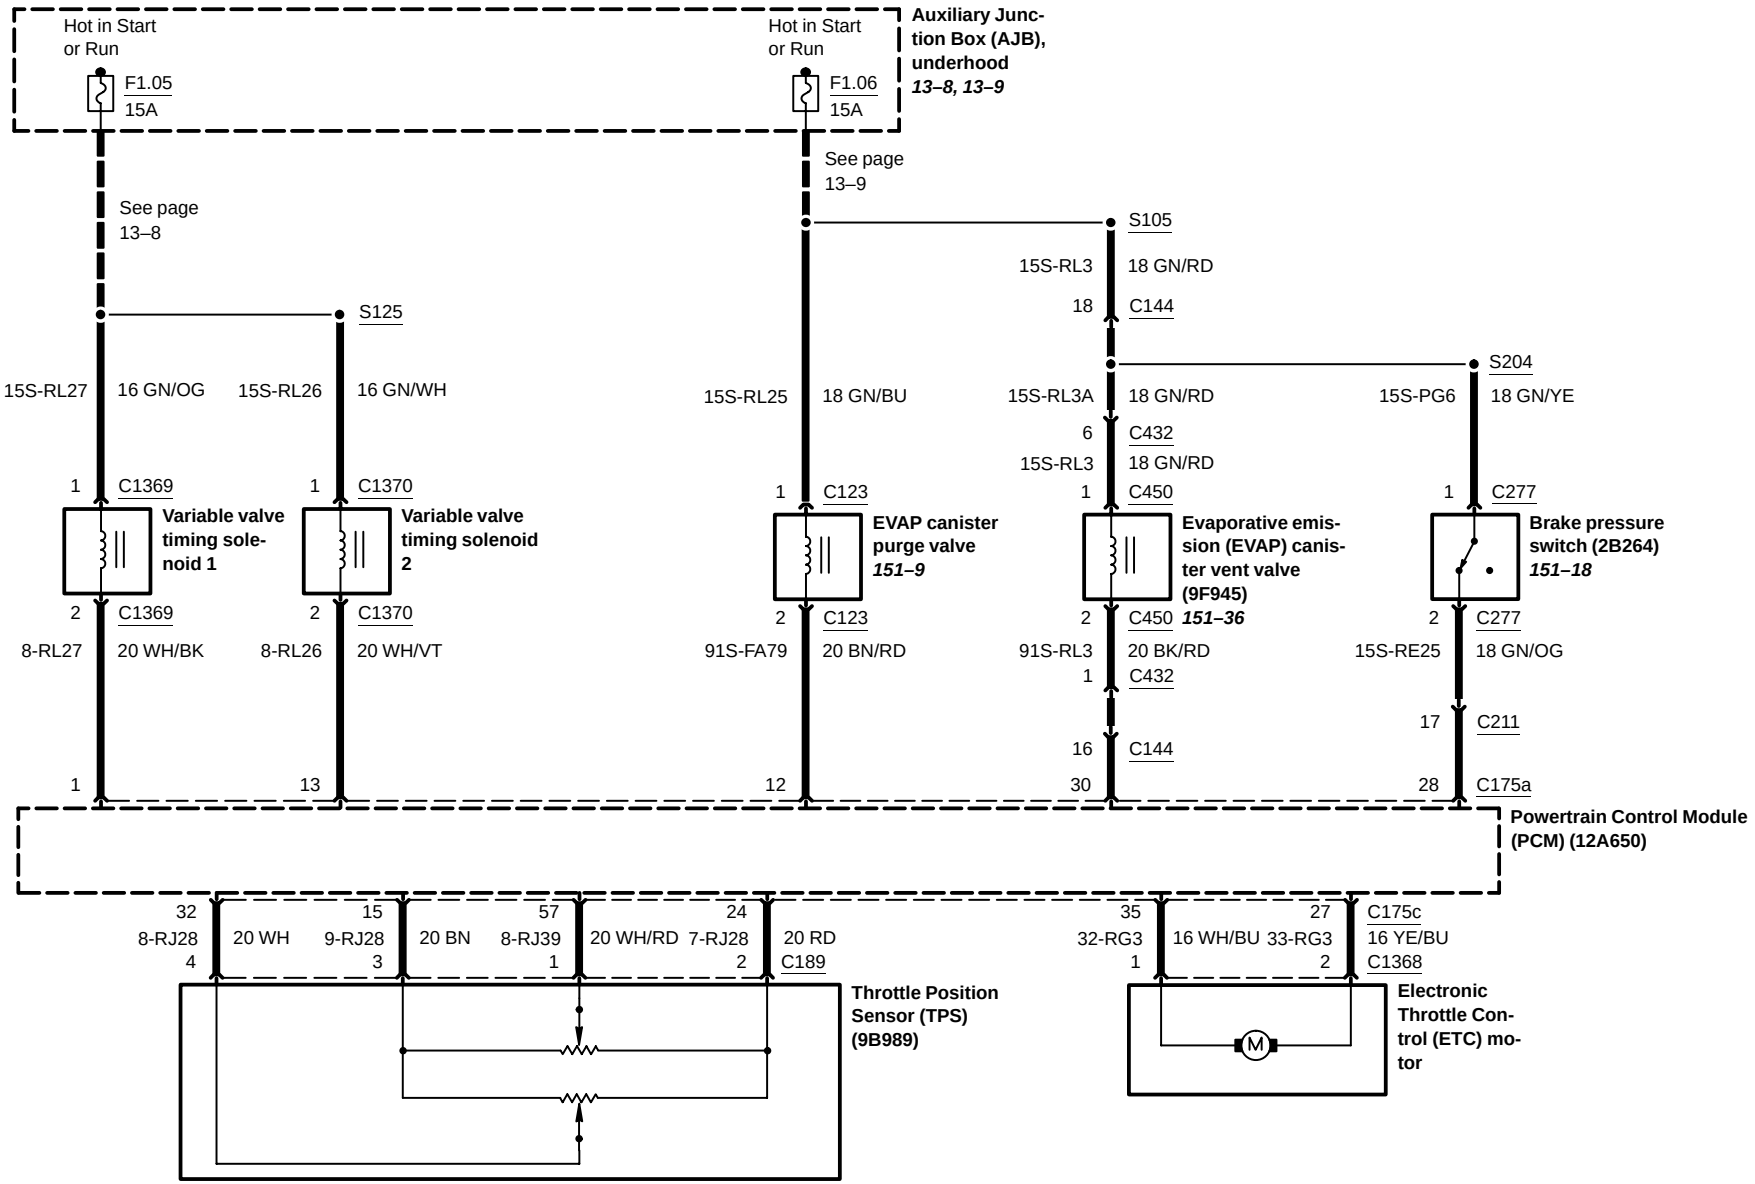
Hot in Start or Run
F1.05
15A
Hot in Start or Run
F1.06
15A
Auxiliary Junction Box (AJB), underhood
13–8, 13–9
See page 13–8
See page 13–9
S125
S105
S204
15S-RL27
16 GN/OG
15S-RL26
16 GN/WH
15S-RL25
18 GN/BU
15S-RL3
18 GN/RD
15S-RL3A
18 GN/RD
15S-PG6
18 GN/YE
18
C144
6
C432
1
C1369
1
C1370
1
C123
1
C450
1
C277
Variable valve timing solenoid 1
Variable valve timing solenoid 2
EVAP canister purge valve
151–9
Evaporative emission (EVAP) canister vent valve (9F945)
151–36
Brake pressure switch (2B264)
151–18
2
C1369
2
C1370
2
C123
2
C450
2
C277
8-RL27
20 WH/BK
8-RL26
20 WH/VT
91S-FA79
20 BN/RD
91S-RL3
20 BK/RD
15S-RE25
18 GN/OG
1
C432
17
C211
16
C144
1
13
12
30
28
C175a
Powertrain Control Module (PCM) (12A650)
32
8-RJ28
4
15
9-RJ28
3
57
8-RJ39
1
24
7-RJ28
2
20 WH
20 BN
20 WH/RD
20 RD
C189
35
32-RG3
1
27
33-RG3
2
C175c
16 WH/BU
16 YE/BU
C1368
Throttle Position Sensor (TPS) (9B989)
Electronic Throttle Control (ETC) motor
M