C329

14716

A223
Heated seat module, passenger side front

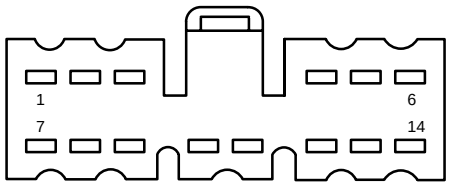

F14004

Pin	Circuit	Circuit Function
1	581 (RD)	Seat back heater, passenger side, to, Heated seat module, passenger side front
2	461 (OG)	Seat heater switch, passenger side, to, Heated seat module, passenger side front
3	579 (BK/OG)	Heated seats
4	580 (BN)	Heated seats
5	1060 (BK/LB)	Seat back heater, passenger side, Sensor, feed
6	1061 (BN/LB)	Seat back heater, passenger side, Sensor, return
7	566 (DG)	Voltage supplied at all times (overload protected)
8	1064 (YE/LB)	Seat back heater, passenger side, heater, feed
9	1066 (GY/LB)	Seat back heater, passenger side, feed
10	1062 (RD/LB)	Seat cushion heater, passenger side, Sensor, return
11	1063 (OG/LB)	Heated seat module, passenger side front
12	1067 (VT/LB)	Seat back heater, passenger side, heater, return
13	1065 (WH/LB)	Seat cushion heater, passenger side, heater, feed
14	57 (BK)	Ground

C331

14716

N446
Lumbar adjust switch, right front

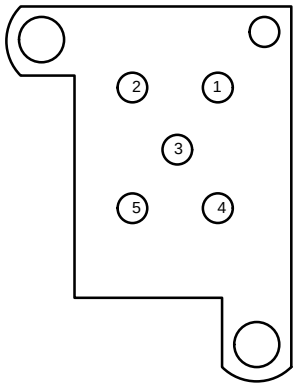

F05143

Pin	Circuit	Circuit Function
1	57 (BK)	Ground
2	1097 (BR)	Power lumbar switch, left, to, Front seat lumbar compressor motor
3	566 (DG)	Voltage supplied at all times (overload protected)
4	1094 (PK)	Power lumbar switch, left, to, Front seat lumbar compressor motor
5	57 (BK)	Ground

C335

14716

N32
Seat back heater, right front

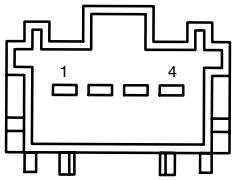

F04287

Pin	Circuit	Circuit Function
1	1066 (GY/LB)	Seat back heater, passenger side, feed
2	1062 (RD/LB)	Seat cushion heater, passenger side, Sensor, return
3	1063 (OG/LB)	Heated seat module, passenger side front
4	1067 (VT/LB)	Seat back heater, passenger side, heater, return

C334

14716

N30
Seat cushion heater, right front

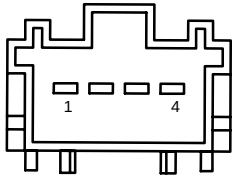

F04287

Pin	Circuit	Circuit Function
1	1064 (YE/LB)	Seat cushion heater, passenger side, heater, feed
2	1060 (BK/LB)	Seat cushion heater, passenger side, Sensor, feed
3	1061 (BN/LB)	Seat cushion heater, passenger side, Sensor, return
4	1065 (WH/LB)	Seat cushion heater, passenger side, heater, feed