C3036b

14B084

A292
Climate controlled seat module, passenger side

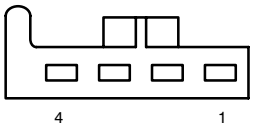

F04027

Pin	Circuit	Circuit function
1	–	not used
2	294 (WH/LB)	Voltage supplied in Start and Run (overload protected)
3	57 (BK)	Ground
4	1553 (RD/BK)	Voltage supplied at all times (overload protected)

C3037

14C719

N493
Climate controlled seat switch, passenger side

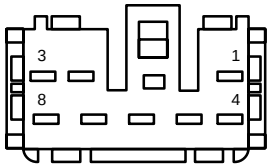

F08235

Pin	Circuit	Circuit function
1	–	not used
2	1255 (WH/RD)	Climate controlled seat module, driver side, to, Enable
3	–	not used
4	1019 (TN/LB)	Climate controlled seat switch, driver side, Temperature (–)
5	1018 (LG/OG)	Climate controlled seat switch, driver side, Temperature (+)
6	–	not used
7	1551 (VT/WH)	to Driver seat module
8	1550 (WH/OG)	Climate controlled seat module, to, Climate controlled seat switch, driver side

C3038

14C719

M268
Climate controlled seat fan, passenger side

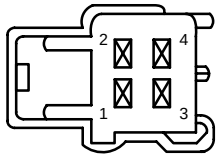

F04105

Pin	Circuit	Circuit function
1	1565 (VT)	Climate controlled seat module, to, Climate controlled seat fan, passenger side, feed
2	1554 (WH)	Climate controlled seat module, to, Climate controlled seat fan, passenger side, Sensor
3	1552 (RD)	Climate controlled seat module, to, Climate controlled seat fan, passenger side, Sensor
4	1553 (BK)	Seat position sensor – horizontal sense