* SUPERCREWZER

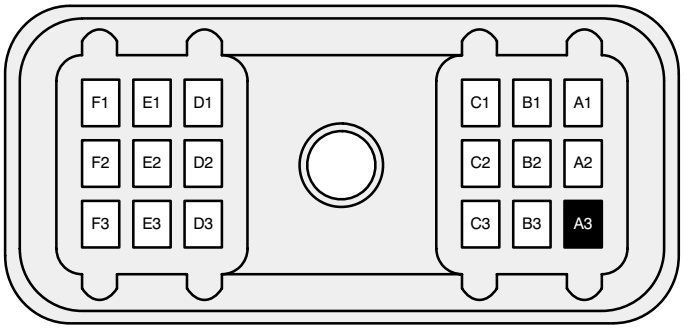

C364

VEHICLE INTERFACE MODULE (VIM)

PIN	CIRCUIT	CIRCUIT FUNCTION
A1	143 (LB/YE)	To Electronic Control Unit
A2	143 (LB/YE)	To Electronic Control Unit
A3	–	NOT USED
B1	3231 (OG/LB)	To ABS Module
B2	* 50 (RD)	Trailer Controller Feed
B3	* 50 (RD)	Trailer Controller Feed
C1	* 50 (RD)	Trailer Controller Feed
C2	* 132 (OG/BK)	Tail Lamp Bulb Outage to Message Center
C3	* 50 (RD)	Trailer Controller Feed
D1	123 (RD)	To Electronic Control Unit
D2	112 (BK/YE)	To Electronic Control Unit
D3	* 50 (RD)	Trailer Controller Feed
E1	136 (DB/YE)	To Electronic Control Unit
E2	136 (DB/YE)	To Electronic Control Unit
E3	* 50 (RD)	Trailer Controller Feed
F1	146 (WH/PK)	To Electronic Control Unit
F2	113 (YE/LB)	To Electronic Control Unit
F3	114 (YE/LB)	To Electronic Control Unit

* SUPERCREWZER

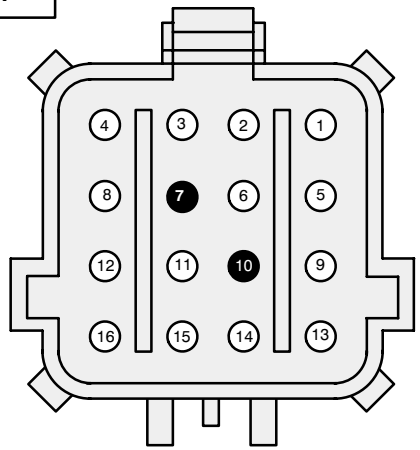

C366

BODY BUILDER CONNECTOR

PIN	CIRCUIT	CIRCUIT FUNCTION
1	118 (PK/OG)	To Electronic Control Unit
2	157 (PK/LB)	To Electronic Control Unit
3	167 (BN/OG)	To Electronic Control Unit
4	178 (DG/OG)	To Electronic Control Unit
5	105 (RD/WH)	To Electronic Control Unit
6	161 (DG/OG)	Digital Ground
7	–	NOT USED
8	177 (WH)	To Electronic Control Unit
9	153 (PK/YE)	To Electronic Control Unit
10	–	NOT USED
11	176 (PK/LG)	To Electronic Control Unit/Primary Shift Selector
	*–	NOT USED
12	166 (WH/OG)	To Electronic Control Unit
	*–	NOT USED
13	155 (GY/RD)	To Electronic Control Unit
14	*166 (WH/OG)	Reset Switch to Message Center
15	117 (PK/BK)	To Electronic Control Unit
16	137 (YE/BK)	To Electronic Control Unit