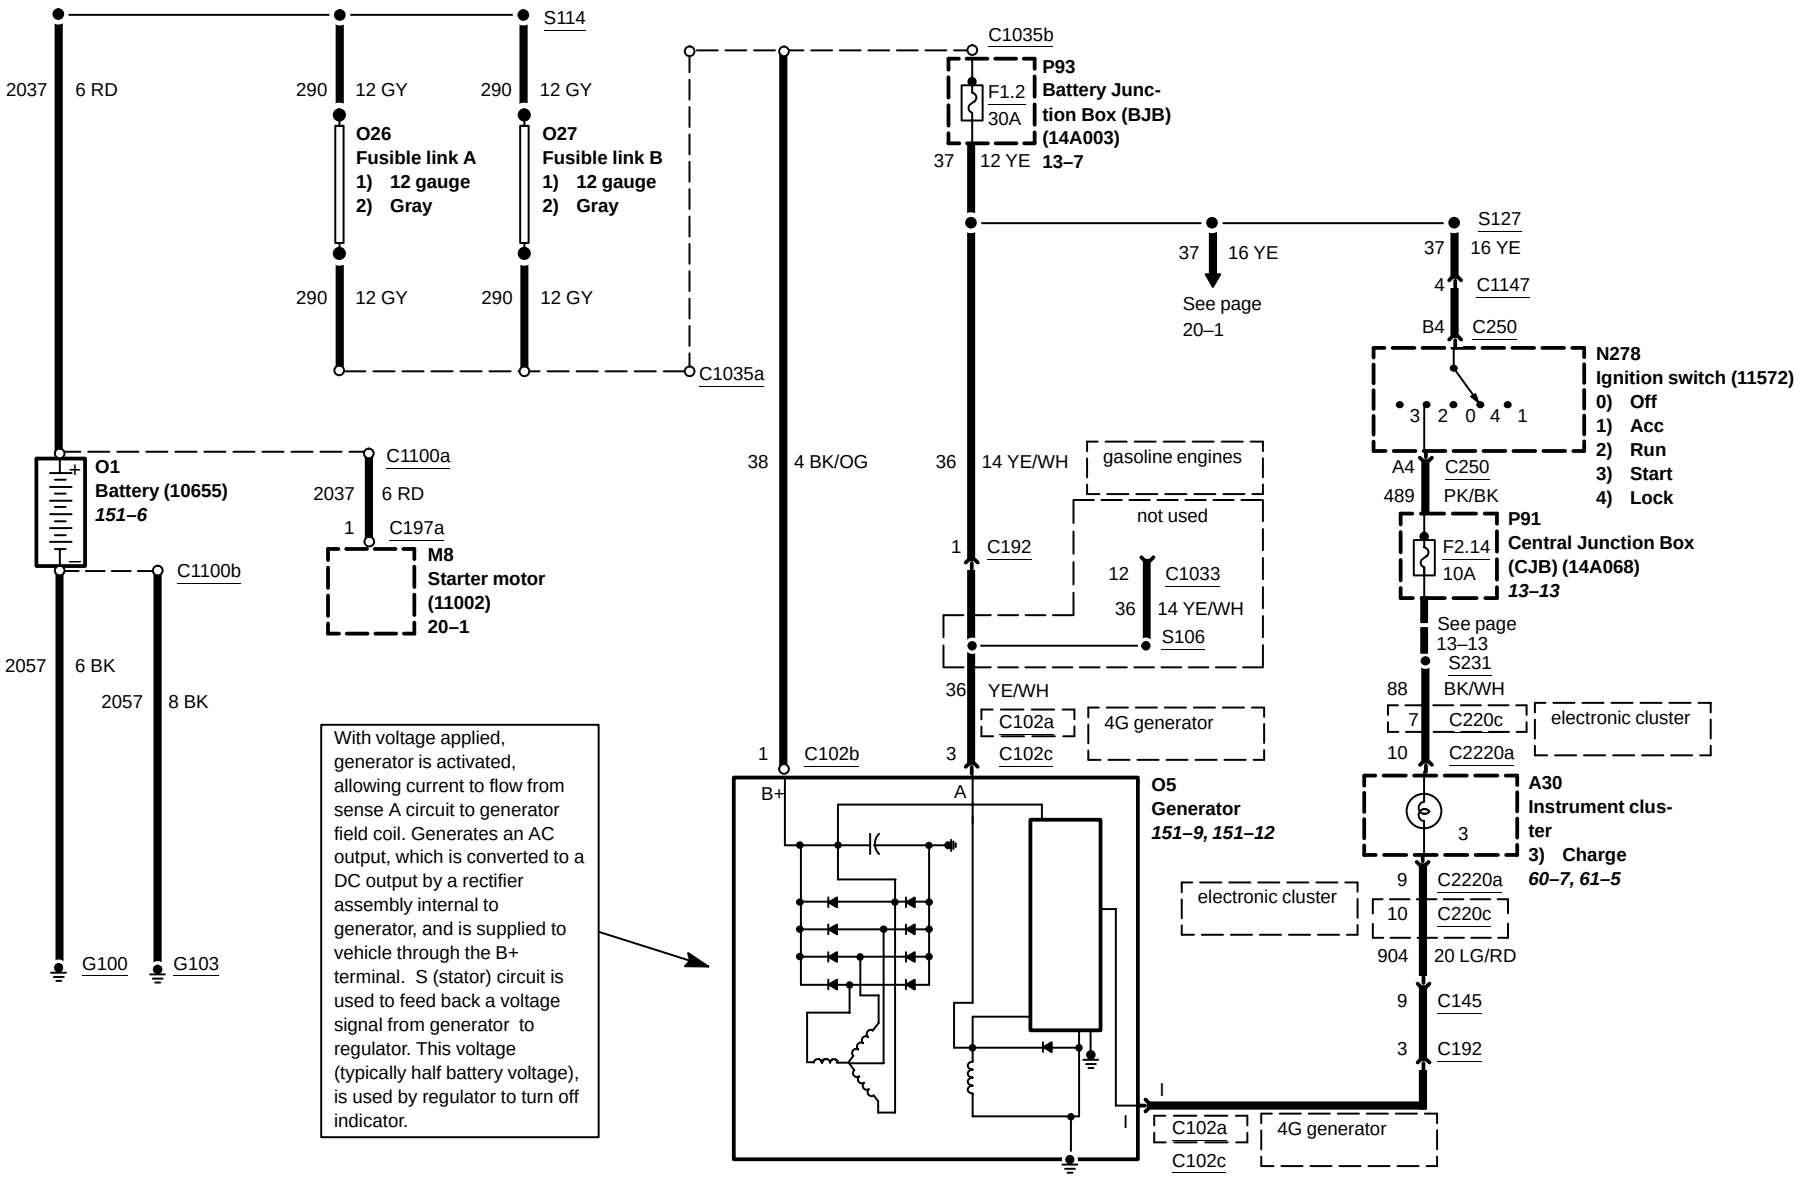
S114
2037 6 RD
290 12 GY
290 12 GY
O26
Fusible link A
1) 12 gauge
2) Gray
O27
Fusible link B
1) 12 gauge
2) Gray
290 12 GY
290 12 GY
C1035a
C1035b
P93
Battery Junction Box (BJB)
(14A003)
F1.2
30A
37 12 YE 13–7
37 16 YE
See page 20–1
S127
37 16 YE
4 C1147
B4 C250
N278
Ignition switch (11572)
0) Off
1) Acc
2) Run
3) Start
4) Lock
3 2 0 4 1
A4 C250
489 PK/BK
P91
Central Junction Box
(CJB) (14A068)
13–13
F2.14
10A
See page 13–13
S231
88 BK/WH
7 C220c
electronic cluster
10 C2220a
A30
Instrument cluster
3) Charge
60–7, 61–5
3
9 C2220a
10 C220c
904 20 LG/RD
9 C145
3 C192
O1
Battery (10655)
151–6
C1100b
2057 6 BK
2057 8 BK
G100
G103
C1100a
2037 6 RD
1 C197a
M8
Starter motor
(11002)
20–1
38 4 BK/OG
36 14 YE/WH
gasoline engines
not used
1 C192
12 C1033
36 14 YE/WH
S106
36 YE/WH
C102a
4G generator
1 C102b
3 C102c
B+
A
O5
Generator
151–9, 151–12
I
I
C102a
C102c
4G generator
electronic cluster
With voltage applied, generator is activated, allowing current to flow from sense A circuit to generator field coil. Generates an AC output, which is converted to a DC output by a rectifier assembly internal to generator, and is supplied to vehicle through the B+ terminal. S (stator) circuit is used to feed back a voltage signal from generator to regulator. This voltage (typically half battery voltage), is used by regulator to turn off indicator.