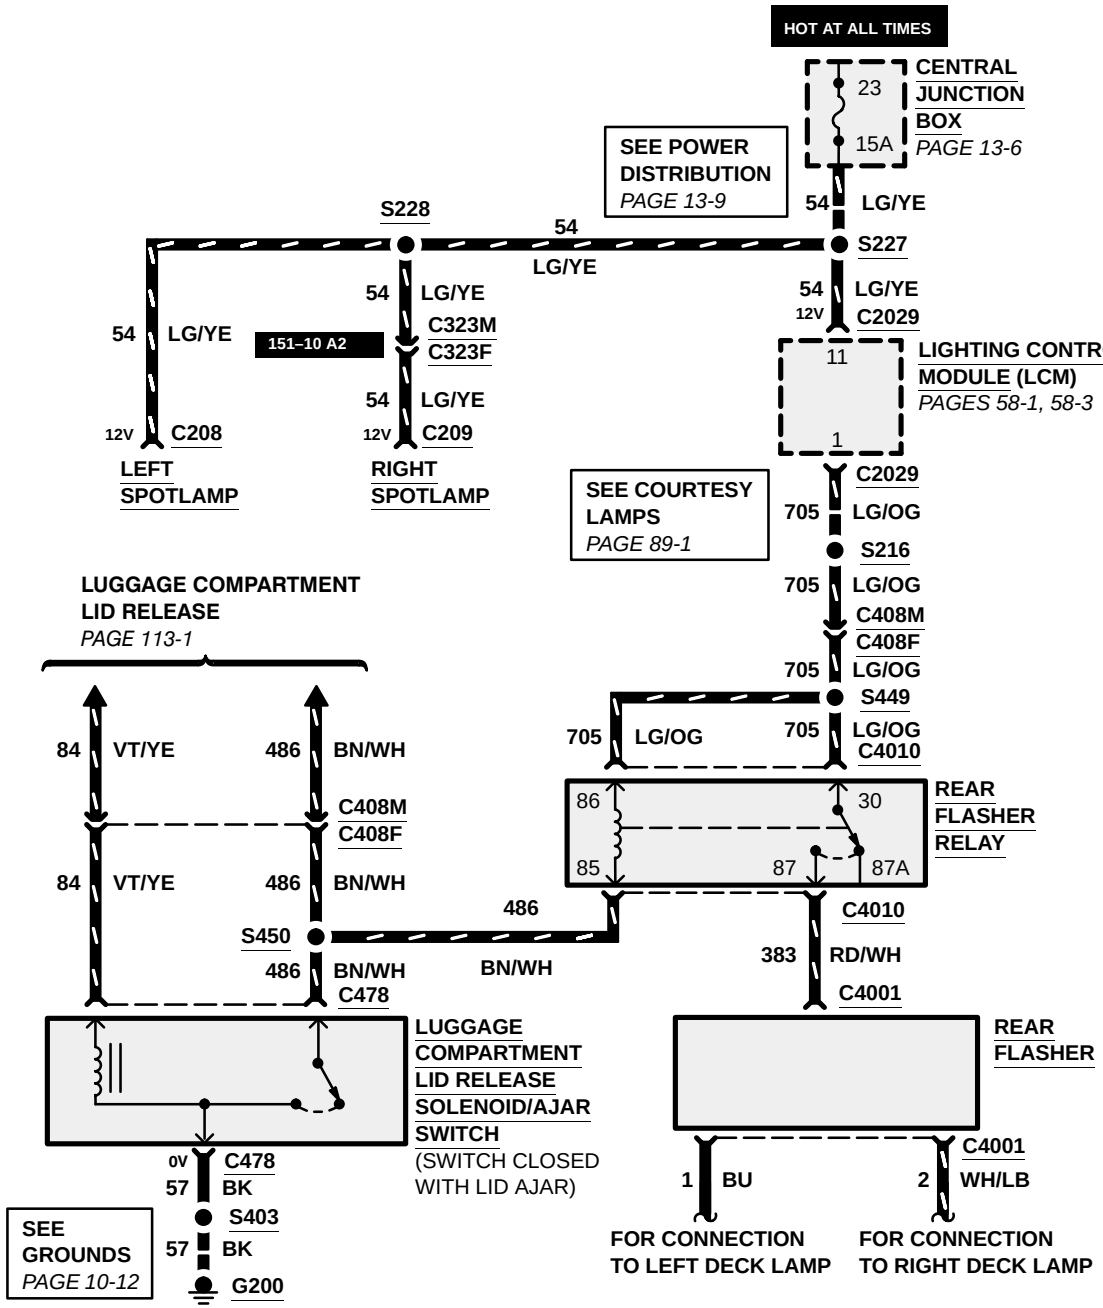
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
23
15A
PAGE 13-6
SEE POWER DISTRIBUTION
PAGE 13-9
54 LG/YE
S227
S228
54 LG/YE
54 LG/YE
151–10 A2
C323M
C323F
54 LG/YE
54 LG/YE
12V C2029
LIGHTING CONTROL MODULE (LCM)
11
PAGES 58-1, 58-3
1
54 LG/YE
12V C208
LEFT SPOTLAMP
54 LG/YE
12V C209
RIGHT SPOTLAMP
SEE COURTESY LAMPS
PAGE 89-1
C2029
705 LG/OG
S216
LUGGAGE COMPARTMENT LID RELEASE
PAGE 113-1
705 LG/OG
C408M
C408F
705 LG/OG
S449
705 LG/OG
705 LG/OG
C4010
84 VT/YE
486 BN/WH
C408M
C408F
REAR FLASHER RELAY
86
30
85
87
87A
84 VT/YE
486 BN/WH
486
C4010
S450
383 RD/WH
BN/WH
486 BN/WH
C478
C4001
LUGGAGE COMPARTMENT LID RELEASE SOLENOID/AJAR SWITCH
(SWITCH CLOSED WITH LID AJAR)
REAR FLASHER
0V C478
57 BK
S403
C4001
1 BU
2 WH/LB
SEE GROUNDS
PAGE 10-12
57 BK
G200
FOR CONNECTION TO LEFT DECK LAMP
FOR CONNECTION TO RIGHT DECK LAMP