## C2206

**14A005**

E195
Spot lamp, LH side



F01159

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 54 (LG/YE) | Voltage supplied at all times (overload protected) |

## C2208

N642
Audio/climate control switch




F05153

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | (PK/RD) | Not available |
| 2 | – | not used |
| 3 | (BK) | Not available |
| 4 | (LB/RD) | Not available |
| 5 | (YE) | Not available |

## C2212a

**10B954**

E287
Door ajar indicator

F01006

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 627 | Door ajar indicator, control |

## C2212b

**10B954**

E287
Door ajar indicator

F01006

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 54 (LG/YE) | Voltage supplied at all times (overload protected) |

## C2213

**10B954**

N648
Taxi roof lamp switch

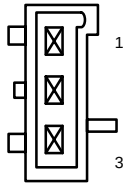


F03144

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 54 (LG/YE) | Voltage supplied at all times (overload protected) |
| 2 | 42 (RD/WH) | switched power |
| 3 | 57 (BK) | Ground |