C2131b (BK)

14A005

Air suspension module (3C142)

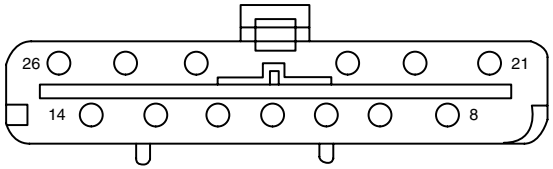

F20051

Pin	Circuit	Circuit function
8	429 (VT/LG)	Air suspension height sensor (3C131), rear, feed
9	427 (PK/BK)	Air suspension height sensor (3C131), rear, signal
10	432 (BK/PK)	Air suspension height sensor (3C131), rear, return
11	–	not used
12	–	not used
13	1114 (BN/BK)	Shock absorber solenoid valve, left rear (5A891), control
14	1115 (TN/WH)	Shock absorber solenoid valve, right rear (5A891), control
21	413 (LG)	Power steering valve solenoid (3783), –
22	412 (OG/LB)	Power steering valve solenoid (3783), +
23	–	not used
24	–	not used
25	418 (DG/YE)	Air suspension service switch (5K761), signal
26	1906 (VT)	UBP Bus

C2132 (WH)

14401

Auto park brake release solenoid

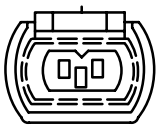

F02116

Pin	Circuit	Circuit function
1	1891 (OG/RD)	Electronic park brake reset relay, output
2	1892 (OG/BK)	Electronic park brake release relay, output

C2135 (BK)

14401

Overdrive cancel switch (7G550)

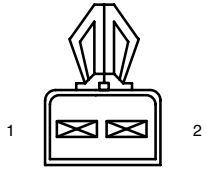

F02045

Pin	Circuit	Circuit function
1	224 (TN/WH)	PCM, to transmission overdrive cancel switch
2	1003 (GY/YE)	Voltage supplied in Start and Run (overload protected)

C2142 (GY)

14401/14A348

Trailer electronic brake control connector

* with IVD

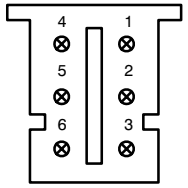

F06089

Pin	Circuit	Circuit function
1	50 (RD)	Voltage supplied at all times (overload protected)
2	511 (LG)	Brake pedal position switch (13480), to stoplamps
	*1791 (RD)	output to Trailer electronic brake control module
3	43 (DB)	Electric trailer brakes
4	–	not used
5	14 (BN)	Power, Exterior lamps
6	206 (WH)	Trailer tow connector (15A416), Ground