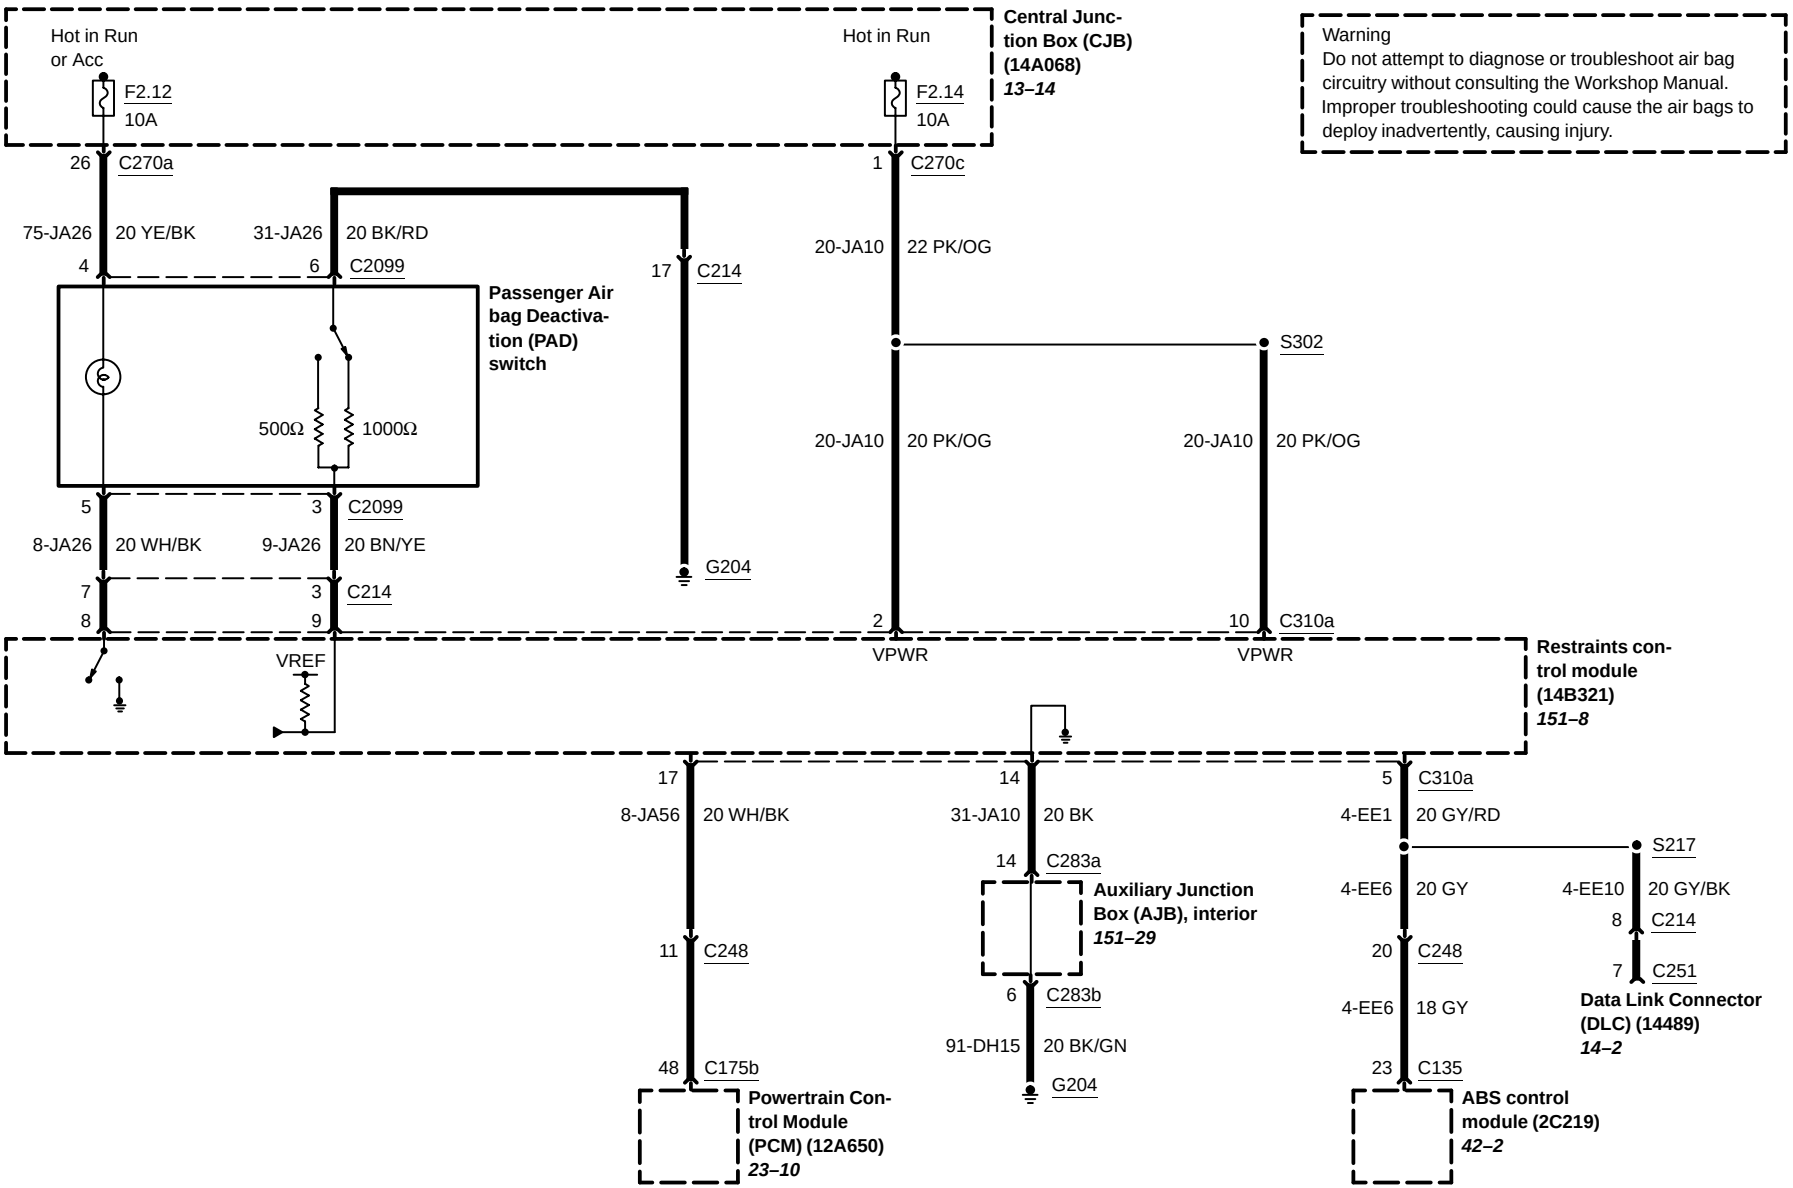
Hot in Run or Acc
F2.12 10A
Hot in Run
F2.14 10A
Central Junction Box (CJB) (14A068) 13–14
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
26 C270a
1 C270c
75-JA26 20 YE/BK
31-JA26 20 BK/RD
4
6 C2099
17 C214
20-JA10 22 PK/OG
Passenger Air bag Deactivation (PAD) switch
S302
500Ω
1000Ω
20-JA10 20 PK/OG
20-JA10 20 PK/OG
5
3 C2099
8-JA26 20 WH/BK
9-JA26 20 BN/YE
G204
7
8
3 C214
9
2
10 C310a
VREF
VPWR
VPWR
Restraints control module (14B321) 151–8
17
8-JA56 20 WH/BK
11 C248
48 C175b
Powertrain Control Module (PCM) (12A650) 23–10
14
31-JA10 20 BK
14 C283a
Auxiliary Junction Box (AJB), interior 151–29
6 C283b
91-DH15 20 BK/GN
G204
5 C310a
4-EE1 20 GY/RD
S217
4-EE6 20 GY
4-EE10 20 GY/BK
8 C214
20 C248
7 C251
4-EE6 18 GY
Data Link Connector (DLC) (14489) 14–2
23 C135
ABS control module (2C219) 42–2