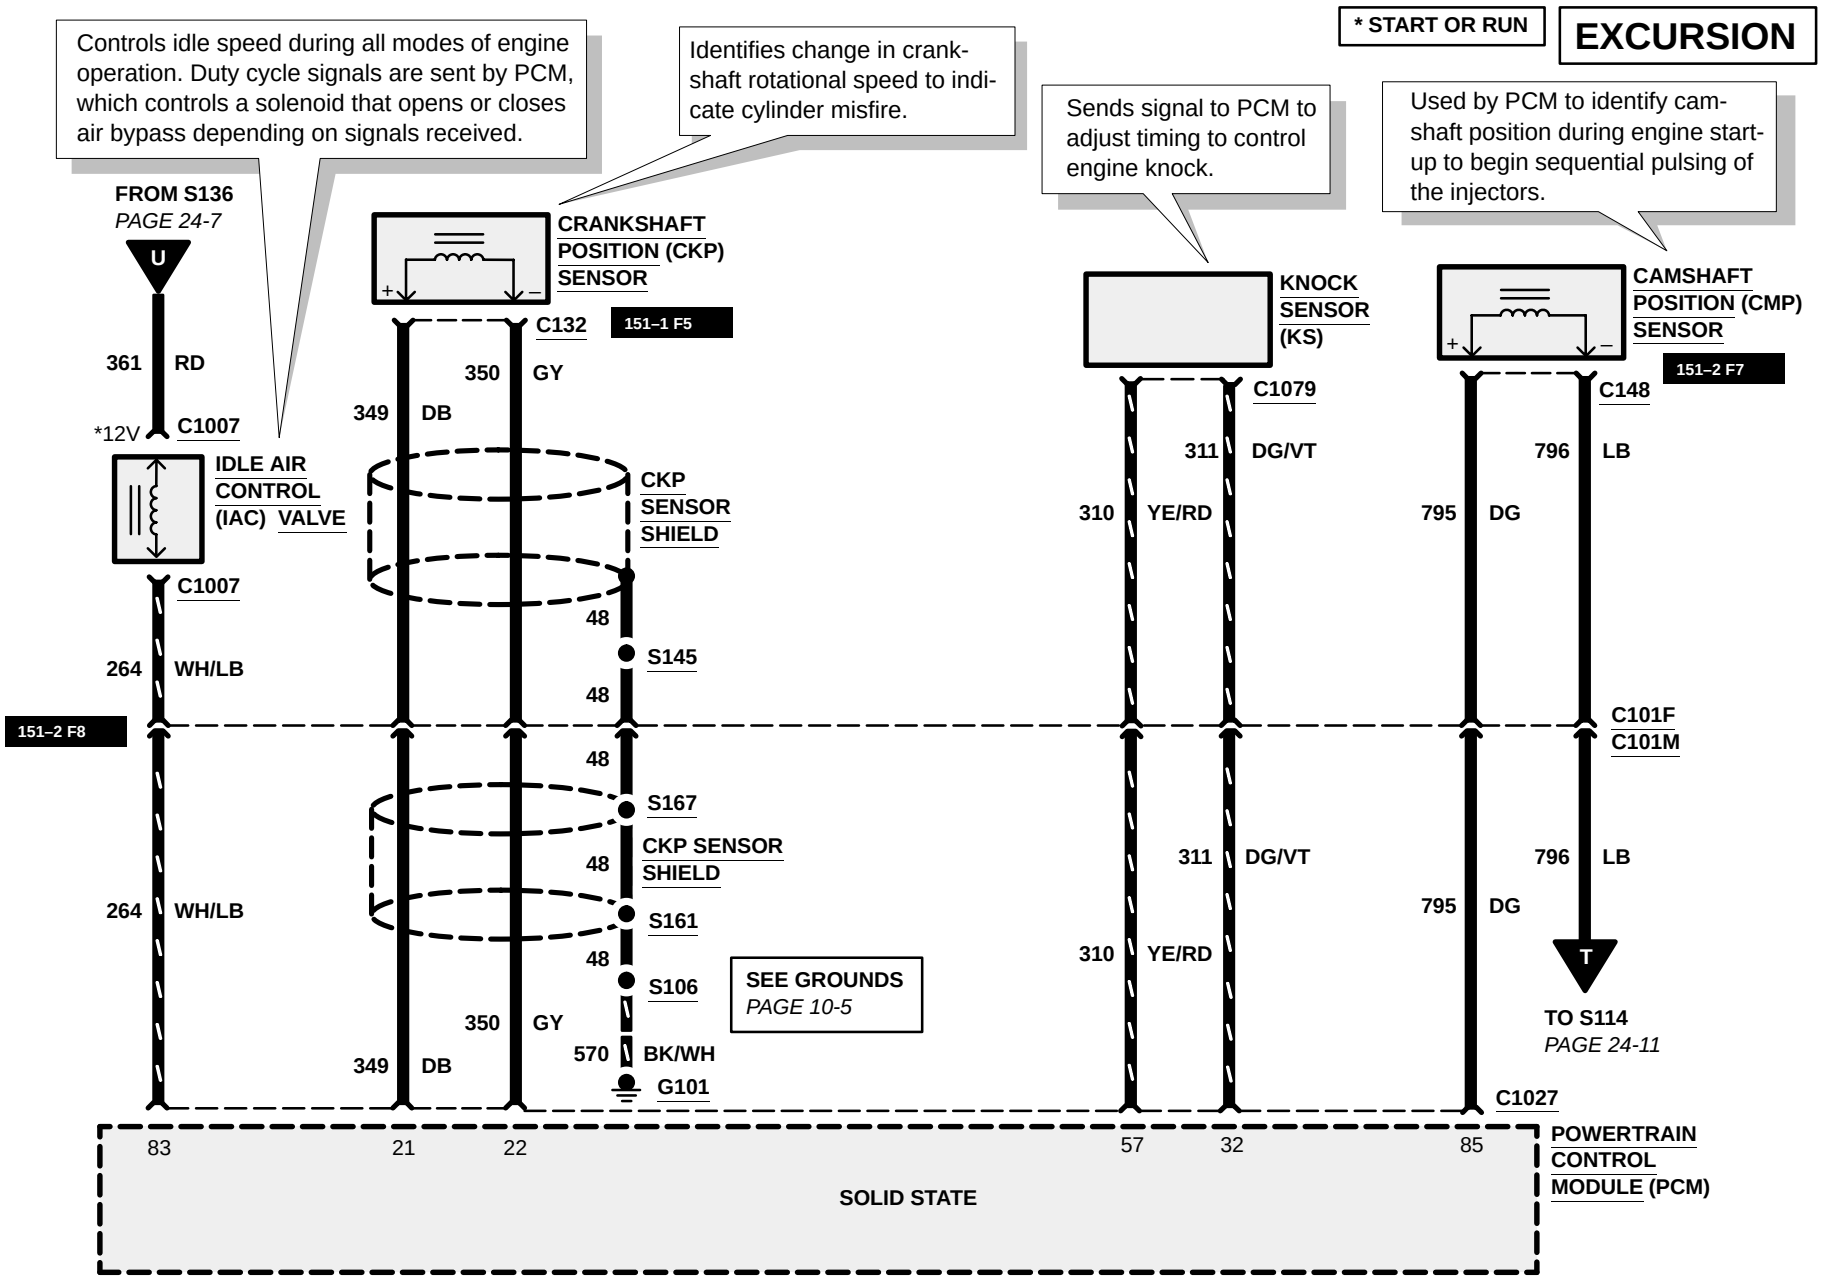
* START OR RUN
EXCURSION
Controls idle speed during all modes of engine operation. Duty cycle signals are sent by PCM, which controls a solenoid that opens or closes air bypass depending on signals received.
Identifies change in crankshaft rotational speed to indicate cylinder misfire.
Sends signal to PCM to adjust timing to control engine knock.
Used by PCM to identify camshaft position during engine start-up to begin sequential pulsing of the injectors.
FROM S136
PAGE 24-7
U
361 RD
*12V
C1007
IDLE AIR CONTROL (IAC) VALVE
C1007
264 WH/LB
151–2 F8
CRANKSHAFT POSITION (CKP) SENSOR
C132
151–1 F5
350 GY
349 DB
CKP SENSOR SHIELD
48
S145
48
48
S167
CKP SENSOR SHIELD
48
S161
48
S106
350 GY
570 BK/WH
349 DB
G101
SEE GROUNDS
PAGE 10-5
KNOCK SENSOR (KS)
C1079
311 DG/VT
310 YE/RD
311 DG/VT
310 YE/RD
CAMSHAFT POSITION (CMP) SENSOR
151–2 F7
C148
796 LB
795 DG
C101F
C101M
796 LB
795 DG
T
TO S114
PAGE 24-11
C1027
264 WH/LB
83
21
22
57
32
85
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)