## C258

**14A005**

N448
Auto clutch mode
select switch

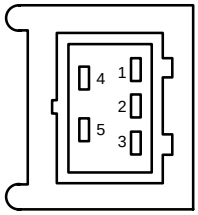


F04177

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 8-TC18 (WH) | Sensor signal |
| 2 | – | not used |
| 3 | 9S-TC18 (BN) | Sensor signal return (reference/ ground), Switched |
| 4 | – | not used |
| 5 | – | not used |

## C260

**14401**

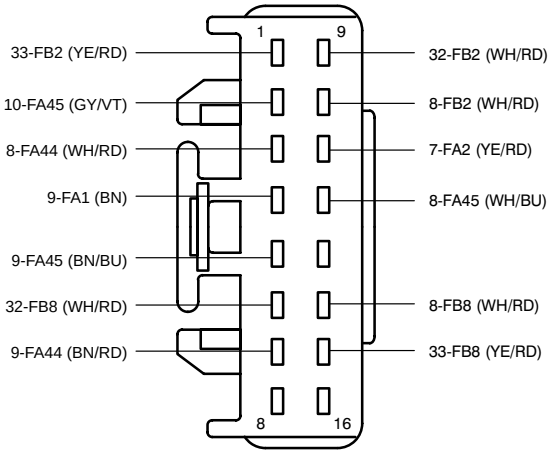


F16029

**19D887**

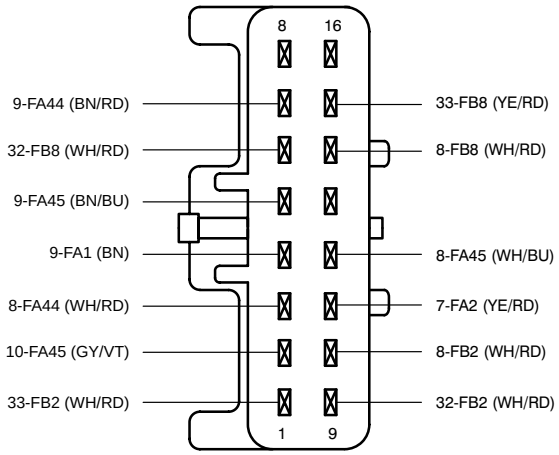


F16030