C1061 (BN)

12B637

B227
Engine Coolant Temperature (ECT) sender

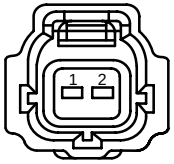

F02091

Pin	Circuit	Circuit function
1	39 (RD/WH)	Engine Coolant Temperature (ECT) sender, input
2	570 (BK/WH)	Ground

C1066

12B637

Y133
Idle air control valve (IAC) (9F715)

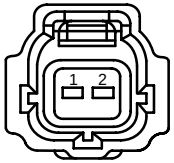

F02091

Pin	Circuit	Circuit function
1	361 (RD)	Voltage supplied in Start and Run (overload protected)
2	264 (WH/LB)	Idle air control valve (IAC) (9F715), control

C1064

12B637

B10
Engine Coolant Temperature (ECT) sensor (12A648)

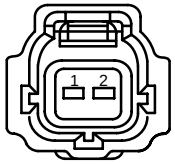

F02091

Pin	Circuit	Circuit function
1	354 (LG/RD)	Engine Coolant Temperature (ECT) sensor (12A648), input
2	359 (GY/RD)	signal, return

C1068 (GY)

12B637

B257
Differential pressure feedback EGR (DPFE) sensor (9J460)

3.0L

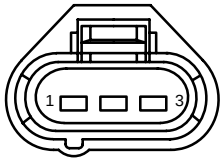

F03071

4.0L

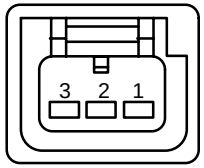

F03201

Pin	Circuit	Circuit function
1	351 (BN/WH)	Reference, voltage
2	359 (GY/RD)	signal, return
3	352 (BN/LG)	Differential Pressure Feedback EGR (DPFE) sensor, input

C1065

12B637

T1
Ignition coil (12029)

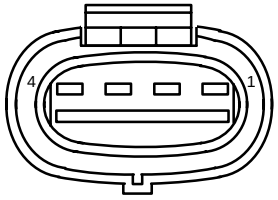

F04215

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	96 (TN/OG)	Ignition coil (12029)
3	97 (TN/LG)	Ignition coil (12029)
4	95 (TN/WH)	Ignition coil (12029)

C1072

12B637

Y205
EGR vacuum regulator solenoid (9J459)

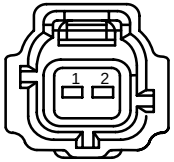

F02101

Pin	Circuit	Circuit function
1	34 (LB/OG)	Voltage supplied in Start and Run (overload protected)
2	360 (BN/PK)	EGR Vacuum Regulator (EVR), control