Duratec

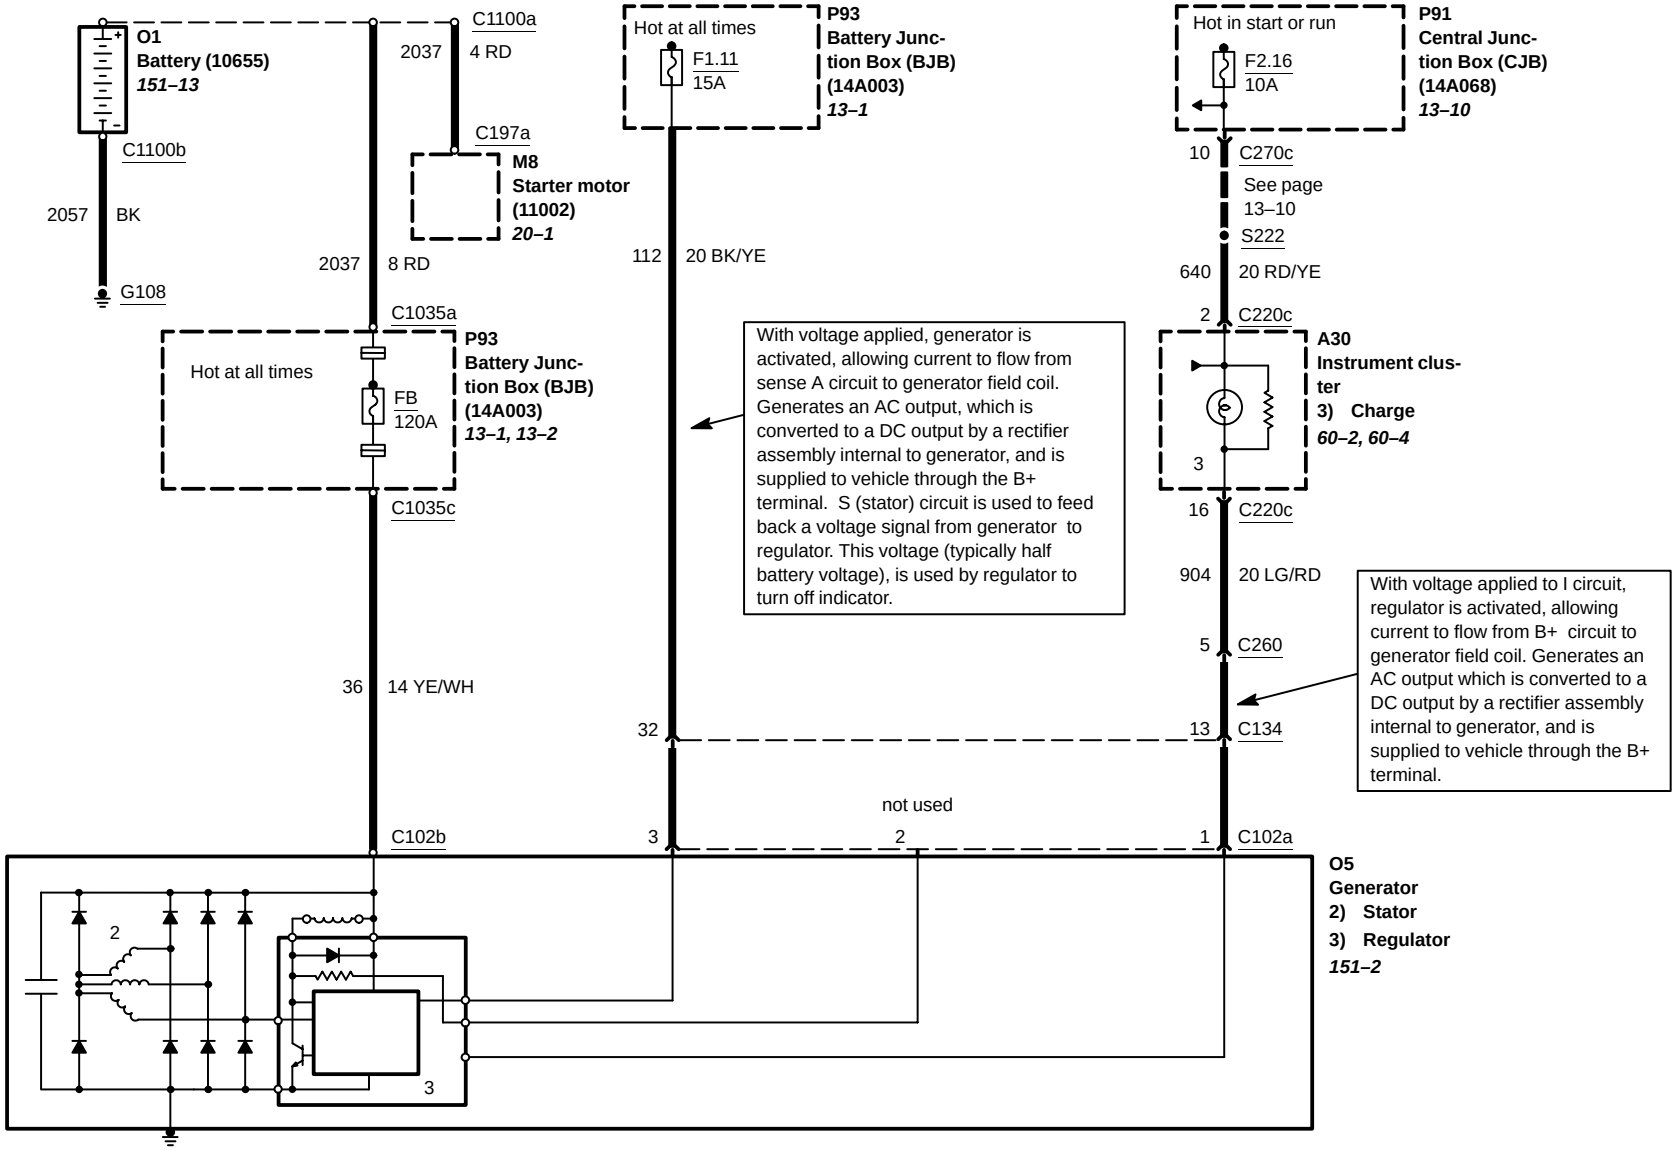
O1
Battery (10655)
151–13
C1100a
2037
4 RD
C1100b
2057
BK
G108
C197a
M8
Starter motor
(11002)
20–1
2037
8 RD
C1035a
Hot at all times
FB
120A
P93
Battery Junction Box (BJB)
(14A003)
13–1, 13–2
C1035c
36
14 YE/WH
Hot at all times
F1.11
15A
P93
Battery Junction Box (BJB)
(14A003)
13–1
112
20 BK/YE
With voltage applied, generator is activated, allowing current to flow from sense A circuit to generator field coil. Generates an AC output, which is converted to a DC output by a rectifier assembly internal to generator, and is supplied to vehicle through the B+ terminal. S (stator) circuit is used to feed back a voltage signal from generator to regulator. This voltage (typically half battery voltage), is used by regulator to turn off indicator.
32
3
not used
2
C102b
C102a
Hot in start or run
F2.16
10A
P91
Central Junction Box (CJB)
(14A068)
13–10
10
C270c
See page 13–10
S222
640
20 RD/YE
2
C220c
A30
Instrument cluster
3) Charge
60–2, 60–4
3
16
C220c
904
20 LG/RD
5
C260
With voltage applied to I circuit, regulator is activated, allowing current to flow from B+ circuit to generator field coil. Generates an AC output which is converted to a DC output by a rectifier assembly internal to generator, and is supplied to vehicle through the B+ terminal.
13
C134
O5
Generator
2) Stator
3) Regulator
151–2
2
3