C304

14A005

B118
Side air bag sensor,
right (14B345)

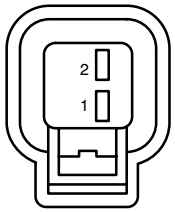

F02069

Pin	Circuit	Circuit Function
1	9-JA40 (BN/WH)	Sensor signal return (reference/ground)
2	7-JA40 (YE/VT)	Voltage D.C. supplied at all times (sensor)

C305

14A005

B119
Side air bag sensor,
left (14B345)

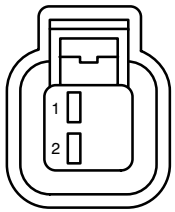

F02069

Pin	Circuit	Circuit Function
1	9-JA39 (BN)	Sensor signal return (reference/ground)
2	7-JA39 (YE)	Voltage D.C. supplied at all times (sensor)

C306

14A005

N63
Parking brake
switch (15A851)


F01012

Pin	Circuit	Circuit Function
1	31S–RP9 (BK/GN)	Voltage, ignition switch in Start or Run (not overload protected), Switched

C307

14A005

N418
Transmission shift
selector

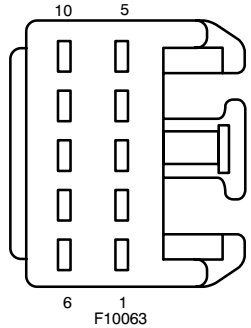

F10063

Pin	Circuit	Circuit Function
1	64S-LK21 (BU/BK)	Variable D.C. voltage (not overload protected), Switched
2	31-LK21 (BK)	Ground
3	15-TA34 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
4	31-TA68 (BK/RD)	Ground
5	8-TA68 (WH/BK)	Sensor signal
6	15-TA21 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
7	8-TA21 (WH/GN)	Sensor signal
8	8-TA34 (WH)	Sensor signal
9	31-TA67 (BK/WH)	Ground
10	8-TA67 (WH/VT)	Sensor signal