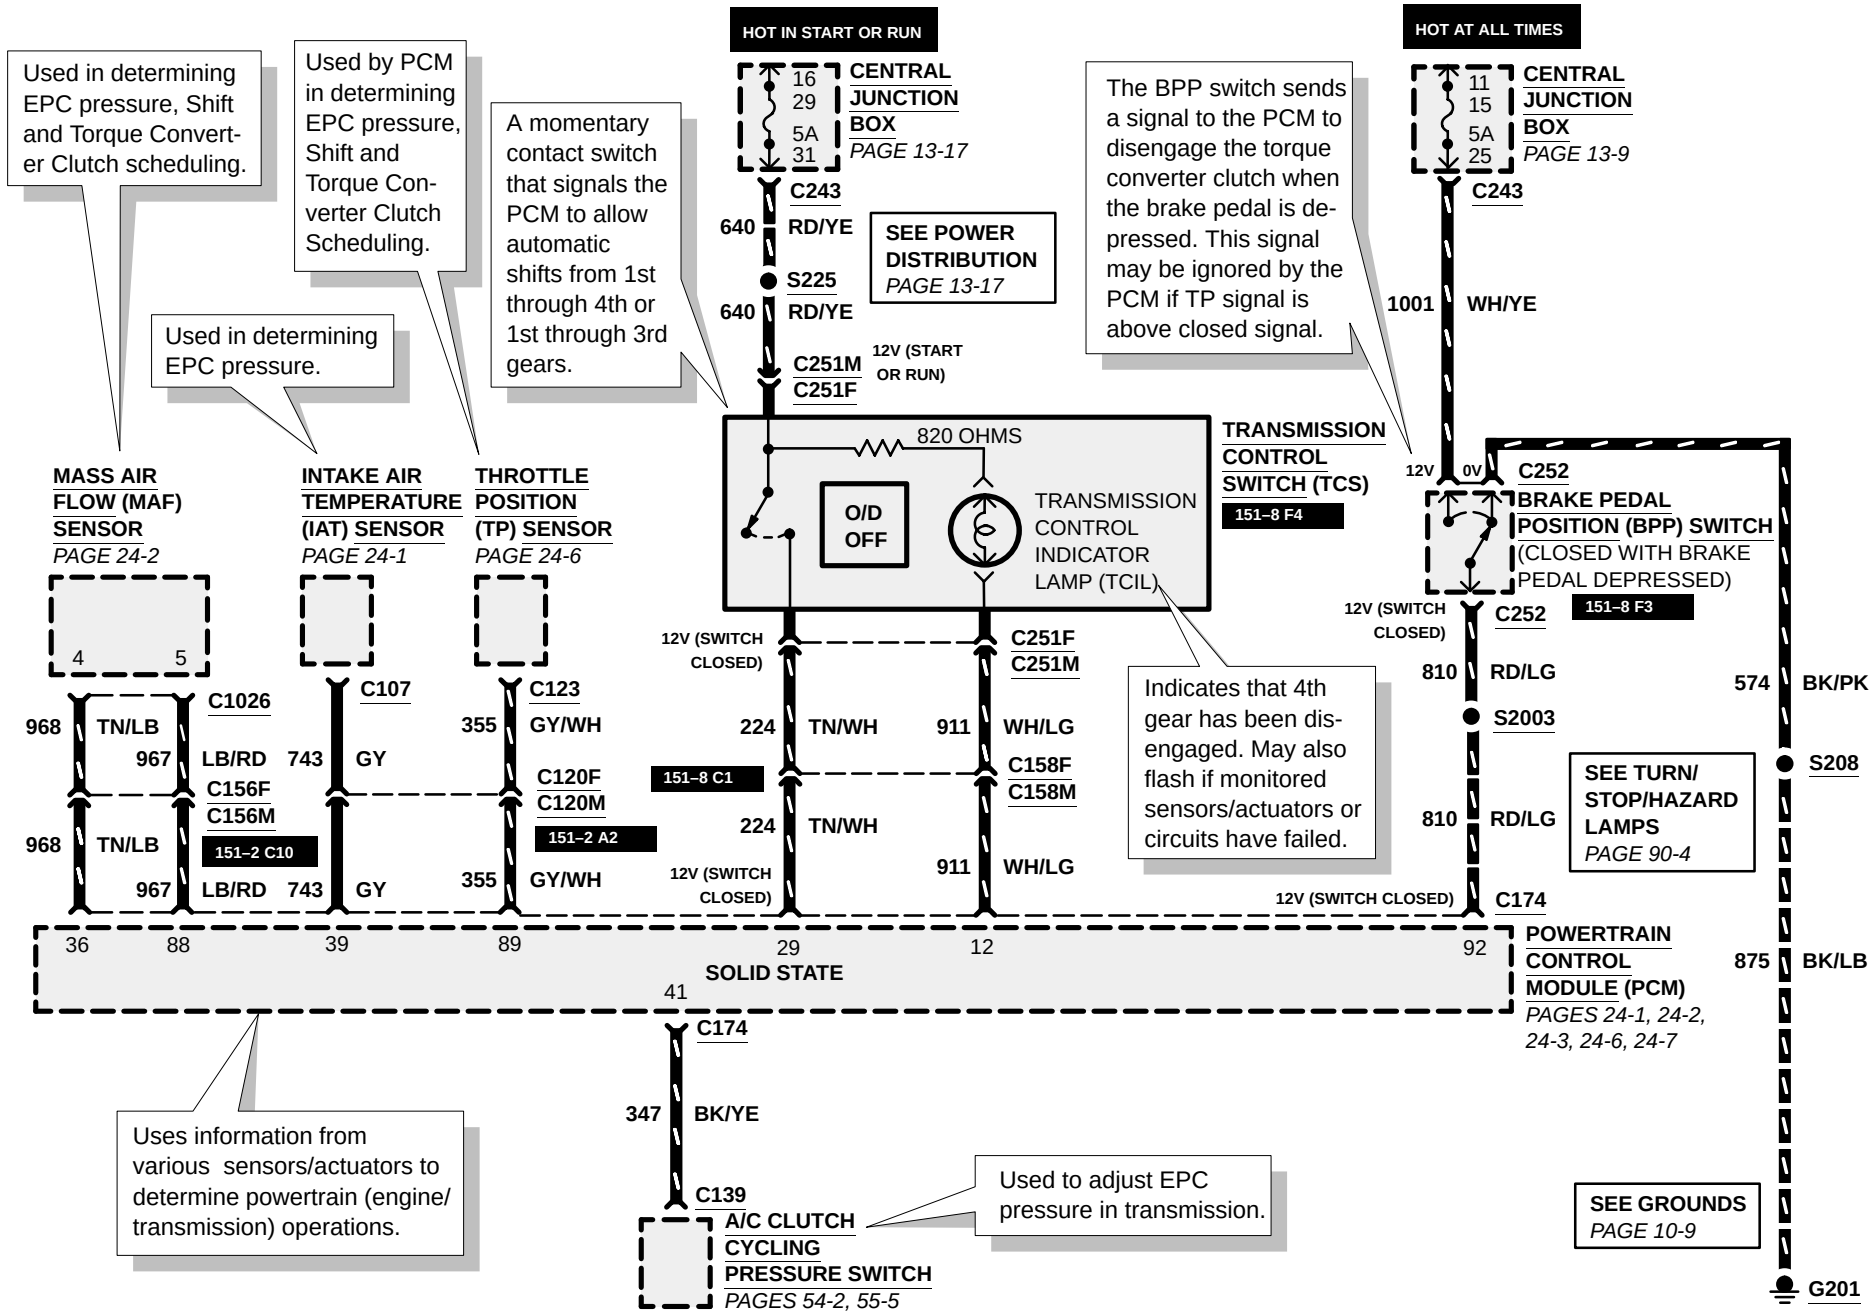
HOT IN START OR RUN
HOT AT ALL TIMES
Used in determining EPC pressure, Shift and Torque Converter Clutch scheduling.
Used by PCM in determining EPC pressure, Shift and Torque Converter Clutch Scheduling.
A momentary contact switch that signals the PCM to allow automatic shifts from 1st through 4th or 1st through 3rd gears.
Used in determining EPC pressure.
The BPP switch sends a signal to the PCM to disengage the torque converter clutch when the brake pedal is depressed. This signal may be ignored by the PCM if TP signal is above closed signal.
CENTRAL JUNCTION BOX
PAGE 13-17
PAGE 13-9
16
29
5A
31
11
15
5A
25
C243
640 RD/YE
SEE POWER DISTRIBUTION
PAGE 13-17
S225
640 RD/YE
1001 WH/YE
C251M
C251F
12V (START OR RUN)
820 OHMS
O/D OFF
TRANSMISSION CONTROL INDICATOR LAMP (TCIL)
TRANSMISSION CONTROL SWITCH (TCS)
151–8 F4
12V
0V
C252
BRAKE PEDAL POSITION (BPP) SWITCH
(CLOSED WITH BRAKE PEDAL DEPRESSED)
151–8 F3
MASS AIR FLOW (MAF) SENSOR
PAGE 24-2
INTAKE AIR TEMPERATURE (IAT) SENSOR
PAGE 24-1
THROTTLE POSITION (TP) SENSOR
PAGE 24-6
4
5
C1026
968 TN/LB
967 LB/RD
C156F
C156M
151–2 C10
968 TN/LB
967 LB/RD
C107
743 GY
743 GY
C123
355 GY/WH
C120F
C120M
151–2 A2
355 GY/WH
12V (SWITCH CLOSED)
224 TN/WH
151–8 C1
224 TN/WH
12V (SWITCH CLOSED)
C251F
C251M
911 WH/LG
C158F
C158M
911 WH/LG
Indicates that 4th gear has been disengaged. May also flash if monitored sensors/actuators or circuits have failed.
12V (SWITCH CLOSED)
C252
810 RD/LG
S2003
810 RD/LG
SEE TURN/ STOP/HAZARD LAMPS
PAGE 90-4
574 BK/PK
S208
12V (SWITCH CLOSED)
C174
36
88
39
89
29
12
92
SOLID STATE
41
POWERTRAIN CONTROL MODULE (PCM)
PAGES 24-1, 24-2, 24-3, 24-6, 24-7
875 BK/LB
Uses information from various sensors/actuators to determine powertrain (engine/ transmission) operations.
C174
347 BK/YE
C139
A/C CLUTCH CYCLING PRESSURE SWITCH
PAGES 54-2, 55-5
Used to adjust EPC pressure in transmission.
SEE GROUNDS
PAGE 10-9
G201