* 3.8L

C128 (BK)

***12B566**
12A581

Mass Air Flow (MAF) sensor (12B579)

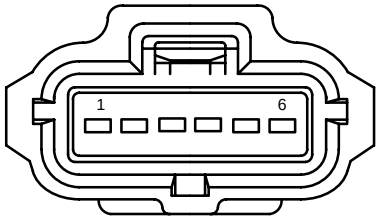

F06077

Pin	Circuit	Circuit function
1	359 (GY/RD)	signal, return
2	361 (RD)	Voltage supplied in Start and Run (overload protected)
3	969 (BK)	Mass Air Flow (MAF) sensor (12B579), Ground
4	968 (TN/LB)	Mass Air Flow (MAF) sensor (12B579), signal, return
5	967 (LB/RD)	Mass Air Flow (MAF) sensor (12B579), input
6	743 (GY)	Intake Air Temperature (IAT) sensor (12A697), input

C129 (BK)

12A581

Intake Air Temperature (IAT) sensor (12A697)

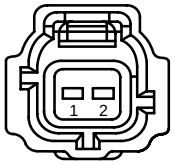

F02101

Pin	Circuit	Circuit function
1	359 (GY/RD)	signal, return
2	743 (GY)	Intake Air Temperature (IAT) sensor (12A697), input

C130 (BK)

12A581

A/C clutch cycling pressure switch (19D594)

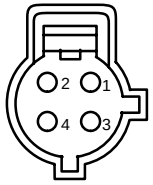

F04195

Pin	Circuit	Circuit function
1	420 (DB/YE)	A/C clutch cycling pressure switch (19D594), output
2	–	not used
3	–	not used
4	348 (VT)	A/C demand signal